

User's Guide

# HP Low Speed Internet Advisor

---

# User's Guide

---

# HP Low Speed Internet Advisor

---

## Notice

© Copyright Hewlett-Packard Company 1995

The information contained in this document is subject to change without notice.

**Hewlett-Packard makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.** Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Hewlett-Packard assumes no responsibility for the use or reliability of its software on equipment that is not furnished by Hewlett-Packard.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company.

Hewlett-Packard Company  
Colorado Communications Operation  
5070 Centennial Boulevard  
Colorado Springs, Colorado 80919-2497

---

## Safety Information

Before you use this instrument, be sure to pay special attention to the "Safety" and "Warning" sections in this Manual. Failure to comply with the precautions or with specific warnings in this book violates safety standards of design, manufacture, and intended use of this instrument. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements.

**Electric Shock Hazard.** Do not remove the system covers. To avoid electric shock, use only the supplied power cords and connect only to properly grounded (3-pin) wall outlets.

**Explosion Hazard.** Do not operate in the presence of flammable gases.

**Fire Hazard.** For continued protection against fire hazard replace only with fuse of same type and rating.

**Hazardous Material.** Should the LCD be damaged the liquid crystal material can leak. Avoid all contact with this material, especially swallowing. Use soap and water to thoroughly wash all skin and clothing contaminated with the liquid crystal material.

**Cleaning.** To clean the instrument, use a damp cloth moistened with a mild solution of soap and water. *Do not* use harsh chemicals. *Do not* let water get into the instrument.

**Product Damage.** Do not use this product when:

- the product shows visible damage,
- fails to perform,
- has been stored in unfavorable conditions,
- or has been subject to severe transport stresses.

Make the product inoperative and secure it against any unintended operation. Contact your nearest Hewlett-Packard Sales office for assistance.



---

## Warning Symbols Used in This Book:



Instruction book symbol: the product will be marked with this symbol when it is necessary for the user to refer to the instruction book in order to protect against damage.



Indicates potential for electrical shock.

---

### **WARNING**

---

An operating procedure, practice, etc. which, if not correctly followed could result in personal injury or loss of life.

---

### **CAUTION**

---

An operating procedure, practice, etc., which, if not strictly observed, could result in damage to, or destruction of, equipment or software.

---

## Conventions Used in this Book

---

### NOTE

---

An operating procedure, practice, or information of importance, separated from normal text.

#### Boxed Information

Explanatory comments or supplementary instructions are presented in boxed format.

---

## Examples

Example programs or text is printed in the following format:

```
Block 1:  
When DTE abc  
    then goto Block 2  
When DTE bc  
    then goto Block 3
```

Throughout this manual, softkey labels are shown in parenthesis (softkey able) as they appear on the screen. Hard keys on the keyboard, including the function keys F1 through F12, are represented like **F1**.

In some cases, you must press two keys simultaneously. This is represented like **CTRL + Q**.

---

## Operating Restrictions

The following warnings and operating information are shown in French followed by the English translation.

---

### MISE EN GARDE

Cet appareil répond aux normes de la «Classe de sécurité I» et est muni d'un fil de mise à la terre pour votre protection.

---

### WARNING

This product is a Safety Class I instrument with a protective earth terminal.

---

### MISE EN GARDE

Pour prévenir les risques de choc électrique, la broche de mise à la terre du cordon d'alimentation ne doit pas être désactivée.

---

### WARNING

For protection from electric shock hazard, power cord ground must not be defeated.

### Restrictions d'utilisation

L'utilisateur se doit d'observer les mesures de précaution énumérées ci-dessous pour toutes les phases d'utilisation, de service et de réparation de cet appareil. Le fait de ne pas s'y conformer équivaut à ne pas respecter les mises en gardes spécifiques contenues dans ce manuel et constitue une violation des normes de sécurité relatives à la conception, la fabrication et l'utilisation prévue de cet appareil. La société Hewlett-Packard n'assume aucune responsabilité envers un client qui manquerait de se conformer à ces exigences.

### Mise à la terre

Afin de minimiser les risques de choc électrique, le châssis et le cabinet de l'appareil doivent être mis à la terre. L'appareil est équipé d'un cordon d'alimentation muni d'une fiche homologuée à trois lames, compatible c.a. La prise murale et la prise femelle de la rallonge électrique doivent respecter les normes de sécurité de la «Commission électrotechnique internationale» (IEC).

### Operating Restrictions

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions with specific warnings in this manual violate safety standards of design, manufacture, and intended use of this instrument.

### Grounding

To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The instrument is equipped with a three-conductor AC power cable compatible with an approved three-contact electrical outlet. The power jack and mating plug of the power cord must meet International Electrotechnical Commission (IEC) safety standards.

### **Environnement**

Ne faites pas fonctionner cet appareil en présence de gaz inflammables ou de vapeurs dangereuses. L'utilisation de n'importe quel appareil électrique dans ces conditions constitue un risque élevé pour votre sécurité.

### **Service et ajustement**

Des «tensions dangereuses» résident dans cet appareil. Par conséquent, le service et l'ajustement doivent être effectués uniquement par une personne qualifiée.

Ne remplacez pas de composantes lorsque le cordon d'alimentation est sous tension. Il pourrait y avoir présence de «tensions dangereuses» même lorsque l'appareil est déconnecté.

Ne faites pas de service interne ou d'ajustement sauf en présence d'une autre personne, capable de prodiguer les premiers soins et de pratiquer la réanimation.

### **Matière dangereuse**

Si l'affichage LCD est endommagé, la matière constituant les cristaux liquides peut se répandre. Éviter tout contact avec cette matière, et en particulier ne pas l'avaler. Utiliser de l'eau et du savon pour nettoyer soigneusement la peau et les vêtements qui auraient été contaminés par la matière constituant les cristaux liquides.

### **Service non autorisé**

L'installation de pièces étrangères, ou toute modification apportée à l'appareil sans le consentement de Hewlett-Packard est formellement interdit. Le fait de procéder à de tels modifications sans autorisation pourrait entraîner l'annulation de la garantie de l'appareil ou de tout contrat de service.

Pour un service et des réparations autorisées, retournez l'appareil à un point de vente et service Hewlett-Packard.

### **Environment**

Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

### **Service and Adjustment**

Dangerous voltages exist within this instrument. Service and adjustment of this instrument is to be performed only by trained service personnel.

Do not replace components with the power cable connected. Dangerous voltages may be present even when the power cable is disconnected.

Do not perform internal servicing or adjustment unless another person, capable of rendering first aid and resuscitation is present.

### **Hazardous Material**

Should the LCD be damaged the liquid crystal material can leak. Avoid all contact with this material, especially swallowing. Use soap and water to thoroughly wash all skin and clothing contaminated with the liquid crystal material.

### **Unauthorized Service**

The installation of substitute parts or the installation of any instrument modification not authorized by Hewlett-Packard is specifically forbidden. The performance of such unauthorized service can negate the instrument warranty or any maintenance agreements.

Return the instrument to a Hewlett-Packard Sales and Service Office for authorized service and repair.

---

## About this Manual. . .

This manual is the *User's Guide* for the HP Low Speed Internet Advisor.

- **Chapter 1, Introduction** explains what the Low Speed Internet Advisor is, the different ways it can be ordered, and its features.
- **Chapter 2, Startup and Installation** tells you how to connect the Low Speed Internet Advisor to your network, and what you see when you turn it on.
- **Chapter 3, The User Interface** tells you how to use the operating system of the Low Speed Internet Advisor.
- **Chapter 4, Testing with the Low Speed Internet Advisor** tells you how to start using the Advisor. It has information on setup, monitoring, simulating, and storing data.
- **Chapter 5, Evaluating Data** explains how to analyze captured data. This chapter explains how to use the Examine Data menu to evaluate data.
- **Chapter 6, Printing** explains how to print your test results, menus, and measurements to a graphics or ASCII printer.
- **Chapter 7, Remote/Slave Operation** tells you how to configure the Low Speed Internet Advisor as a slave device and what remote options are available.
- **Chapter 8, BERT Measurements** explains how to make BERT measurements with the Advisor and how to interpret the results.
- **Chapter 9, Capturing High Speed Data** explains how to use the high speed capture application for monitoring and capturing data at speeds above 64 Kbps.
- **Chapter 10, Terminal Emulators** explains how to load and use Procom and the VT100 Terminal Emulators.
- **Chapter 11, Programming Reference** gives you information on programming commands, where they appear, and how to implement them. This chapter also contains examples with tips to expand your programming needs.

In addition to the regular chapters listed above, there are appendixes and a glossary of terms used in this manual.

---

## Printing History

New editions are complete revisions of this book. Update packages may contain new or additional material and be released between editions. See the date of the current edition on the back cover of this book.

November 1995

First Edition . . . . . Manual Part No. 5964-0567

---

## Additional Help

You can obtain additional assistance in the U.S. by:

Calling USA Help Line at (719) 531-4567

E-mail [ntd\\_helpline@hp0800.desk.hp.com](mailto:ntd_helpline@hp0800.desk.hp.com)

FAX (719) 531-4506

or Internationally by calling your local HP Sales Office.

---

## Contents

Notice .....	ii
Safety Information .....	iii
Warning Symbols Used in This Book:.....	iv
Conventions Used in this Book .....	v
Examples .....	v
Operating Restrictions .....	vi
About this Manual .....	viii
Printing History .....	ix
Additional Help .....	ix

### 1 - Introduction

Other Applications .....	1-3
Low Speed Internet Advisor Features .....	1-4
Breakout Box .....	1-4
Standard Connector Pinouts .....	1-6
RS-232C/V.24 .....	1-7
RS-449 .....	1-8
V.35 .....	1-9
LEDs .....	1-10
Lead Status LEDs .....	1-10
Interface Activity LEDs .....	1-10

### 2 - Installation and Startup

Connecting the Advisor to Your Network .....	2-3
Monitor Connections .....	2-4
Simulate Connections .....	2-6

### 3 - The User Interface

The Toolkit .....	3-3
The Top Level Menu .....	3-5
The Toolkit Setup Menu .....	3-7
Toolkit Setup Menu Functions .....	3-7
Add a Tool or Group .....	3-7
Delete a Tool or Group .....	3-7

Modify a Tool or Group .....	3-8
Copy/Paste a Tool or Group .....	3-8
The Program Information Menu .....	3-9
Label .....	3-9
Program Path .....	3-9
Parameters .....	3-10
Start-up Directory .....	3-10
Comments .....	3-10
The Group Information Menu .....	3-11
Label .....	3-11
Comments .....	3-11
Setting up Special Tests .....	3-12
Setting up a Test in the Toolkit .....	3-12

## **4 - Testing with the Low Speed Advisor**

Selecting the Interface .....	4-4
Using the Setup Menu .....	4-5
Setup Menu Selections for BOPs .....	4-7
Setup Menu Selections for Bisync .....	4-8
Setup Menu Selections for COPs .....	4-9
Hexadecimal Entry and Parity .....	4-11
Sync Characters .....	4-11
Drop Sync (Synchronous mode only) .....	4-12
Drop Sync and Error Checking .....	4-12
Utilities for the Setup Menu .....	4-13
Setting Up User Defined Bit Rates .....	4-13
Using Auto Configure .....	4-15
Starting Auto Configure .....	4-15
How Auto Configure Works .....	4-16
Synchronous Data .....	4-16
Asynchronous Data .....	4-17
Using Auto Configure as a Starting Point .....	4-18
Bit-Oriented Protocols (BOPs) .....	4-18
Character Oriented Protocols (COPs) .....	4-19
What to Do if Auto Configure Does Not Work .....	4-20
Eliminating Superfluous Data .....	4-21
Unusual Protocol Settings .....	4-22
Using Monitor Programs .....	4-24
Using the Monitor Menu to Write a Monitor Program .....	4-25



RTS On to CTS On Program .....	4-25
Parity Errors Program .....	4-26
Level 2 When String Program .....	4-27
Using a Pre-Written Monitor Program Supplied in the Toolkit ..	4-31
Setting Up to Simulate .....	4-32
Using the Simulate Menu to Write Simulate Programs .....	4-33
Example DTS and RTS Simulate Program .....	4-34
Level 3 When String Simulate Program .....	4-35
Using a Pre-Written Simulate Program Supplied in the Toolkit ..	4-39
Storing Information to Disk .....	4-41
Storing to the Hard Disk .....	4-42
Storing to a Floppy Disk .....	4-43
Capturing Data to Disk while Running at 64K bps or Less ....	4-44
Storing to Disk Example .....	4-45
Saving Data Captured to Hard Disk During Run-Time .....	4-46
Saving Data with the Disk Buffer Extractor .....	4-46
Disk Buffer Extractor Field Definitions .....	4-48
Initializing a New Hard Disk Capture Buffer .....	4-49
Disk Buffer Definitions .....	4-49

## 5 - Evaluating Data

Using the Examine Data Menu .....	5-3
Looking at Buffer Data .....	5-3
Changing the Display Format .....	5-5
Measuring Time .....	5-5
Analyzing Captured Data .....	5-7
Post-Processing Data .....	5-7
Timing Resolution .....	5-10

## 6 - Printing

Printing Data .....	6-3
Connecting the Printer .....	6-3
The Printer Setup Menu .....	6-3
Printing Menus .....	6-6
Printing the Buffer .....	6-6
Text Mode Printers and Printed Characters .....	6-8
Hexadecimal Characters .....	6-8
ASCII Control Characters .....	6-9
Special Characters .....	6-9

Getting an ASCII Print File from Captured Data .....	6-10
--	------

## **7 - Remote/Slave Operation**

Remote/Slave Setup .....	7-3
Remote/Slave Configuration .....	7-3
The Modem Command Set .....	7-3
Hardware Handshaking .....	7-4
Baud Rate.....	7-4
Com Port .....	7-4
Remote/Slave Features .....	7-5
Chat Mode .....	7-5
Mass Store .....	7-5
External Modem Configuration .....	7-6
PCMCIA Modem .....	7-7

## **8 - BERT Measurements**

Understanding BERT .....	8-3
Basic Measurements .....	8-3
G.821 Analysis .....	8-4
Different BERT Measurements .....	8-5
End-to-end Connections.....	8-5
Loopback Testing.....	8-5
Running Enhanced BERT .....	8-6
BERT Setup .....	8-7
Setting the Line Characteristics .....	8-8
Emulate .....	8-8
DTE clock .....	8-8
Bits/Sec .....	8-9
Mode .....	8-9
Parity .....	8-9
Stop Bits.....	8-9
Framing .....	8-9
Setting the BERT Options .....	8-10
Pattern .....	8-10
Block Size .....	8-11
Duration.....	8-11
Select Result Logging .....	8-12
Log Results .....	8-12
Interval.....	8-12

Log File .....	8-13
Saving a BERT Configuration .....	8-13
Loading a BERT Configuration .....	8-13
The Message Editor .....	8-14
The Message Editor Window .....	8-15
Start the Message Editor .....	8-15
Select a Data Code .....	8-15
Enter a Character String .....	8-16
Enter Non-Text Characters .....	8-16
Canceling Message Changes .....	8-17
Exiting the Message Editor .....	8-17
Testing a Circuit .....	8-18
Starting/Stopping a Measurement .....	8-19
Injecting Errors into a Circuit .....	8-20
Resetting Counters .....	8-21
Exit with a Measurement Running .....	8-21
Restarting BERT with a Measurement Running .....	8-22
Looking at the Results .....	8-23
Viewing a Log File .....	8-23
Summary Format .....	8-23
Single Entry Format .....	8-24

## **9 - Capturing High Speed Data**

High Speed Capture Selections .....	9-5
Sizing the Disk Buffer .....	9-5
High Speed Capture Limits .....	9-6

## **10 - Terminal Emulators**

Using the ProComm Terminal Emulator .....	10-3
Using the VT100 Emulator .....	10-4
Loading the VT100 Emulator .....	10-5
Setting Up the VT100 Emulator .....	10-6
Running the VT100 Emulator .....	10-9
Using the Display Buffer .....	10-10
Working with Control Characters .....	10-11
Using the Escape Codes .....	10-11

## 11 - Programming Reference

Editing Programs.....	11-3
Executing Programs.....	11-3
Defining Triggers.....	11-4
Triggers Provide a Reference.....	11-4
Types Of Triggers.....	11-5
Characters.....	11-5
Leads.....	11-7
Errors.....	11-8
Timeouts.....	11-8
Softkeys.....	11-8
Multiple Triggers.....	11-9
ORing Triggers.....	11-9
Sequencing Triggers.....	11-9
Overlapping and Duplicate Triggers.....	11-10
Marking Triggers.....	11-11
Beep.....	11-12
Highlight.....	11-12
Measuring Time.....	11-13
Time Stamps.....	11-13
Timers.....	11-13
Effects Of the Data Filter On Timing.....	11-14
Lead Changes.....	11-14
COP Send Strings.....	11-15
Bit-Oriented Protocols.....	11-15
Timing Resolution.....	11-16
Cursor Timing Limits.....	11-16
Counting Events.....	11-17
Countable Events.....	11-17
Maximum Count.....	11-17
Resetting Counters.....	11-17
Decrementing Counters.....	11-17
Branching.....	11-18
Conditional Branching.....	11-18
If Counter.....	11-18
How 'If' and 'When' Are Different.....	11-18
Combining 'If' Statements.....	11-19
Combining 'If' and 'When'.....	11-19

Unconditional Branching .....	11-19
'If' and 'When' Always Force a Branch.....	11-20
Program Pauses .....	11-21
Pause Example .....	11-21
Starting and Stopping Commands .....	11-22
Filtering Data With 'Start' and 'Stop' .....	11-22
'Start' and 'Stop' Disk .....	11-22
'Start' and 'Stop' Display .....	11-23
Stop Tests .....	11-24
Message Capabilities .....	11-25
Entering Messages .....	11-25
Entering Messages Example .....	11-26
Subprograms.....	11-27
Subprogram Error Example.....	11-27
Subprogram Delay Example.....	11-28
Level 2 Programming.....	11-29
Address Field .....	11-29
Extended Addressing.....	11-30
Frame Type .....	11-30
I-Frame .....	11-30
S-Frame.....	11-30
U-Frame.....	11-31
Level 3 Programming.....	11-32
Selecting Level 3 Before Level 2 .....	11-33
GFI Field.....	11-34
LCN Field .....	11-34
Packet Type Field .....	11-34
Other Packet Types .....	11-35
Conditions when Simulating .....	11-36
Block Check Characters .....	11-36
Frame Check Sequence .....	11-36
Set Lead .....	11-37
Lead Status During Simulation.....	11-37

## Glossary

---

**Introduction**

## Introduction

When you want to test data communications equipment, you need a system designed to meet the challenges you face. The Hewlett-Packard Low Speed Internet Advisor gives you all of the tools you need to test data communications links from 50 bps to 64 Kbps. In addition, you can use a provided high speed capture application for monitoring and capturing data at speeds above 64 Kbps.

The operating system of the Low Speed Internet Advisor is the *Toolkit*. This user interface simplifies operations, and lets you find problems on your network quickly. Using the Toolkit, you can configure the Advisor to run tests by pressing a "single key." Using the various Advisor features, you can:

- run tests with a single keystroke,
- store data in several formats,
- load data from previous tests,
- store and load special configuration menus,
- and import existing compatible DOS software.

You can set up filters and counters to "screen out" data you don't want to evaluate, or pinpoint events you want to search for. Logging of data provides a long-term history of link events.

Bit Error Rate Tests (BERT) give you the ability to look at transmission errors occurring on your network. The BERT display shows you different views of data transmissions to help you install, maintain, or troubleshoot your line.

---

## Other Applications

Additional software applications are included with the Internet Advisor. You can access these applications from various areas in the Toolkit.

There is online manuals for most of these separate applications.



---

## Low Speed Internet Advisor Features


---

---

### Breakout Box

---

There is a breakout box and jumpering capabilities for the RS-232/V.24 connectors. The following figure shows the breakout box and associated connections. Note that the arrows point to the appropriate RS232/V.24 connectors on the side of the Advisor.

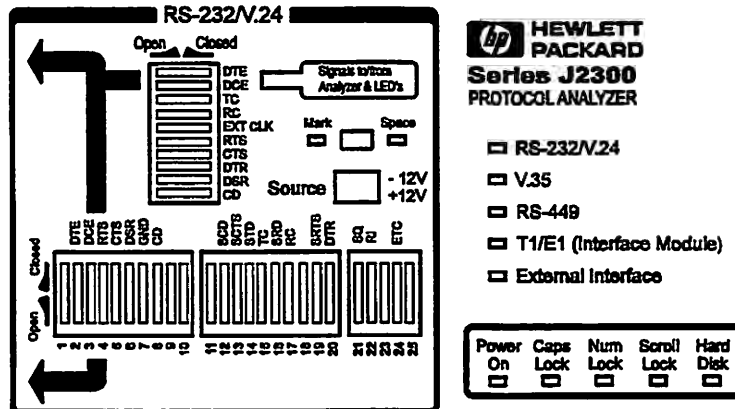

**Figure 1-1: RS-232/V.24 Breakout Box**

All 25 pins are available for jumpering on either side of the breakout switches. If your network cable has different pin assignments from a standard connector, use jumper wires to connect the lines to the desired pins.

**Mark/Space Indicator.** You can jumper any pin to the Mark/Space Indicator to determine the state or look at the LEDs on the panel.

**Source Voltage.** You can set any signal line on or off by jumpering to the available source voltage, either +12 volts or -12 volts.

**Disconnect Switches.** The signals going to and from the Advisor can be modified using the disconnect switches.

Introduction  
**Low Speed Internet Advisor Features**

**Source Voltage.** You can set any signal line on or off by jumpering to the available source voltage, either +12 volts or -12 volts.

**Disconnect Switches.** The signals going to and from the Advisor can be modified using the disconnect switches.

---


## Standard Connector Pinouts

The Internet Advisor comes with standard connectors for:

- RS-232C/V.24
- RS-449
- V.35

The pin assignments are listed in this section to assist you with your testing needs.

## RS-232C/V.24

 


**Figure 1-2: RS-232C Interface Connector Pins Assignment**

**Table 1-1: RS232 Interface Connector Pins**

PIN	CCITT CIRCUIT	CIRCUIT FUNCTION	PIN	CCITT CIRCUIT	CIRCUIT FUNCTION
1	101	Protective Ground	14	118	Secondary Transmitted Data
2	103	Transmitted Data	15	114	Transmission Signal Element Timing (DCE Source)
3	104	Received Data	16	119	Secondary Received Data
4	105	Request to Send	17	115	Receiver Signal Element Timing (DCE Source)
5	106	Clear to Send	18	Unassigned	
6	107	Data Set Ready	19	120	Secondary Request to Send
7	102	Signal Ground (common return)	20	108.2	Data Terminal Ready
8	109	ReceivedLine Signal Detector	21	110	Signal Quality Detector
9	(Reserved for Data Set Testing)		22	125	Ring Indicator
10	(Reserved for Data Set Testing)		23	111/112	Data Signal Rate Selector (DTE Source)
11	Unassigned		24	113	Transmit Signal Element Timing (DTE Source)
12	122	Secondary Received Line Signal Detector	25	Unassigned	
13	121	Secondary Clear to Send Line Signal Detector			

## RS-449

 


**Figure 1-3: RS-449 Interface Connector Pins Assignment**

**Table 1-2: RS449 Interface Connector Pins**

PIN	CIRCUIT NAME	PIN	CIRCUIT NAME
1	Shield	19	Signal Ground
2	Send Timing	20	Receive Common
3	Spare	21	Spare
4	Send Data	22	Send Data
5	Send Timing	23	Send Timing
6	Receive Data	24	Receive Data
7	Request to Send	25	Request to Send
8	Receive Timing	26	Receive Timing
9	Clear to Send	27	Clear to Send
10	Local Loopback	28	Terminal in Service
11	Data Mode	29	Data Mode
12	Terminal Ready	30	Terminal Ready
13	Receiver Ready	31	Receiver Ready
14	Remote Loopback	32	Select Standby
15	Incoming Call	33	Signal Quality
16	Select Frequency	34	New Signal
	/Signal Rate Selector	35	Terminal Timing
17	Terminal Timing	37	Standby Indicator
18	Test Mode	37	Send Common

## V.35

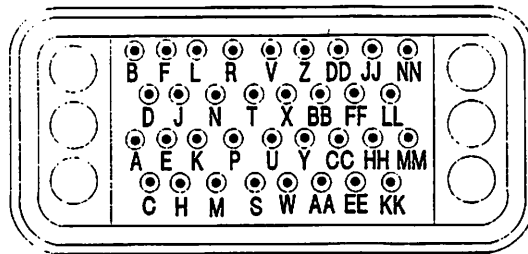

**Figure 1-4: V.35 Interface Connector Pins Assignment**

**Table 1-3: V.35 Interface Connector Pins**

PIN	CIRCUIT NAME
A	Chassis Ground
B	Signal Ground
C	Request to Send
D	Clear to Send
E	Data Set Ready
F	Receive Line Signal Detect
P	Transmit Data (A)
R	Received Data (A)
S	Transmit Data (B)
T	Received Data (B)
U	Terminal Timing (A)
V	Receive Timing (A)
W	Terminal Timing (B)
X	Receive Timing (A)
Y	Transmit Timing (A)
AA	Transmit Timing (B)

---

## **LEDs**

There are three groups of LEDs showing various functions in the Advisor.

### **Lead Status LEDs**

There are ten pairs of LEDs to indicate lead status for all of the internal V-series interfaces. They indicate data, clock and control information for both the equipment (Mark, off) and line (space, on) sides. The lead status LEDs are three-state indicators:

- Red - Equipment (Mark, off)
- Green - Line (Space, on)
- Both LEDs Off - high impedance

### **Interface Activity LEDs**

There is a group of five LEDs that show you which interface is currently being used. These are:

- RS-232/V.24
- V.35
- RS-449
- E1/T1
- External Interface

---


## **Installation and Startup**



## Installation and Startup

To turn on the Low Speed Advisor, plug it in and turn it on. The on-off switch is located on the left side of the Advisor just above the power cord.

The first display, a Toolkit window, should look similar to the following figure:

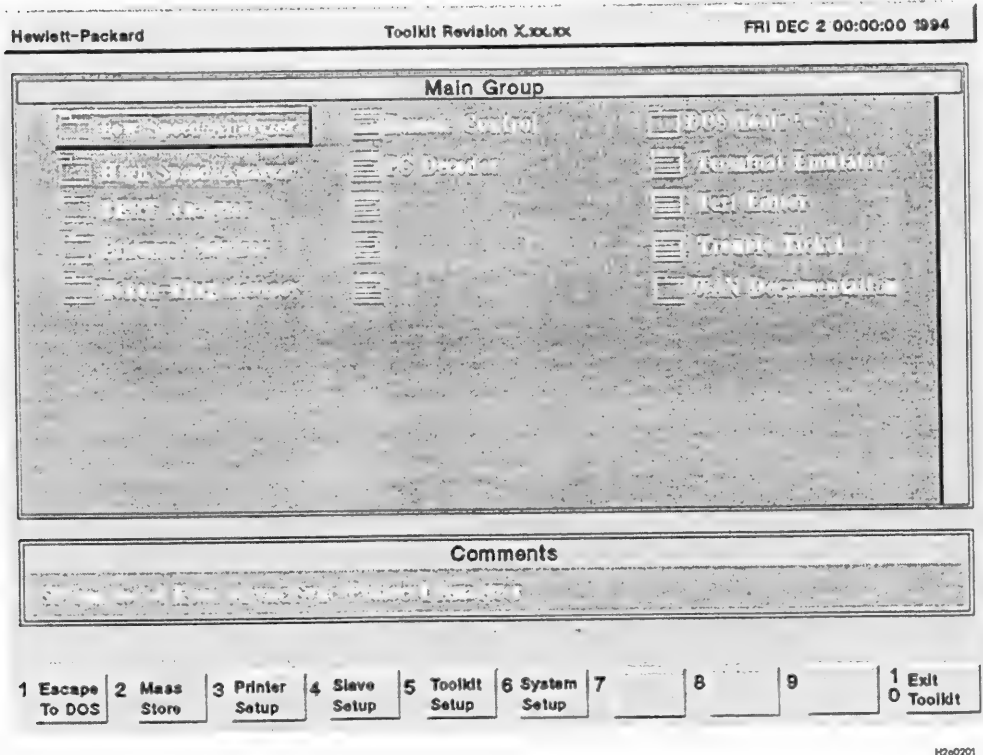

**Figure 2-1: Top Level Display**

For more information on using the Toolkit see *The Toolkit* in chapter 3.

### NOTE

The HP J2300A Toolkit will not have High Speed, Ethernet, or Token-Ring selections.

---

## Connecting the Advisor to Your Network

V-Series interfaces provide standardized interconnection of Data Terminal Equipment (DTE) and Data Circuit-terminating Equipment (DCE). DTEs are usually computers, PCs, printers and CRTs and DCEs are usually modems, DSUs, TAs, and NTs (ISDN Terminal Adapters and Network Terminators). DTEs are the sources or destinations of binary data. DCEs are the devices which facilitate long-haul connections between DTEs.

V-Series recommendations specify that DCE devices should have a female connector. This is almost always the case. DTE devices are specified to have a male connector, but many times they also use the more rugged female connector internally and depend upon a male to male cable to correctly carry the data and control signals to the DCE. You should keep this in mind while making connections described in this chapter, because the specified connectors might change gender due to the particular usage.

Figures 2-2 through 2-5 show Advisor connections to a V-Series interface. You can connect the Advisor at either the DCE or DTE end of the V-Series link. Since each of the data, control, and timing signals have their own conductor in a V-Series interface, the connection to the Advisor is always "straight through."

There are four main ways of connecting the Advisor to a circuit to be tested. Figures 2-2 and 2-3 show the connection of a V-Series interface to a circuit for monitoring.


You use a Y-cable (a cable with one female and two male connectors) to connect the Advisor for monitoring. After connecting for monitoring, the Advisor can collect and interpret data as well as compile statistics.

The Advisor passively monitors the circuit under test. To passively monitor is to monitor without transmitting data or exercising control over the interface.

Figure 2-2 shows the connection of the Advisor between a DTE and DCE. You make this connection by momentarily interrupting the circuit to install the female and male Y-cable connectors, as shown. This can cause an interruption in service. The other male connector goes to the appropriate test port of the Advisor.


---

## Monitor Connections

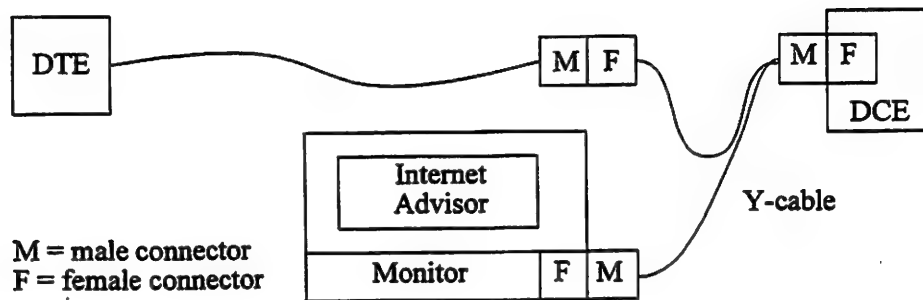

**Figure 2-2: V-Series Passive Monitor In-Line Connection**

Figure 2-3 shows a test panel as part of the test circuit system. The test panel can be accessed for monitoring without interrupting the service. One male connector, of the Y-cable, goes to the rear port on the Advisor, the other male connector goes to the monitor port on the test panel, and the female connector is not used. Either Advisor port could be used but care must be taken when using the front port because the switches might be opened.

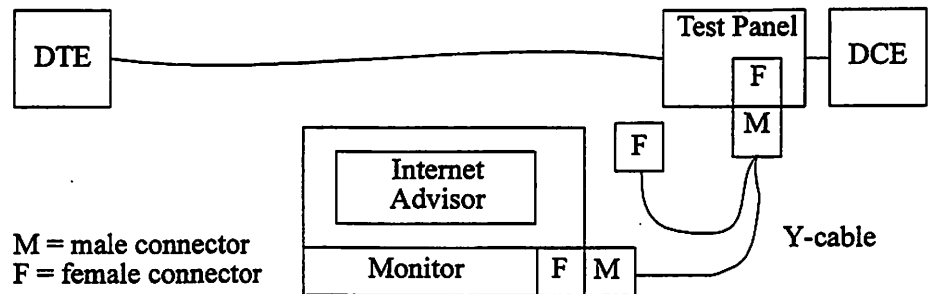

**Figure 2-3: V-Series Passive Monitor Test Panel Connection**


Figures 2-4 and 2-5 show the connection of a V-Series interface to a circuit for simulating or for performing BERT. In these cases, the Advisor supplies (or transmits) data and control signals to the interface.

Figure 2-4 shows the connection of the Advisor to a DTE (simulating DCE data traffic sending data to a DTE.) You can configure the Advisor to simulate a DCE to provide stimulus for testing DTEs. You can automatically configure the Advisor for this by loading one of the supplied tests that simulate test calls to a terminal device from X.25 or Frame Relay Networks.

---

## Simulate Connections

Simulation lets the Advisor become a device on the line. This gives you the added capability of interactive testing by injecting data. You can write simulate programs so the Advisor acts as either a DTE or a DCE. For more information on simulation, see chapter 4.

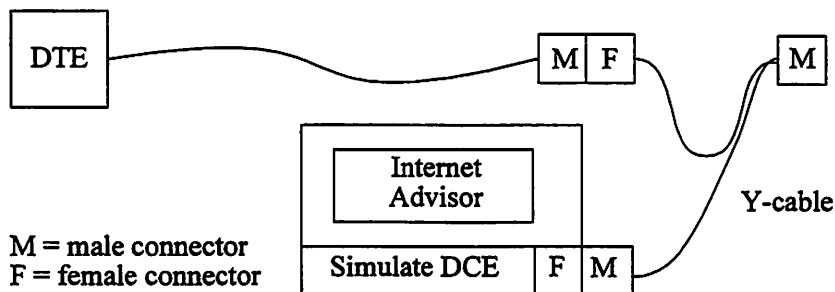

**Figure 2-4: V-Series Active Connection to Test Terminal Device**

---


### CAUTION

When using a Y-cable to attach the Advisor to a DTE, take care to keep the pins of the unused male connector from inadvertently making contact with any metal object. This is especially true for the V.35 male connector. The signal levels are very low energy, and therefore not dangerous, but accidental short circuits can cause improper operation of the DTE and unreliable data collection by the Advisor.

Figure 2-5 shows the connection of the Advisor to a DCE (simulating DTE data traffic sending data to the DCE.) In this case, the Advisor is configured to simulate a DTE. When you connect the Advisor to a DCE, the Advisor emulates a DTE sending traffic to the DCE to test the entire link or network. You can automatically configure the Advisor for this by loading one of the supplied tests that places an X.25 call or sends Frame Relay data.

This is also the most common method of connecting and executing BERT through a V-Series interface.

Installation and Startup  
Connecting the Advisor to Your Network

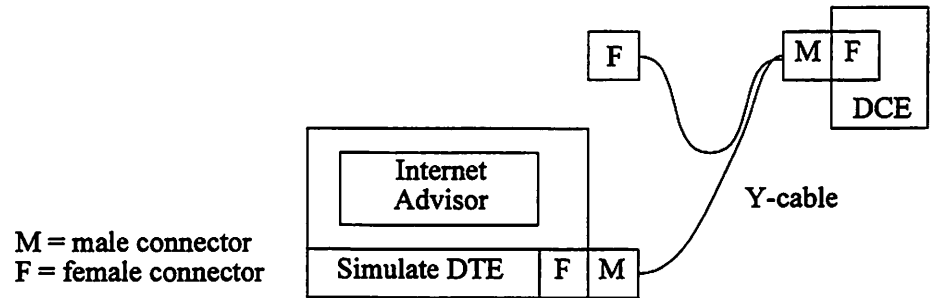

**Figure 2-5: V-Series Active Connections to Test DCE and Link**

Installation and Startup  
**Connecting the Advisor to Your Network**

---

## **The User Interface**



## The User Interface

The Low Speed Internet Advisor operates with a user interface called the Toolkit. The Toolkit can be customized for your specific testing needs. You can change and create protocol analysis testing tools that maximize the use of the Advisor. You can add to and alter the tests you use frequently, and you can install compatible DOS software to the Toolkit.

---

## The Toolkit

Most Toolkit displays are divided into two parts. The top window is labeled with the function you have chosen and is the operating part of the display. The bottom window is labeled 'Comments' and shows you a comment about the current display.

To move around the Toolkit, use the arrow keys and the **PgUp**, **PgDn**, **HOME**, and **END** keys. The mouse does not function in Toolkit.

Softkeys at the bottom of the display change with most displays and a scroll bar is shown on the right side of the window if there is more than one screen of information.

In many of the setup menus in the Toolkit, you will need to change values. Highlight the choice you want to change (using the arrow keys) and press **ENTER**. Doing this moves the highlight to the fields so you can make your choice. To 'select' your choice, press **ENTER** again. If it is a field that wants you to type in a value, type it in and press **ENTER** for that choice to become active.

# The User Interface The Toolkit

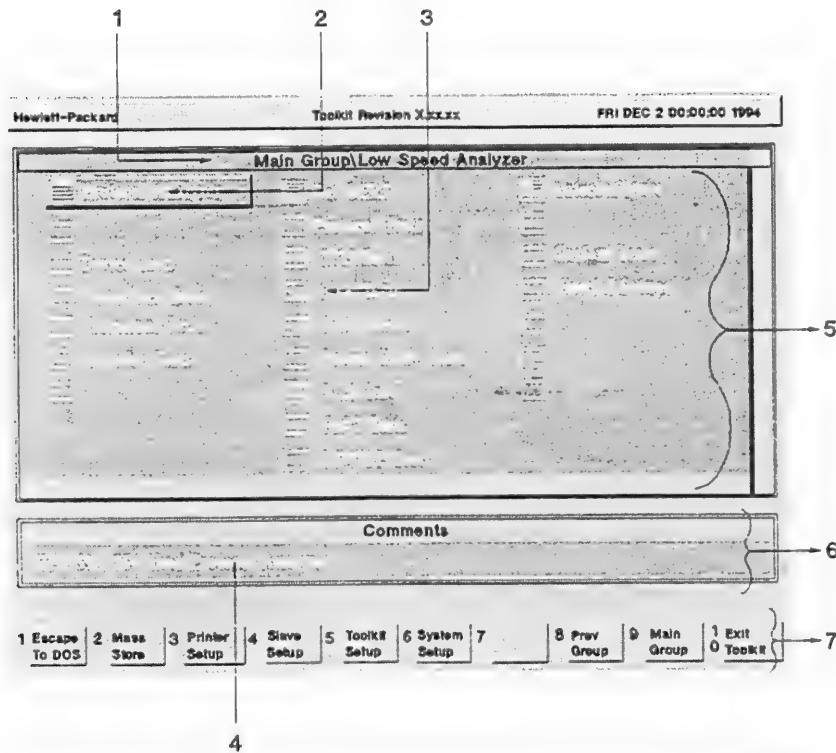


Figure 3-1: Low Speed Analyzer Main Group Menu

---

## The Top Level Menu

The Low Speed Internet Advisor starts in Toolkit.

---

### NOTE

For the HP 4957PC only, start Toolkit by typing `hptools` at the DOS prompt. The Toolkit top level menu is displayed.

---

Any time you want to leave the Toolkit menu, press **F10** (Exit Toolkit). You may have to press this key more than once to completely exit the application.

The Low Speed Analyzer menu (Figure 3-1) shows:

1. The title of the display you are viewing (in this case, Main Group\Low Speed Analyzer)
2. Tools or tests represented by a page icon
3. Groups of tools represented by a file-folder icon
4. A comment about the highlighted icon
5. The top window (or display) where you select and view tests
6. The bottom window, labeled Comments or Status Window, gives information about a highlighted test or about an application while it is running
7. The softkeys.

## The User Interface

### The Toolkit

If you highlight a tool icon and press **ENTER**, that function will start. In some cases, it may be a test or setup menu.

If you highlight a group icon and press **ENTER**, the Toolkit displays the individual tests in the group, or additional groups.

The softkeys in the Toolkit top level menu provide the following functions:

Escape to DOS	Lets you go to the DOS operating area and do other work without exiting the Toolkit. Type EXIT at the DOS prompt when you want to return to the Toolkit menu.
Mass Store	Lets you do various disk functions.
Printer Setup	Lets you set up printer types and printer ports to print data, setups, etc.
Slave Setup	Lets you setup and configure a slave for remote operations.
Toolkit Setup	Lets you configure the Toolkit to add additional tests or special applications, to automatically run tests, and to delete tests you no longer need.
System Setup	Shows you the operating system, machine type, and available memory in your PC. It also lets you select the video mode and sound options for your PC (this instrument uses VGA only).
Prev Group	Returns you to the previous Toolkit window.
Main Group	Returns you to the top level window of the Toolkit.
Exit Toolkit	Exits the Toolkit.

---

## The Toolkit Setup Menu

The Toolkit Setup menu is where you

- Add tools and groups of tests
- Delete tools and groups you no longer need
- Modify existing tools and groups
- Copy and Paste tools and groups

---

### Toolkit Setup Menu Functions

Press **F5** to start the Toolkit Setup menu. The Toolkit Setup menu is displayed and shows the various groups and tools available.

#### Add a Tool or Group

1. Make sure the highlight is on the tool or group that is BEFORE the position where you want to add a tool or group.
2. Press **F1** (Add Program) or **F3** (Add Group). The Program Information menu is displayed if you are adding a tool. The Group Information menu is displayed if you are adding a group.
3. Use the arrow keys to toggle between the fields and enter your choices.

See the "Program Information Menu" section in this chapter for more details on adding a tool to the Toolkit. See the "Group Information Menu" section in this chapter for more details on adding a group to the Toolkit.

#### Delete a Tool or Group

1. Highlight the tool or group you want to delete.

## The User Interface

### The Toolkit Setup Menu

2. Press **F3** (Delete). A window asks you to confirm if you want to delete this selection.

### Modify a Tool or Group

1. Highlight the tool or group you want to modify.
2. Press **F4** (Modify). The Program Information menu is displayed if you are modifying a tool. The Group Information menu is displayed if you are modifying a group.
3. Use the arrow keys to toggle between the fields and enter your choices.

See the "Program Information Menu" section in this chapter for more details on modifying a tool. See the "Group Information Menu" section in this chapter for more details on modifying a group.

### Copy/Paste a Tool or Group

The easiest way to add a tool or group is to copy an existing tool or group and paste it where you want the new tool or group to be. You can then edit this new copy to match your testing needs.

1. Highlight the tool or group you want to copy
2. Press **F5** (Copy).
3. Use the arrow keys to highlight the tool or group that is **BEFORE** the position where you want to insert the tool or group.
4. Press **F6** (Paste) to insert the tool or group in the Toolkit menu.

You can make multiple copies of a program or group by pressing **F6** more than once. You can also copy and paste individual tools from one group to another or from the main Toolkit menu into a group menu.

---

## The Program Information Menu

The Program Information menu is displayed anytime you add or modify tools (or tests).

When you want to leave the Program Information menu, press **F10** (Exit) if you want to save your choices and put them in the Toolkit, or, if you want to abandon your choices and start over, press **F1** (Cancel).

Pressing either of these keys takes you back to the Toolkit Setup menu.

### Label

The name you type in the Label field is what is displayed in the Toolkit main menu or group menu.

**Label Example.** Type `Call Dispatch` if you are creating a terminal emulation tool that connects electronically with a centralized dispatch system for trouble calls.

### Program Path

The program path is the location of an executable file or application. If you know where you want to store the program, you can type the full program path and name here.

Press **ENTER** if you want to browse through the various directories. Another menu appears that shows the disk drive and directory you are currently in. Use the function keys and arrow keys to highlight the program path you want and press **F10** (Exit) to select it. You should make sure the program name entered here has the proper extension of `.exe`, `.hpe`, `.com`, or `.bat`.

**Program Path Examples.** `myprog.exe`, `myprog.bat`, `myprog.com`, or `myprog` are all examples of calling specific DOS programs.



## The User Interface

### The Toolkit Setup Menu

#### Parameters

For DOS compatible programs, you can put anything in this field that would normally follow the program name called at the DOS prompt. The Parameter field is appended after the program path with a space.

**Parameter Examples .** Many text editors allow calling the editor with the name of the file to be edited immediately following the program name. For example, if the program name were `myeditor.exe` and the parameter were `myfile.txt`, the full DOS call would be `myeditor.exe myfile.txt`.

#### Start-up Directory

The Start-up Directory is where the test you are adding runs from. Press **ENTER** to browse through the various directories. Another menu shows the disk drive and directory you are currently in.

Use the function keys and arrow keys to highlight the Start-up Directory you want and press **F10** (Exit) when you have selected the Start-up directory.

#### Comments

You can type in a comment that you want to be displayed in the bottom window of the Toolkit menu when the Label is highlighted.

**Comment Example.** Type `My special Frame Relay Tests` if you are creating a tool focused on a specific Frame Relay test.

---

## The Group Information Menu

The Group Information menu is displayed when you add or modify groups of tests.

When you want to leave the Group Information menu, press **F10** (Exit) if you want to save your choices in the Toolkit, or, if you want to abandon your choices and start over, press **F1** (Cancel). Pressing either of these keys takes you back to the Toolkit Setup menu.

### Label

The name you type in the Label field is displayed as the group name in the Toolkit menu.

### Comments

You can type in a comment that you want displayed when the added group is highlighted. The comment is displayed in the bottom part of the Toolkit menu.

## Setting up Special Tests

You can setup special tests or groups of tests to make finding problems on your network faster and more efficient.

If you have a particular configuration or setup that you use on a continuing basis, you can "make" your own test in the Toolkit. Then, each time you run this test, you won't have to change the Interface Setup menu or the filters and counters before you can start your test. All of these values can be saved, loaded, and stored just the way you want them.

---

## Setting up a Test in the Toolkit

The easiest way to set up a new test in the Toolkit is to modify or add a group or program from an existing one.

1. Highlight the icon in the Toolkit menu next to where you want your new application to be displayed. ( In other words, the new test will be placed **AFTER** the highlighted test in the Toolkit menu.)
2. Press **F5** (Toolkit Setup).
3. Press **F1** (Add Program). A display titled Program Information is displayed.
  - a. Label - type in a label for your test. This is what will be displayed in the Toolkit menu after you are done. Press the down arrow to go to the next field in the Program information menu.
  - b. Program Path - type in the **ENTIRE** path and filename. Use one of the following program names with the path of `c:\hptools\tools\:`  
for low speed applications - `HP 4959A.HPE`

For example, if you are setting up a test to run, you would type in the following:

`c:\hptools\tools\hp5959a.hpe`

Press the down arrow to go to the next field in the Program Information menu.

- c. Parameters - the parameter field is a file that contains the Interface Setup menu data, filters and counters Setup menu data, and run configuration menu data. Use one of the following parameter names with the path of `c:\hptools\config\`. The default file names for these configuration files are:

for low speed applications - `HP4959A.PDB`

For example, if you are setting up a BOPs test to run on a T1 network, you would type in the following:

`c:\hptools\config\`

If you want to use the default configuration files, you can leave this field blank.

Press **F10** (OK) to go back to the Program Information menu.

- d. Start-up Directory - type in the name of the directory you want the test to be in while it is running. You can press enter to 'browse' the directories if you are don't know where you want the test to start from.
- e. Comments - type in a comment about for your test. This is what will be displayed in the Comment window at the bottom of the Toolkit menu when you highlight your special test.

4. Press **F10** (OK) to exit the Program Information menu.

5. Press **F10** (Exit Setup) to exit the Toolkit Setup menu.

**The User Interface**  
**Setting up Special Tests**

---

## Testing with the Low Speed Advisor

## Testing with the Low Speed Advisor

The first thing you will most often want to do to test a line is to "monitor" the line. Monitoring lets you watch the line so you can tell whether the line is active and whether there is valid data on the line. While you are monitoring, the Advisor captures data in its internal 768K data buffer (or to the hard disk capture buffer, if it is selected instead). The data is then available for post-run analysis.

To monitor a line, perform the following steps:

1. Connect the appropriate interface connector on the Advisor to the line you want to test. For information on how to connect the Advisor to monitor a line, see the section "Connecting the Advisor to Your Network" in chapter 2, *Startup and Installation*.

---

### CAUTION

---

If you are going to connect the line to the "External Pod Cable" connector on the Advisor, turn off the Advisor before you connect the proper pod to the external connector. Then turn the power back on.

---

### CAUTION

---

Connect only one interface cable to the Advisor at a time. For example, do not have both RS-232 and V.35 cables connected to the Advisor at the same time.

2. Tell the Advisor which interface connector is connected to the line by "selecting" that interface in the Run menu. For more information on how to do this, see "Selecting the Interface," later in this chapter.
3. Tell the Advisor what protocol, data code, data rate, and other line parameters are being used on the line so that the Advisor can understand and decode the data on the line. There are two ways to do this:
  - a. If you know the line parameters, you can select the line parameters in the Setup menu. For information on how to do this, see "Using the Setup Menu," later in this chapter.
  - b. You can use Auto Configure to let the Advisor evaluate the line and configure itself. For information on how to do this, see "Using Auto Configure," later in this chapter.

4. Once you have connected the line to the Advisor, selected the interface, and setup the Advisor, you can start monitoring the line. To do this, press **F5** (Run Menu) and then **F1** (Monitor Line). The Advisor begins monitoring the line and capturing data.
5. Press **F8** (Halt/Exit) when you want to stop the run.
6. Press **F6** (Examine Data) to view the data that was captured. See chapter 5, *Evaluating Data*, for information on examining the data.

Besides simple monitoring, you can create monitor or simulate programs for more complex analyses of data. For example, you can write monitor programs that look for specific events to occur on the line, and you can write simulate programs that cause the Advisor to behave like a DTE or DCE on the line. See "Using Monitor Programs" and "Setting Up to Simulate," later in this chapter for information on writing monitor and simulate programs.

In addition to writing your own monitor and simulate programs, several programs that you can use to make common tests are available in the Toolkit folders. These tests can be loaded from the Toolkit and used as they are, or you can customize them for your own specific needs. See "Using a Pre-Written Monitor Program Supplied in the Toolkit," and "Using a Pre-Written Simulate Program Supplied in the Toolkit," later in this chapter.



---

## Selecting the Interface

The Advisor has three dedicated internal interfaces and it can accommodate one of several external interfaces. Once you have connected the line you want to test to one of the interfaces on the Advisor, you must select that interface in the Run menu.

---

### CAUTION

---

Only one interface cable should be connected to the Advisor at a time. For example, do not have both RS-232 and V.35 cables connected to the Advisor at the same time.

To select an interface, do the following:

1. Turn the Advisor on and select **Low Speed Analyzer** by pressing **ENTER**.
2. Select **Protocol Analyzer** by pressing **ENTER**. This brings up the **Low Speed WAN Interface (4959)** menu.
3. Press **F5** (Run Menu).
4. Press **F5** (Select Iface).
5. To select an internal interface, select the softkey corresponding to the interface you want to select: (RS-232C), (RS-449), or (V.35). To select an external interface, select the softkey for (Ext Iface).
6. Press **F8** (Halt/Exit) twice to return to the **Low Speed WAN Interface (4959)** menu.

The Interface Activity panel (described in chapter 1 under "LEDs") will light an LED to indicate which interface has been selected.

## Using the Setup Menu

Before you monitor a line (and also before you monitor the buffer, simulate a device on the line, or view previously captured data), you must tell the Advisor what protocol, data code, data rate, and other line parameters are being used on the line so that the Advisor can understand and decode the data on the line. There are two ways to do this:

- If you know the line parameters, you can select the line parameters in the Setup menu. This section describes how to use the Setup menu.
- You can use Auto Configure to let the Advisor evaluate the line and configure itself. Refer to "Using Auto Configure" later in this chapter for information on using Auto Configure.

To go to the Setup menu, use the following procedure:

1. If you are not already at the Low Speed WAN Interface (4959) menu, select Low Speed Analyzer in the Toolkit by pressing **ENTER**, and then select Protocol Analyzer by pressing **ENTER**. This brings up the Low Speed WAN Interface (4959) menu.
2. Press **F2** (Set Up) to go to the Setup menu.

## Testing with the Low Speed Advisor Using the Setup Menu

HEWLETT PACKARD
WED JAN 1 00:00:00, 1991

**Monitor/Simulate Parameter Setup**

Protocol	<b>HDLC</b>	Display	<b>2Line</b>
Code	<b>ASCII 8</b>	Err chk	<b>CCITT</b>
Bits/SEC	<b>64K</b>		
Parity	<b>None</b>		
Mode <b>Sync</b>		DTE clock	<b>DCE</b>
		Bit sense	<b>Norm.</b>
		Ext Addr	<b>Off</b>
		Ext Ctrl	<b>Off</b>

**HDLC**
**SDLC**
**X.25**
**BSC**
**Char**

F1
F2
F3
F4
F5
F6

1

2

3

4

5

6

7

8

MORE  
 (HALT)  
 EXIT

9

Config  
 0

1

Exit to  
 Toolkit

PC0302

**Figure 4-1: The Setup Menu**

- The first step in configuring the Setup menu is to select the protocol being used on the line.

The Advisor can monitor and simulate BOPs, COPs, and BSC protocols and NRZI (a bit-oriented line encoding scheme). In bit-oriented setups, the Advisor performs automatic zero bit insertion/extraction.

Move the cursor to the protocol field and, using the sofkeys, select the protocol being used on the line. When you select a particular protocol, the other fields change to let you make selections which are specific to that protocol.

- Make the appropriate selections for the other fields in the Setup menu. The selections available for the other fields are described in the next sections "Setup Menu Selections for BOPs," "Setup Menu Selections for COPs," and "Setup Menu Selections for Bisync."

---

## Setup Menu Selections for BOPs

HDLC and SDLC are bit-oriented protocols. When either of these is selected as the protocol, the following choices are available in the fields of the Setup menu:

Code	The bit-oriented menus allow ASCII 8, EBCDIC or, using Hex 8, any 8-bit data code.
Display	There are six display formats that are available for bit-oriented protocols. These are: Two Line, DTE only, DCE only, Data and State, Frame, and Packet.
Bits/Sec	Data capture rates from 50 bps to 64 Kbps are available. Except for NRZI, all the selections are supported. NRZI will not work at 16000, 12000, 2000, or 50 bps.
Error Check	CRC-CCITT preset 1 or preset 0.
Mode	All bit-oriented protocols are synchronous. In NRZI mode, the clock is encoded within the data. When NRZI mode is selected, the Advisor will derive its receive clocks from the data on each channel. Also available is EXT NRZI (data using the RC and ETC clock leads).
DTE Clock	DTE data can be synchronized to either a DCE or DTE clock. If this selection is incorrect, only DCE data will be displayed.
Ext Addr (HDLC)	HDLC allows an extended address field. When an additional address octet (byte) is to follow, the first or least significant bit of the address octet is set to 0. The last address octet in a series has the LSB set to 1. Use Frame display format to see the extended address.
Ext Ctrl (HDLC)	HDLC allows a 16-bit control field to handle larger N(S) and N(R) counts. Use Frame display for extended control field.

---

## Setup Menu Selections for Bisync

When Bisync is selected as the protocol, the following choices are available in the fields of the Setup menu:

Code	EBCDIC, Transcode, HEX, and ASCII 7 and ASCII 8 are available.
Display	DTE, DCE, Two Line, and Data and State display formats are available.
Bits/sec	The bit rates for BSC are from 50 bps to 64 Kbps.
Error Check	Select LRC or CRC-16 for ASCII or EBCDIC, and select LRC or CRC-12 for Transcode.
Mode	BSC is synchronous, half-duplex only. The CHAR protocol should be used for full-duplex synchronous COPs.
DTE Clock	The DTE clock can be supplied by the DTE or DCE.
Parity	The Advisor automatically sets correct parity for the chosen code: odd parity for ASCII 7, none for EBCDIC and Transcode. In the simulate mode, BSC is sent with the correct parity. However, if 'send' characters are specified in hex or binary, the parity is allowed to be different from the setup selection.
Sync on	The Advisor automatically chooses the correct sync characters for each data code. The sync characters are: $3_2 3_2$ (EBCDIC), $1_6 1_6$ (ASCII), or $3_A 3_A$ (Transcode). The Advisor requires at least two sync characters for proper framing.
Suppress	The BSC menu lets you suppress most combinations of text, control characters (blue characters on keyboard), idles ( $0_0$ ), and nulls ( $F_F$ ) from the display. However, suppressed characters are not deleted from the capture buffer.
Bit sense	Either normal or inverted.

---

## Setup Menu Selections for COPs

The Char menu is a general purpose setup menu used to capture most character-oriented protocols, synchronous or asynchronous. There are many codes available. You can select all the parameters to go with your data code. Of course, you can also create setups which make no sense: e.g., an 8-bit data code with a CRC-12 error check or synchronous Baudot.

Using COPs, you can see all bits on the line in synchronous mode if you set the Sync On field to sync on idles.

---

### NOTE

The Advisor does not perform zero bit insertion or extraction for bit-oriented protocols when in the Char setup.

When Char is selected as the protocol, the following choices are available in the fields of the Setup menu:

Code	You can select and define: ASCII8, Hex8, ASCII7, Hex7, Hex6, EBCDIC, Transcode, Hex5, IPARS0, IPARS1, Baudot, or EBCD. Do not make either IPARS selection unless you have loaded IPARS_MEC or the results may be incorrect.
Display	Lets you select the display format: Two Line, DTE Only, DCE Only, or Data and State.
Bits/sec	From 50 bps to 64 Kbps synchronous. From 50 bps to 38.4 Kbps asynchronous. Extended asynchronous available on the ROM Applications makes 56 Kbps and 64 Kbps available. Up to 256 Kbps asynchronous with the HS capture application.
Error Check	Select None, LRC, CRC-6, CRC-12, or CRC-16.
Mode	Select synchronous, monosynchronous, or asynchronous (1, 1.5, or 2 stop bits during simulation). The Advisor needs only one stop bit for asynchronous monitoring, even if more are present.

## Testing with the Low Speed Advisor

### Using the Setup Menu

DTE Clock	Specifies that the DTE clock source be supplied from the DTE or DCE.
Parity	None, Even, Odd, Ignore.
Transparent Text Char	You can define a transparent text character in either hex or text. The Advisor does not see the character for drop sync or error checking conditions. Same as DLE in BSC.
Sync on	Selects the sync characters for proper framing. The Advisor requires at least two sync characters (or one for monosync setup) to capture data when monitoring or simulating character oriented protocols. In monosync, it is very important the sync pattern not be found in the data stream.
Drop sync after	Tells the Advisor when to drop sync (stop bringing in data) and start looking for sync characters again.
Start on/ Stop on	Error checking starts on the character immediately after either of the 'start on' characters, but includes the 'stop on' character. The fourth 'stop on' character is an intermediate text character (ITB). The first three 'stop on' characters normally cause sync to be dropped but the ITB character causes the channel to remain in sync. For IPARS and other 6-bit codes, setting the most significant bit in a 'stop on' character to 1 (e.g., changing $0_D$ to $8_D$ ) will cause characters which were ITBs not to be ITBs, and vice versa. Press <b>CTRL + /</b> to enter an ITB from the keyboard (US).
Suppress	Lets you suppress most combinations of text, control characters, idles ( $0_0$ ), and nulls ( $F_F$ ) from the display. However, suppressed characters are not deleted from the buffer.
Bit Order/Sense	In most protocols the least significant bit (LSB) is sent first and data is not inverted. However, some protocols (e.g., IPARS) may be different, so the char menu provides bit order and bit sense selections. Hex setup menu entries are always entered in normal bit order and sense. For example, because the standard IPARS is inverted, syncs would be entered as $3_F 3_E$ even though they are $0_0 2_0$ .

The following sections provide more information on making selections in the

COPs Setup menu:

## Hexadecimal Entry and Parity

There are several fields in the Char Menu which let you make hex entries:

- sync on
- drop sync
- transparent text
- start on/stop on

When you make a hexadecimal entry in one of these fields, the parity bit is Determined by hexadecimal entry, not the parity setup selection.

**Parity Example.** When even parity is used with ASCII 7, the sync characters should be  $^9_6^9_6$ , rather than  $^1_6^1_6$ . Of course, your line may still use  $^1_6^1_6$ , even though this would result in a parity for sync characters that is different from other characters.

For hexadecimal entries, the resulting parity bit conforms to the following rules:

- For data codes of 7 bits or less (e.g., ASCII 7 or Baudot) the parity bit is not automatically changed to conform with the parity setup selection.
- For 8-bit data codes (e.g., ASCII 8 or EBCDIC) the parity bit always conforms to parity setup selection.

## Sync Characters

The Sync on selection determines what sync characters the Advisor looks for. Unless the sync pattern is correct, the Advisor will not capture data. The Advisor requires at least two sync characters (or one sync character in monosync setup) to capture data when monitoring and simulating.

When you do not know the sync characters, select Sync on Idles to capture line data even without the correct sync characters. Auto Configure can find the correct Sync on characters. You will need to use Bit Shifting in the Examine Data menu to find the correct framing.



---

**NOTE**

---

The Advisor assumes all character-oriented protocols idle in FF. If your line uses some other condition, you must sync on that condition to capture all data on the line.

### **Drop Sync (Synchronous mode only)**

The Drop sync field determines where the Advisor drops sync and begins looking for sync characters. If the Advisor did not drop sync, it would bring in all activity on the line, including idles, and not resync properly.

**Drop Sync Example.** Drop sync 0 chrs after None

Select seven characters on which to drop sync. The first character is the 'within text' character. The Advisor only looks for this character if you have chosen 'error checking.' Thus, if you Start on STX and Stop on ETX, the Advisor looks for the 'within text' character between STX and ETX.

To store all data, including idles, enter Drop sync 0 chrs after None. Then the Advisor never drops sync and brings in all line data, including idles.

### **Drop Sync and Error Checking**

The Drop sync selection interacts with the Error check selection in the following ways:

- The first Drop sync character specifies 'within text.' The Advisor looks for this character between the 'Start on' and 'Stop on' error checking limits. When error checking is 'none,' all text is outside, and the Advisor does not look for the first character (except IPARS).
- The first, or 'within text,' character takes precedence over the six 'outside text' characters. If the same character occurs both inside and outside the Start on and Stop on limits, the Advisor drops sync outside text.
- With error checking, the Advisor always drops sync after the BCC character(s) if it cannot find a 'within text' character. For example, if you select CRC-16 error checking, with 'Start on STX' and 'Stop on ETX,' the Advisor drops sync after the two characters following ETX.

**Drop Sync Error Checking Example.** Drop sync 1 chrs after  $B_B F_F F_F F_D^5 A_4 B_3$  causes the Advisor to drop sync one character after the first  $B_B$  character within the specified error checking limits. If the Advisor does not find the specified 'within text' character, it drops sync either one character after the BCC character(s) or one character after one of the six 'outside text' characters, whichever appears first. A Drop sync 0 after  $B_B F_F F_F F_D^5 A_4 B_3$  causes the Advisor to drop sync immediately after the first  $B_B$  character within the specified error checking limits or 0 characters after one of the other characters.

---

## Utilities for the Setup Menu

### Setting Up User Defined Bit Rates

There are two methods for setting up User Defined Bit Rates. The first will set up Toolkit with a UDBR icon in the low speed window and automatically load the file for the user. The second is more general in that it brings the UTILDISK directory into the low speed startup so the user can, from SETUP, select the UDBR or any other file in that directory.

Use the following procedure to place a UDBR page icon in low speed screen:

Step #	Action	Remarks
1	Select Low Speed Analyzer	to get to the low speed folder
2	Press F5	Toolkit Setup
3	Highlight Autoconfigure with the arrow keys	(top row, last on the right)
4	Press F1	Add Program
5	Fill out the following fields as shown: Label: UDBR Program Path: c:\hptools\tools\hp4959a.hpe Parameters Auto-load .MEN/M&D: NO Auto-load .app: YES Auto-run: NO Config File: c:\hptools\config\udbr.pdb Press F10 Startup Directory: c:\hptools\startup Comments: User Defined Bit Rate Special	then press the down arrow then press the down arrow press ENTER to configure the sub list then press the down arrow then press the down arrow then press the down arrow to return to previous screen then press the down arrow
6	Press F10	to exit the configuration

## Testing with the Low Speed Advisor Using the Setup Menu

- |    |  |                          |
|----|--|--------------------------|
| 7  | Press the right arrow key once<br>(this must be an empty folder) | to realign Toolkit icons |
| 8  | Press F3   | Delete                   |
| 9  | Press ENTER  | answer OK                |
| 10 | Press F10  | Exit Setup               |

Use the following procedure to allow the UTILDISK directory access in low speed startup:

Step #	Action	Remarks
1	Select Low Speed Analyzer	to get the low speed folder
2	Select PROTOCOL ANALYZER	to get to the green screen
3	Press F7	MORE
4	Press F4	MASS STORE
5	Press F9	CONFIG (blue screen)
6	Enter path into field: c:\hptools\utildisk	writes over the STARTUP file
7	Press F10	EXIT CONFIG (blue screen)
8	Press F2	DIR (green screen, files in directory are listed)
9	Press F9	CONFIG (blue screen)
10	Press F2	MASS STORE (blue screen, this bring up directory)
11	Cursor to desired file	choose UDBR.APP for the User Defined Bit Rate application
12	Press F7	COPY FILE (screen shows two paths, SOURCE is your file selected)
13	Enter the destination path: c:\hptools\STARTUP	
14	Press F10	OK (file copy bar will show completion)
15	Press F10	EXIT CONFIG
16	Press F8	back to the green screen
17	Press F10	EXIT DBM
18	Press F10	EXIT CONFIG
19	Press F8	EXIT

To run the User Defined Bit Rate application, from the top level green screen, select MORE, MASS STORE, select UDBR, LOAD, EXECUTE, then SETUP to set the bit rate.

---

## Using Auto Configure

Rather than using the Setup menu to tell the Advisor what protocol, data code, data rate, and other line parameters are being used on the line, you can use Auto Configure to let the Advisor evaluate the line and configure itself. Auto Configure evaluates data, determines the setup based on the parameters it finds, and puts the Advisor in the monitor mode.

Auto Configure evaluates data on the line and determines what kind of protocol is being used. It can identify character-oriented protocols (COPs), Bisync (BSC), and bit-oriented protocols (BOPs) such as SDLC (NRZ or NRZI) or HDLC (X.25). Then it determines the appropriate data code such as ASCII, EBCDIC, or Baudot. It cannot find IPARS or any inverted data cases. Data rates can be determined from 50 bps to 38.4 Kbps for asynchronous and 1200 bps to 64 Kbps synchronous. More information on how Auto Configure works is given in the section "How Auto Configure Works."

---

## Starting Auto Configure

Once you have connected the Advisor to the line and you have selected the appropriate interface using the Run menu, you can use the following procedure to start Auto Configure:

1. If you are not already at the Low Speed WAN Interface (4959) menu, select **Low Speed Analyzer** in the Toolkit by pressing **ENTER**, and then select **Protocol Analyzer** by pressing **ENTER**. This brings up the Low Speed WAN Interface (4959) menu.
2. Press **F1** (Auto Confg).

This tells the Advisor to evaluate the line parameters, identify the presence and speed of clocks, look for common sync characters, identify parity and character length, and put these results into the Setup menu.

## Testing with the Low Speed Advisor Using Auto Configure

---

### NOTE

---

A blinking asterisk is displayed whenever Auto Configure is working. This indicates the instrument is still checking line data.

If a good match is found, the Advisor briefly shows the Setup menu with the new parameters, goes into the monitor mode, and begins displaying data. If a good match is not found, the previous setup is restored. For suggestions on what to do if Auto Configure does not find a good match, see "Using Auto Configure as a Starting Point" and "What to Do if Auto Configure Does Not Work."

3. You can press the (Summary) softkey to review the setup results at any time. To change the display format, or any other setup parameter, halt the run, and go to the Setup menu to modify the setup.

---

## How Auto Configure Works

This is the process that the Advisor uses during Auto Configure:

### Synchronous Data

The Advisor first looks for a clock to determine whether the data is synchronous or asynchronous. When a clock is present on the line, the Advisor then:

1. Determines the data rate.
2. Looks for idle types. When the data idles in NRZI 7E, the Advisor automatically sets up in SDLC EBCDIC.
3. Sets up for synchronous BOPs when the data idles in non-NRZI 7E.
4. Sets the data code and parity and then checks for BSC when the data idles in FF. If the data is not BSC, it sets up for synchronous COPs.
5. If Auto Configure does not complete the setup within 15 seconds, it repeats the process and tries to auto configure again.

## Asynchronous Data

When there is no clock on the line, the Advisor then:

1. Determines the data rate.
2. Looks at idles. If the idles are NRZI, the setup is set at SDLC EBCDIC.
3. Determines how many bits per character if the data idles in FF. The setup is made in ASYNC COPs depending on the bits/character.
4. If Auto Configure stops at any step for 45 seconds, it tries to auto configure again.

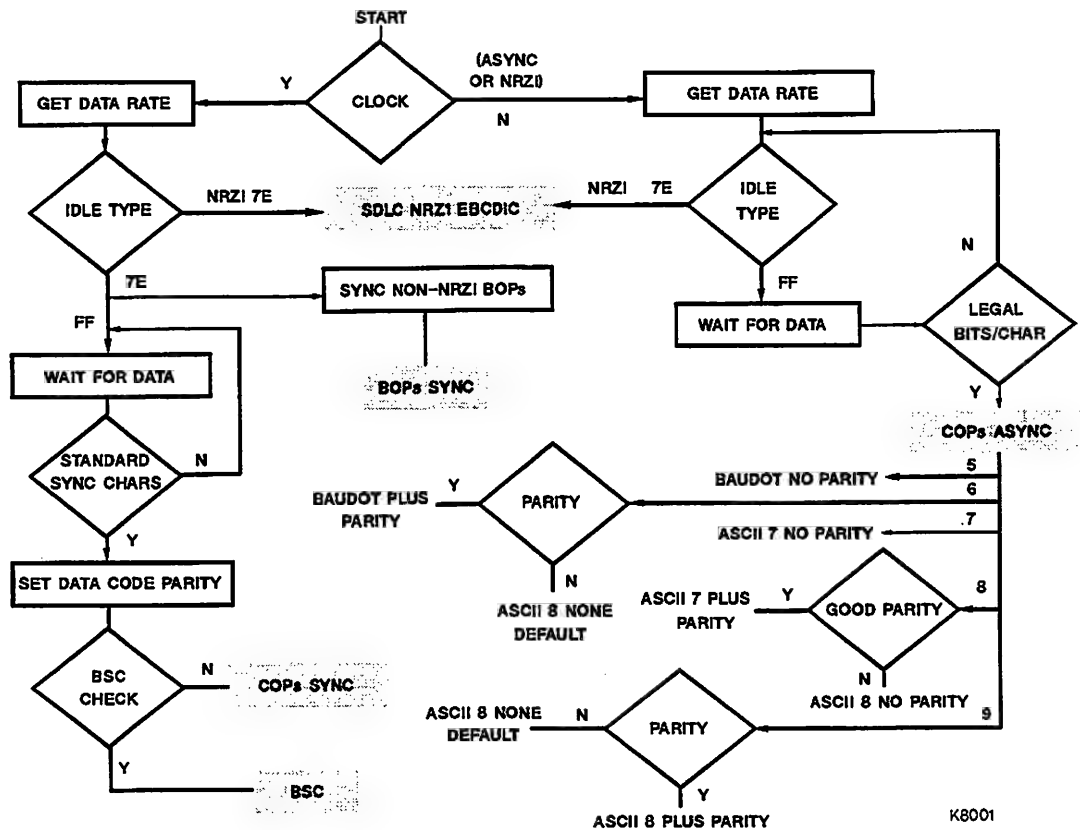


Figure 4-2: Auto Configure Algorithm

---

## Using Auto Configure as a Starting Point

Auto Configure works with most protocols and data codes; however, it might not find all the parameters if the protocol is nonstandard, there is insufficient information, or the data present is not random. Even if Auto Configure does not find all the parameters, it can still provide a starting point for your setup because it usually finds some of the line parameters. The setup parameters that Auto Configure finds are displayed as they are found, but you must reenter these parameters in the Setup menu if Auto Configure completes only a partial setup.

### Bit-Oriented Protocols (BOPs)

Auto Configure will set up synchronous, Non-Return to Zero(NRZ), and Non-Return to Zero Inverted (NRZI) BOPs. BOPs are assumed to idle the line in flags (7E). BOPs will be setup as:

**Table 4-1: BOPs Setup from Auto Configure**

Protocol	Data Code	Parity
X.25	ASCII8	none
HDLC	ASCII8	none
SDLC	EBCDIC (including clocked NRZI)	none

All BOPs default to the Frame display format.

When you are monitoring a BOP line, line indicators should be flashing with clock activity except in the case of monitoring an NRZI line (when simulating NRZI, a clock is put on the interface).

If you use Auto Configure for your initial setup, you need to change the setup in the following cases:

- HDLC with Extended Address or Control -- Change the protocol to HDLC with the following setup:

Ext Addr and/or Ext Ctrl: On

Display:Frame

- X.25 Packets if the address is not  $0_1 0_3$  -- If the protocol is X.25, change the setup to the following:

Protocol: X.25

Display: Packet

You can use any of the six display formats for BOPs. For frame (level 2) decoding, use the Frame display format. For packet (level 3) decoding, use the Packet display format.

To observe extended address and control on HDLC lines, go to the Setup menu and change the protocol to HDLC. Turn on extended address and/or extended control, and change the display format to Frame.

## Character Oriented Protocols (COPs)

Auto Configure always selects the Char setup for character oriented protocols, unless it finds a match with the BSC setup. The sync and control characters in COPs must be standard (i.e., ASCII sync =  $1_6 1_6$  and EBCDIC sync =  $3_2 3_2$ ). COPs must idle the line in FF. COPs will be setup as follows:

**Table 4-2: Synchronous COPs Setup from Auto Configure**

Protocol	Data Code	Parity	Sync on	Err Chk
BSC	ASCII8	none	$1_6 1_6$	LRC or CRC16
BSC	ASCII7	odd	$1_6 1_6$	LRC or CRC16
BSC	EBCDIC	none	$3_2 3_2$	LRC or CRC16
CHAR	EBCDIC	odd/even	$3_2 3_2$	
CHAR	EBCDIC	none	$3_2 3_2$	
CHAR	ASCII8	odd/even	$1_6 1_6$	
CHAR	ASCII8	none	$1_6 1_6$	
CHAR	ASCII7	odd/even	$1_6 1_6$ or $9_6 9_6$	
CHAR	ASCII7	none	$1_6 1_6$	



Testing with the Low Speed Advisor  
Using Auto Configure

**Table 4-3: Asynchronous COPs Setup from Auto Configure**

Protocol	Data Code	Parity
CHAR	ASCII8	odd/even/none
CHAR	ASCII7	odd/even/none
CHAR	Baudot	odd/even/none

All COPs will default to the Two Line display format.

---

## What to Do if Auto Configure Does Not Work

If Auto Configure does not work, do the following:

1. Exit Auto Configure by pressing **F8** (Halt/Exit).
2. Go to the Setup menu by pressing **F2** (Set Up).
  - a. Try an 8-bit code, no parity, and no error checking.
  - b. To monitor line data when you do not know the sync character, select Sync on idles (F<sub>r</sub>) and Drop sync 0 chrs after None.
  - c. To store all data, including idles, enter Drop sync 0 chrs after None. Then the Advisor never drops sync and brings in all data, including idles.
3. After making the above selections in the Setup menu, exit the Setup menu by pressing **F8** (Halt/Exit).
4. Then go to the Run menu and select (Monitor Line). This causes the Advisor to monitor the line and to store data to the capture buffer.
5. Press **F8** when you want to stop the run.
6. Go to the Examine Data menu to view the data in buffer.

---

**NOTE**

---

The Advisor assumes that all character-oriented protocols idle in FF. If your line uses some other condition, you must sync on that condition.

The buffer data may look meaningless because of incorrect character framing since the Advisor randomly framed the first character captured. To make the data readable, go to the Examine Data menu and select (Bit Shift) to see the data. Bit shifting does not work when data is brought in Most Significant Bit (MSB) first or if any suppress functions are selected. The Advisor does not shift through the parity bit. Unless you use a code with no parity, you must use trial and error to find the correct framing.

If part of the data still does not look correct with bit shifting, change the data code to one without parity. Then, you can determine the correct sync characters. Change the Sync on selection to these characters.

### **Eliminating Superfluous Data**

When you have found the correct framing, you can eliminate idles so the buffer will not fill with them. To eliminate idles in 8 or 9-bit data codes, select Drop sync 0 chars after  $F_F F_F F_F F_F F_F F_F$ . To eliminate idles in codes with frame sizes less than 8 bits, you must enter the correct number of 1's in any drop sync byte after the first byte (e.g.,  $7_F$  for a 7-bit code or  $3_F$  for a 6-bit code). In other words, you must enter the correct character and frame size for the idle character.

Testing with the Low Speed Advisor  
Using Auto Configure

**Table 4-4: Character Frame Sizes vs. Data Code**

Data Code	No Parity	Even or Odd Parity	Ignore Parity
Hex 5	5 bits	6 bits	6 bits
Baudot	(no parity bit)	(including parity bit)	* (parity bit=0)
Hex 6	6 bits	7 bits	7 bits
EBCD	(no parity bit)	(including parity bit)	* (parity bit=0)
IPARS			
Transcode			
Hex 7	7 bits	8 bits	8 bits
ASCII 7	(no parity bit)	(including parity bit)	* (parity bit=0)
Hex 8	8 bits	9 bits	9 bits
ASCII 8	(no parity bit)	(including parity bit)	* (parity bit=odd)
EBCDIC			

\* These settings are forced during simulation.

### Unusual Protocol Settings

Following is a "build-your-own" menu for Character Oriented Protocols (COPs). Select (Char) as the protocol in the Setup menu. Then use this table as reference, and enter the settings given to the right of the protocol for which you want to set up.

**Table 4-5: Unusual Protocol Settings**

Protocol	Code	Parity	ErrChk	Sync Char	Transparent Text Char	Mode
Burroughs BASIC	ASCII 7	odd	LRC	$\overset{1}{6}\overset{1}{6}$	$d_1$	Sync Async 1
Burroughs	ASCII 7	odd,SYNC	LRC	$\overset{1}{6}\overset{1}{6}$	None	Sync (or Async)
Poll-Sel		even,ASync				Async1
HASP	EBCDIC	None	CRC-16	$\overset{3}{2}\overset{3}{2}$	$d_1$	Sync
IPARS	IPARS	None	CRC-6	$\overset{3}{F}\overset{3}{E}$	None	Sync Bit-sense invert Bit order-MSB first
MODE 4c	ASCII 7	odd	LRC	$\overset{1}{6}\overset{1}{6}$	$d_1$	Sync
UNISCOPE	ASCII 7	odd,SYNC	LRC	$\overset{1}{6}\overset{1}{6}$	$d_1$	Sync Async 1
VIP7700	ASCII 7	odd,SYNC	LRC	$\overset{1}{6}\overset{1}{6}$	$d_1$	Sync

---

## Using Monitor Programs

Rather than just simply monitoring the line, a more effective way to analyze data is to set up the Advisor to look for specific events. By doing this, the Advisor can 'trigger' on certain events and gather data useful for analysis. Then, the captured data is easy to evaluate.

The Advisor is most efficient if you:

- Write monitor or simulate programs to observe specific events on the line.
- Load previously saved programs and reuse them.
- Load one of the pre-written programs in the Toolkit.

**Ease of Programming.** The capability to select trigger events lets you efficiently analyze the data you are capturing. Triggers are events you want the Advisor to look for, such as characters, lead changes, or errors.

Once the Advisor finds the designated event, it can beep, highlight the event in the buffer, count events, measure time between events, send data and set leads (simulate mode only), or display a message.

**Defining Trigger.** Triggers must be defined as a reference point. You can define triggers with 'when' statements in your programs. The 'when' statement is used in conjunction with the desired trigger action.

You must tell the Advisor precisely when to start or stop an action or the measurement may be misleading or inaccurate. To use a trigger event as a point of reference, action commands must follow 'when' statements. For example, to start a timer when a certain event occurs, place the 'when' statement first.

---

### NOTE

This section contains an introduction to writing monitor programs, and it contains several example programs. See chapter 11 for a more complete programming reference.

---

## Using the Monitor Menu to Write a Monitor Program

The Monitor menu lets you easily write monitor programs by providing softkey selections.

### RTS On to CTS On Program

For example, the following program measures the time from RTS on to CTS on.

1. If you are not already at the Low Speed WAN Interface (4959) menu, select **Low Speed Analyzer** in the Toolkit by pressing **ENTER**, and then select **Protocol Analyzer** by pressing **ENTER**. This brings up the Low Speed WAN Interface (4959) menu.
2. Press **F3** (Mon Menu).
3. Select the (When Trig), (Lead), (RTS), and (On) softkeys. This defines a trigger event that is satisfied when RTS lead goes on.
4. Press **ENTER** to start Block 2.
5. Select the (Start), (Timer), and (1) softkeys.
6. Select the (When Trig), (Lead), (CTS), and (On) softkeys. This specifies a second trigger condition.
7. Press **ENTER** to start Block 3.
8. Select the (Stop) and (Timer 1) softkeys. When the second trigger event is satisfied (CTS goes on), the test stops Timer 1. The result in Timer 1 will be the time interval between RTS On and CTS On.
9. Press **F8** (Halt/Exit) to exit the Monitor menu.
10. Make sure you have connected the appropriate interface connector on the Advisor to the line you want to test, selected that interface in the Run menu, and used the Setup menu to setup the Advisor. Once these things are done, you can press **F5** (Run Menu) and then **F1** (Monitor Line) to run the monitor program.

## Testing with the Low Speed Advisor Using Monitor Programs

Here is what the program looks like:

```
Block 1
When Lead RTS goes On      Timer 1 starts measuring
    then goto Block 2
Block 2
Start Timer 1

When Lead CTS goes On      Timer 1 stops measuring
    then goto Block 3
Block 3
    Stop Timer 1
```

Notice the Start Timer and Stop Time statements are preceded by When statements. This causes the Advisor to set a trigger on these lead changes when the specific block is active.

### Parity Errors Program

The following program counts the number of parity errors on both the DTE and DCE lines and keeps track of the time the test has run (in minutes).

```
Block 1
When DTE X
    or
When DCE X
    then goto Block 2
                                Triggers on any "don't
                                care" character

Block 2
Start Timer 5
                                Timer 5 starts when any
                                character is monitored
                                on DTE or DCE

Block 3
When Error Parity on DTE
    then goto Block 4
When Error Parity on DCE
    then goto Block 5
When Timer 5 is > 59999      Timer 5 counts to 1
    then goto Block 6        minute (in milliseconds)
```

Block 4	
Increment Counter 1	<i>Counts DTE parity errors</i>
and then	
Goto Block 3	
Block 5	
Increment Counter 2	<i>Counts DCE parity errors</i>
and then	
Goto Block 3	
Block 6	
Increment Counter 5	<i>Total test time (in</i>
and then	<i>minutes)</i>
Reset Timer 5	
and then	
Goto Block 2	

## Level 2 When String Program

The following program counts the number of level 2 information frames occurring on the DTE side of a link. It demonstrates that how you can enter level 2 programs using softkey assistance.

---

### NOTE

---

The protocol field in the Setup menu must be set for a bit-oriented protocol (for example, HDLC, SDLC, or X.25) to use level 2 assisted programming.

1. If you are not already at the Low Speed WAN Interface (4959) menu, select Low Speed Analyzer in the Toolkit by pressing **ENTER**, and then select Protocol Analyzer by pressing **ENTER**. This brings up the Low Speed WAN Interface (4959) menu.
2. Press **F3** (Mon Menu).
3. Select (When Trig) and then select (DTE) to define a trigger for the DTE.



## Testing with the Low Speed Advisor Using Monitor Programs

HEWLETT-PACKARD
WED JAN 1 00:00:00.1991

Monitor

Block 1

When DTE ☐

then goto Block 2

62 trigs left Text

Text
Hex
Bi-  
nary
Don't  
Care
Not

Levl  
2

MORE

F1 F2 F3 F4 F5 F6

1 
2 
3 
4 
5 
6 
7 MORE

8 (HALT)  
EXIT

9 Config

0 Exit to  
Toolkit

PC0306

**Figure 4-3: Defining a Trigger**

4. Select (Levl 2) to enter the level 2 assist mode. The beginning of a frame is displayed with the start flag and the first address character (in hex).
5. For this example, the address is a don't care, so select (Don't Care).

## Testing with the Low Speed Advisor Using Monitor Programs

HEWLETT PACKARD
WED JAN 1 00: 00: 00. 1991

```

Monitor
Block 1
When DTE 1X: 00000000
then goto Block 2
GO trigs left I - frame
I- S- U- Don't
frame frame frame Care
        
```

F1
F2
F3
F4
F5
F6

1 
2 
3 
4 
5 
6

7 MORE
8 (HALT)  
EXIT
9 Config

1
0

Exit to  
ToolKit

PC0307

**Figure 4-4: Selecting an Information Frame**

6. Select (I-frame) to select an information frame.
7. The Advisor prompts you for the send sequence number, N(S). Select (Don't Care).
8. The Advisor prompts you for the poll/final bit, P/F. Select (Don't Care).

## Testing with the Low Speed Advisor Using Monitor Programs

HEWLETT-PACKARD WED JAN 1 00:00:00.1991

Monitor  
Block 1

When DTE  then goto Block

60 trigs left Text P/F = X N <R> = 0

Use Keyboard Don't  
-decimal entry- Care

F1 F2 F3 F4 F5 F6

1  2  3  4  5  6  7 MORE 8 HALT EXIT 9 Config 10 Exit to Toolkit

PC0308

**Figure 4-5: Defining Receive Sequence Number**

9. The Advisor prompts you for the receive sequence number, N(R). Select (Don't Care). As soon as you make the N(R) entry, the eight-bit control field collapses to an equivalent representation. Notice that a don't care condition is displayed as an X within a box. This byte represents a control field. The question mark indicates the byte contains both don't cares, and 1's or 0's.
10. Press ↓ two times to go to Block 2. (The Advisor defaults with "go to Block 2," which is what we'll use in this example program.)
11. Select (Inc Ctr) and then select softkey (1) to select counter 1. Enter 1 from the keyboard to increment the counter by 1.
12. Select (and then), (MORE), (Goto Blk), and (1). The program now loops back to the beginning and looks for the next DTE Info frame.

---

## Using a Pre-Written Monitor Program Supplied in the Toolkit

In addition to writing your own monitor and simulate programs, there are several pre-written programs that you can use to make common tests on your line. These programs are available in the Toolkit folders. These tests can be loaded from the Toolkit and used as they are, or you can customize them for your own specific needs.

For consistency and simplicity, all programs in this library are stored with a common set of data communications parameters. These parameters can be changed in the Setup menu to suit your needs.

The setup parameters loaded with all library programs are:

- 9600 bps line speed
- ASCII7, Odd parity for async
- EBCDIC, DCE supplies DTE clock for SDLC
- ASCII8, DCE supplies DTE clock for X.25/HDLC
- Fox messages (have a variety of speeds, parity, and datacodes)

The following example shows how to load a program from the Toolkit's Data Communications Test library (provided with each Advisor). The example program counts the DCE and DTE characters for 1 minute (or 10 minutes) and is useful for checking link throughput, file sizes, etc.

1. If you are in the Low Speed WAN Interface (4959) menu, press **F10** (Exit to Toolkit), and then press **ENTER** (for Yes). This takes you back to the Toolkit.
2. Select 'Terminal Tests' (under the 'Device Tests') and press **ENTER**.
3. Select 'COUNTCHR' and press **ENTER**. This loads the pre-written monitor program, and then the Advisor returns to the Low Speed WAN Interface (4959) menu.
4. If you want to view or modify the program, press **F3** (Monitor Menu). To leave the Monitor menu, press **F8**.
5. When you are ready to run the program, press **F5** (Run Menu) and then **F1** (Monitor Line).

## Setting Up to Simulate

Besides monitoring, the Advisor can simulate a device on the line. To do this, you can:

- Write simulate programs to observe specific events on the line.
- Load previously saved simulate programs and reuse them.
- Load one of the pre-written simulate programs in the Toolkit.

**Ease of Programming.** The capability to select trigger events lets you efficiently analyze the data you are capturing. Triggers are events you want the Advisor to look for, such as characters, lead changes, or errors.

Once the Advisor finds the designated event, it can beep, highlight the event in the buffer, count events, measure time between events, send data and set leads (simulate mode only), or display a message.

**Defining Triggers.** Triggers must be defined as a reference point. You can define triggers with 'when' statements in your programs. The 'when' statement is used in conjunction with the desired trigger action.

You must tell the Advisor precisely when to start or stop an action or the measurement may be misleading or inaccurate. To use a trigger event as a point of reference, action commands must follow 'when' statements. For example, to start a timer when a certain event occurs, place the 'when' statement first.

Before you run a simulate program, however, you must connect the Advisor to the line and you must set up the Advisor. Use the following procedure:

1. If you want to connect the line to one of the internal interface connectors on the Advisor, connect the internal interface connector to the line using the appropriate Y-cable.

If you want to connect the line to the external interface connector, turn the Advisor off first.

---

**CAUTION**

---

Be sure to turn off the power before you attach an external pod.

- a. Connect the external connector to the line using the appropriate pod and Y-cable.
  - b. Turn the power back on, select Low Speed Analyzer and press **ENTER**.
  - c. Select Protocol Analyzer and then press **ENTER**.
2. Select the internal or external interface in the Run menu as described in "Selecting the Interface," earlier in this chapter.
  3. Press **F2** (Set Up) and configure for the line parameters as described in "Using the Setup Menu," earlier in this chapter.

Once the Low Speed Internet Advisor is connected to the line and is set up to match the line parameters, you can create a simulate program or load an existing simulate program and then run it.

---

**Using the Simulate Menu to Write Simulate Programs**

---

Using softkey assistance, you can create simulate programs much like you create monitor programs; however, simulate programs are written in the Simulate menu, rather than in the Monitor menu.

---

**NOTE**

---

This section contains an introduction to writing simulate programs, and it contains several example programs. See chapter 11 for a more complete programming reference.

Testing with the Low Speed Advisor  
**Setting Up to Simulate**

### **Example DTS and RTS Simulate Program**

The following program causes the Low Speed Internet Advisor to simulate a DTE. The program activates the DTR and RTS control signals and then sends data.

1. If you are not already at the Low Speed WAN Interface (4959) menu, select Low Speed Analyzer in the Toolkit by pressing **ENTER**, and then select Protocol Analyzer by pressing **ENTER**. This brings up the Low Speed WAN Interface (4959) menu.
2. Press **F4** (Sim Menu), and then select (DTE) to select DTE simulation.
3. Use either **↓** , **→** , or **ENTER** to move the cursor to Block 1.
4. Select (MORE), (Set Lead), (DTR), and (On).
5. Select (and then).
6. Select (MORE), (Set Lead), (RTS), and (On).
7. Select (and then) and (Send). Fill in the displayed frame (flags and FCS) with data you want to send.
8. Select (Halt/Exit) to go back to the Low Speed WAN Interface (4959) menu.
9. Once you have followed the procedure in "Setting Up to Simulate," you can select (Run Menu) and then (Simulate) to run the program.

Here is what the program looks like in the Simulate menu:

```
Simulate DTE

Block 1
Set Lead DTR On
    and then
Set Lead RTS On
    and then
Send 1ABCDEF GH GG
```

### **Level 3 When String Simulate Program**

The Send command is available only in the Simulate menu. The following example program is for X.25 simulation. A similar method of entry can be used to create a level 2 string program.

1. If you are not already at the Low Speed WAN Interface (4959) menu, select Low Speed Analyzer in the Toolkit by pressing **ENTER**, and then select Protocol Analyzer by pressing **ENTER**. This brings up the Low Speed WAN Interface (4959) menu.
2. Press **F2** (Set Up). Make sure that the X.25 protocol is selected, and then press **F8** (Halt/Exit).
3. Press **F4** (Sim Menu). Select (DTE) and then (Send).
4. Select (MORE) and then (Levl 3). The first two bytes are 0<sub>0</sub>. These are the level 2 address and control bytes, which default to 0.

---


#### **NOTE**

---

If you want to change the level 2 address and control bytes, move the cursor back to these bytes. You then drop out of the level 3 assisted mode. Select (Levl 2) for assistance in entering these bytes.




## Testing with the Low Speed Advisor Setting Up to Simulate

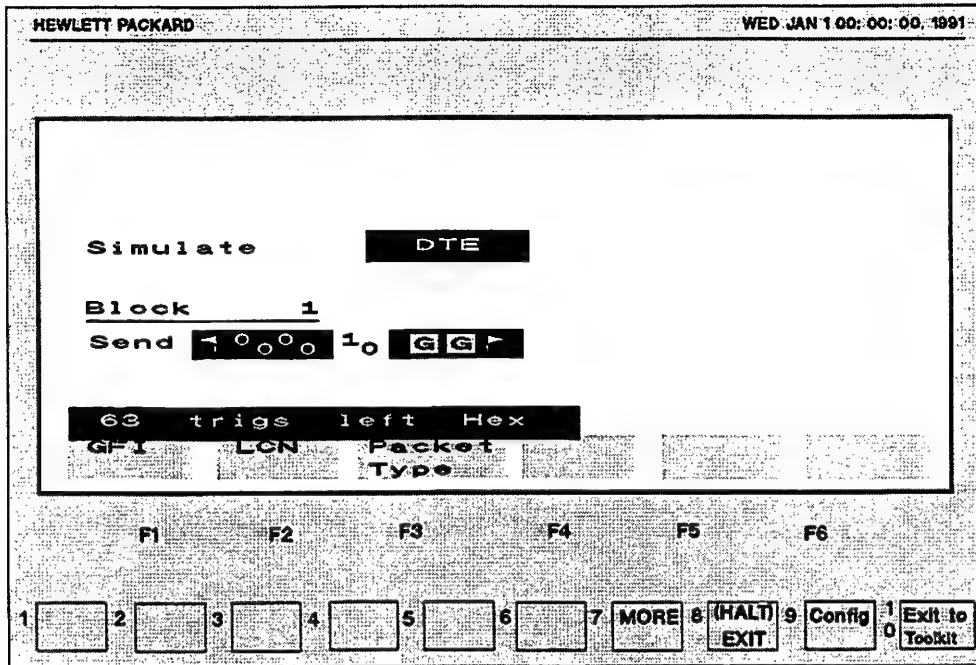

PC0313

**Figure 4-6: Selecting Level 3**

5. Select (GFI). This is the General Format Identifier. The far right byte is expanded to its binary components. The cursor is over the left-most bit, prompting you to enter the Q bit. Select the (0) softkey.
6. The cursor moves to the second bit from the left, prompting you to enter the D bit. Select the (1) softkey.

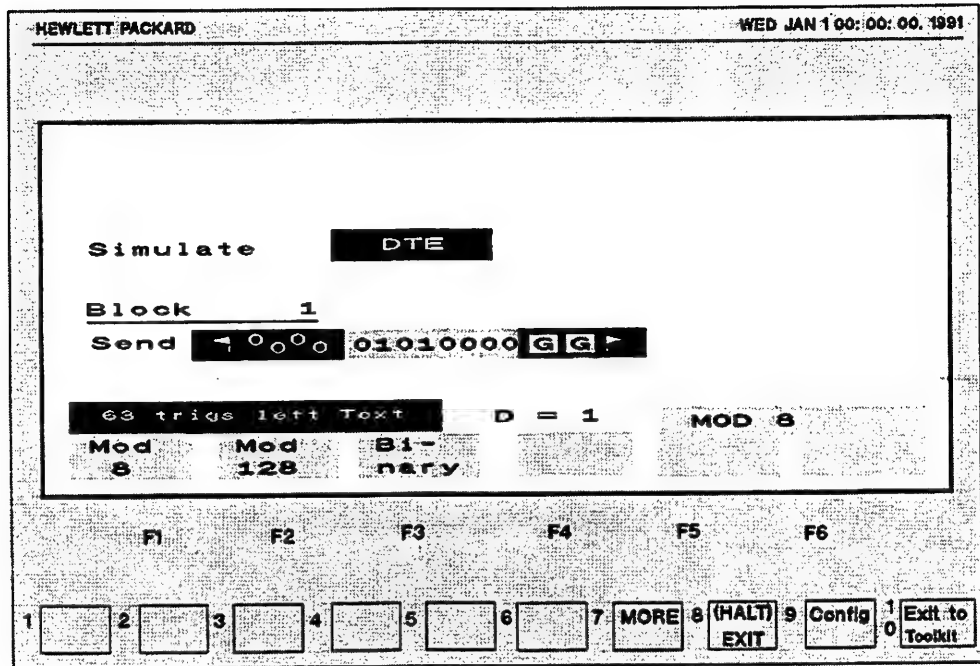

PC0314

Figure 4-7: Selecting GFI

7. The cursor now moves to the two-bit modulo field. Mod 8 is 01 binary and mod 128 is 10binary. Select (Mod 8).
8. The cursor now moves to the far right and prompts you to enter an LCGN. This is a four-bit field, so you can enter any number from 0 to 15. Type 09 (you must enter a leading zero before the 9). The GFI field collapses to <sup>5</sup><sub>9</sub>, and the next byte appears, prompting you to enter the LCN.
9. From the keyboard, type 155. You can enter any three decimal digits or any two hexadecimal digits for the eight-bit LCN field. If you enter a number greater than 255, the entry defaults to 255. The LCN field collapses to <sup>9</sup><sub>B</sub> (the hex equivalent of 155).

## Testing with the Low Speed Advisor Setting Up to Simulate

HEWLETT-PACKARD WED JAN 1 00:00:00 1991

Simulate DTE

Block 1

Send 00059E 00000000 GG

63 trigs left DATA LCN = 155

DATA CALL CALL ACPT RR RNR REJ


F1 F2 F3 F4 F5 F6

1 2 3 4 5 6 7 MORE 8 (HALT) 9 Config 10 Exit to Toolkit

PC0315

**Figure 4-8: Mod 8 and LCN in Level 3 Send String**

10. Select (Data) for the packet type. The right-most bit remains 0 and the prompt moves left to the three-bit P(S) field. Enter 7 for the P(S).
11. The cursor moves to the fifth bit from the right, prompting you to enter the M bit. Enter 0 for the M bit. The prompt now moves to the last three bits on the left, which is the P(R) field. Enter 5 for the P(R).
12. The packet-type byte collapses to its hex equivalent,  $A_E$ , and the cursor moves to the data field, prompting you to enter text.
13. From the keyboard type This is a data packet.

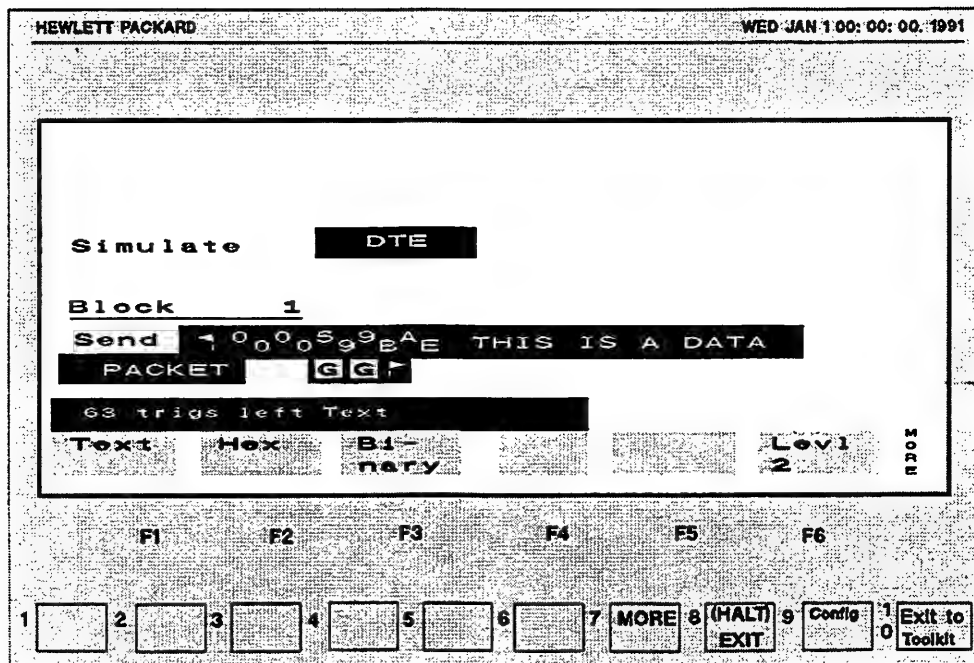

PC0316

**Figure 4-9: Entering Data in a Level 3 Send String**

14. Press **F8** (Halt/Exit) to return to the Low Speed WAN Interface (4959) menu. The Simulate program is automatically stored.

15. Once you have followed the procedure in "Setting Up to Simulate," you can send the string by pressing **F5** (Run Menu), and then **F3** (Simulate).

## Using a Pre-Written Simulate Program Supplied in the Toolkit

There are several pre-written Fox Message programs, available in the Toolkit, which use various data code, baud rate, and parity setups. They are located under the Terminal and Printer tests.

## Testing with the Low Speed Advisor

### Setting Up to Simulate

The following procedure loads the "FX24007E" Fox Message simulate program which checks the ability of asynchronous terminals and printers to receive and display data.

1. Connect the Advisor to the line as described in "Setting Up to Simulate." (If you want to just look at the program, you don't need to connect the Advisor to the line.)
2. If you are in the Low Speed WAN Interface (4959) menu, press **F10** (Exit to Toolkit), and then press **ENTER** (for yes).
3. Select **Terminal Tests** (under **Device Tests**) and press **ENTER**.
4. Select **FoxFlow Tests** and then press **ENTER**.
5. Select **FX24007E** and then press **ENTER**. This loads the program into the **Simulate** menu, makes the appropriate selections in the **Setup** menu, and starts the program running.

---

## Storing Information to Disk

There may be times when you want to store data you captured in the capture buffer so that you can analyze it later. For example, you may want to capture data at various times and then look for problems that occur at certain times on your network.

You can also store data directly to the hard disk while you are running at 64 Kbps or less. This lets you take advantage of the Advisor's larger hard disk buffer. See "Capturing Data to Disk While Running at 64 Kbps or Less" for information on how to capture data to the hard disk.

In addition to storing data, you can also save the state of the Advisor's menus, menus and data, and applications. You can save data, menus, menus and data, and applications to either the hard disk or to a floppy disk. See "Storing to a Floppy Disk" and "Storing to the Hard Disk" for procedures.

The Advisor stores different information depending on the file type you choose:

**Table 4-6: Information stored with Each File Type**

File Type	DOS Extension	Stored Information
Data	.BUF	Previously captured buffer data stored to disk or hard drive
Menu	.MEN	Setup, monitor, simulate and BERT menus
Menu & Data	M&D	Setup, monitor, simulate, BERT menu and data that was captured
Application Program	.APP	Application program resident in instrument memory
Extended Menu	.EXM	Setup, monitor, simulate, BERT, printer, data filter (including menus containing External NRZI or X.21 protocols)

---

## Storing to the Hard Disk

1. If you are not already at the Low Speed WAN Interface (4959) menu, select Low Speed Analyzer in the Toolkit by pressing **ENTER**, and then select Protocol Analyzer by pressing **ENTER**. This brings up the Low Speed WAN Interface (4959) menu.
2. Press **F9** (Config). The default hard disk drive, C : \HPTOOLS\STARTUP, is shown in the Current Mass Store Directory field.
3. Change the Current Mass Store Directory to C : \HPTOOLS\xxxx where "xxxx" is the directory that you want to store your file in. Make sure you use a valid path.
4. Press **F10** (Exit Config).
5. Press **F7** (MORE), and then press **F4** (Mass Store).
6. Press **F4** (Store).
7. Name the file you want to store (up to 8 characters).
8. Press **↓**, and press the softkey that corresponds to the file type. See Table 4-6 for what is actually stored in each file type. The proper extension is automatically added to the file name.

---

### NOTE

Always save captured data as type Menu and Data.

9. Press **↓** and enter a comment for the program. This is optional.
10. Press **F6** (Execute).

---

## Storing to a Floppy Disk

1. If you are not already at the Low Speed WAN Interface (4959) menu, select Low Speed Analyzer in the Toolkit by pressing **ENTER**, and then select Protocol Analyzer by pressing **ENTER**. This brings up the Low Speed WAN Interface (4959) menu.
2. Press **F9** (Config).
3. Insert a formatted floppy disk into the floppy disk drive.
4. Change the Current Mass Store Directory to A : \.
5. Press **F10** (Exit Config).
6. Press **F7** (MORE), and then press **F4** (Mass Store).
7. Press **F4** (Store).
8. Name the file you want to store (up to 8 characters).
9. Press **↓**, and press the softkey that corresponds to the file type. See Table 4-6 for what is actually stored in each file type. The proper extension is automatically added to the file name.

---

### NOTE

Always save captured data as type Menu and Data.

10. Press **↓** and enter a comment for the program. This is optional.
11. Press **F6** (Execute).



---

## Capturing Data to Disk while Running at 64K bps or Less

While running at 64 Kbps or less, you can store directly to the hard disk while running monitor or simulate programs. To do this, you merely add some additional commands to the program.

If you store to the hard disk, you can take advantage of the larger data buffer available in the hard disk. This is useful when the on-board 768 Kbyte RAM capture buffer is too small. The Advisor comes with a default disk buffer of 5 MBytes, which is already initialized.

To use a larger or smaller hard disk capture buffer, you must first initialize a new disk buffer. See the section, "Initializing a New Hard Disk Capture Buffer" in this chapter for more information.

---

### NOTE

The 768K on-board RAM buffer is optimized for high-speed data capture, including 256 Kbps. Use it whenever possible to ensure adequate capture performance.

---

### NOTE

Do not write directly to the floppy disk while monitoring or simulating. You can only write to the hard disk.

The following is an example of a monitor program that looks for RTS to go on and then starts capturing data to the hard disk:

1. If you are not already at the Low Speed WAN Interface (4959) menu, select Low Speed Analyzer in the Toolkit by pressing **ENTER**, and then select Protocol Analyzer by pressing **ENTER**. This brings up the Low Speed WAN Interface (4959) menu.
2. Press **F3** (Mon Menu).
3. Select (When Trig), (Lead), (RTS), and (On), and then press **ENTER**.
4. Select (Start) and then (Disc).

5. Press **F8** (Halt/Exit).

6. Press **F5** (Run Menu) and then **F1** (Monitor Line).

Data is stored to the hard disk.

---

**NOTE**

---

When you are done, you must use the Disk Buffer Extract menu if you want to permanently save the file. See "Saving Data Captured to Hard Disk During Run-Time." If you do not do this, the data is overwritten the next time you capture to the disk.

### Storing to Disk Example

Block 1

When Lead RTS goes On  
then goto Block 2

Block 2

Start Disk

## **Saving Data Captured to Hard Disk During Run-Time**

After capturing data to the hard disk during run-time, you must save the data to a DOS file. If you do not save the data to a file, it will be overwritten the next time you store data to the hard disk. It is a good idea to get in the habit of *ALWAYS* saving your data. To save the data, refer to the procedure in "Saving Data with the Disk Buffer Extractor." See "Disk Buffer Extractor Field Definitions" for more information on the Disk Buffer Extractor.

### **Saving Data with the Disk Buffer Extractor**

1. If you are not already at the Low Speed WAN Interface (4959) menu, select Low Speed Analyzer in the Toolkit by pressing **ENTER**, and then select Protocol Analyzer by pressing **ENTER**. This brings up the Low Speed WAN Interface (4959) menu.
2. Press **F9** (Config).
3. Press **F9** (Dsk Buf Extract). Buffer information is displayed telling you how much data was captured and when it was captured. If there is no data, the Advisor displays a message indicating no buffer exists.

HEWLETT PACKARD WED JAN 1 00: 00: 00. 1991

**Disk Buffer Extract**

Start Time: WED JAN 1 00: 00: 00. 1991  
End Time: WED JAN 1 00: 03: 36. 1991  
Disk drive: C:  
Bytes stored: 901120

**Macro View: time Size Bytes**

WED JAN 1 00: 00: 00. 1991	783360
WED JAN 1 00: 03: 36. 1991	117760

1 Micro View 2 Extract Block 3 4 5 6 7 8 9 0 Exit

PC0317

**Figure 4-10: The Disk Buffer Extract Menu**

4. Press **F2** (Extract Block) to convert the entire block of data that is captured into a file. You are prompted for a file name. Enter a filename and press **ENTER**.

**NOTE**

The file name must have an .m&d extension. The Advisor attaches the extension (you do not need to type it). When you enter the file name, include the drive, directory, and subdirectory.

Or, press **F1** (Micro View) to view smaller blocks of data.

## Testing with the Low Speed Advisor

### Storing Information to Disk

- a. After pressing Micro View, you can place several smaller blocks of data into a single data file. Place the cursor on the first block of data you want to save and press **F2** (Start Marking). The top of the screen displays the time stamp that you started marking on. The time stamp is attached at the end of the data block.
- b. Press **↓** until you reach the end of the block of data you want to extract. Press **F3** (Extract). The Advisor prompts you for a filename.
- c. Enter the filename and press **ENTER**.

---

#### NOTE

---

The file name must have an .m&d extension. The Advisor attaches the extension (you do not need to type it). When you enter the file name, include the drive, directory, and subdirectory.

A menu and data file is created. The comment for this menu and data file is the timestamp of the last block of data. You can repeat this procedure to extract more blocks of data in separate files.

### Disk Buffer Extractor Field Definitions

The Disk Buffer Extractor has Macro View and Micro View menus you can select from.

**Macro View.** You first enter the macro view screen. This displays the bytes that were captured, when they were captured, and where they are stored.

The Macro View screen has two windows. The top window contains the following information:

- Start Time - the first time stamp
- End Time - the last time stamp
- Disk drive - the active disk drive
- Bytes stored - the total amount of data stored
- Disk buffer size (bytes) - the size defined in the Disk Buffer Manager

The time stamp is attached at the end of the data block. The bottom window contains the Macro View of total time and total bytes.

**Micro View.** Only the bottom window changes in the Micro View screen. The Macro View time and byte information is detailed in smaller portions. You can select any part of the Micro View information using the Start Marking function.

When you press **F2** (Start Marking), you can move the cursor and select more blocks that can be extracted into one file. This allows you to selectively save data and define your files with only pertinent data.

When you have selected all of the data for a file, press **F10** (OK).

---

## Initializing a New Hard Disk Capture Buffer

The Advisor can store data from the line directly to a hard disk capture buffer. This is useful when the on-board 768 Kbyte RAM capture buffer is too small. The Advisor comes with a default disk buffer of 5 MBytes, which is already initialized.

To use a larger or smaller hard disk capture buffer, you must first initialize a new disk buffer. Initialization involves finding the largest continuous free space on the hard disk and allocating it to the disk buffer. Allocating contiguous space is necessary to keep up at high data rates under high utilization.

---

### NOTE

The 768K on-board RAM buffer is optimized for high speed capture, including 256 Kbps. Use it whenever possible to ensure adequate capture performance.

## Disk Buffer Definitions

**Largest Possible Disk Buffer.** The largest block of contiguous space available on the disk drive. If this is less than the total available disk space, you should pack the hard disk to eliminate fragmented files.

**Suggested Disk Buffer.** Either the largest possible disk buffer or half of the total available disk space, whichever is smaller.

## Testing with the Low Speed Advisor

### Storing Information to Disk

---

#### NOTE

---

Creating a disk capture buffer larger than half of the total available disk space is not recommended. Doing so may not leave enough disk space to store captured data after each run.

Disk capture buffer status shows whether or not a disk buffer already exists on the selected drive. It should show no disk buffer.

---

#### NOTE

---

Disk capture buffers should only be created on hard drives.

To initialize a new hard disk capture buffer, do the following:

1. If you are not already at the Low Speed WAN Interface (4959) menu, select Low Speed Analyzer in the Toolkit by pressing **ENTER**, and then select Protocol Analyzer by pressing **[ENTER]**. This brings up the Low Speed WAN Interface (4959) menu.
2. Press **F9** (Config).
3. Press **F8** (Dsk Buf Manager). Hard disk information is displayed at the top of the screen. Total available disk space is the amount of free space left on the disk drive.
4. To select the hard drive where the disk buffer is to be created, move the cursor to the Disk Drive Selection field and press **ENTER**, move the cursor to the desired drive and press **ENTER** again.
5. To select the size of the disk buffer, move the cursor to the Disk Buffer Size field. You can backspace over the default number and type the desired size into the field (in bytes). Press **ENTER**. The number is rounded down to the nearest valid value.
6. Press **F1** (Create Buffer).

---

**NOTE**

---

If a disk buffer already exists, a message is displayed. You must delete an existing buffer (using **F4**) before creating another buffer.

7. Press **ENTER** to confirm creating the indicated disk buffer.

---

**CAUTION**

---

Initializing a Disk Capture Buffer directly manipulates the disk drive's FAT table. This must not be done while running under Windows 3.0, OS/2, or most other similar Graphical User Interfaces (GUIs) or operating systems. Creating or deleting Disk Capture Buffers should only be done under DOS.

---

**CAUTION**

---

Do not use double spacing in DOS 6.0. It is incompatible with the runtime hard disk storage.

8. Press **F10** (Exit DBM), then **F10** (Exit Config).



**Testing with the Low Speed Advisor**  
**Storing Information to Disk**

---

**Evaluating Data**

## Evaluating Data

This chapter explains how to use the Examine Data menu to evaluate your captured data and how to apply programs to analyze, measure, and manipulate data. For each example and exercise, it is assumed that data is already available for analysis. The examples use data that is on your Utility disk, `c:\hptools\utildisk\demodata.m&d`.

The capture buffer is 768 Kbytes of memory dedicated to storing your data. It is used to hold your data until you can extract it and evaluate it. You can look at, examine, and measure the contents of the capture buffer in the Examine Data menu by scrolling through the data with the (Roll UP), (Roll Dn), (Next Page), and (Prev Page) softkeys. You can also analyze the contents of the buffer using monitor programs.

---

## Using the Examine Data Menu

Use the Examine Data menu to view buffer data. The following procedure uses the demonstration data, DEMODATA.M&D, from the Utildisk directory.

---

### Looking at Buffer Data

1. If you are not already at the Low Speed WAN Interface (4959) menu, select Low Speed Analyzer in the Toolkit by pressing **ENTER**, and then select Protocol Analyzer by pressing **ENTER**. This brings up the Low Speed WAN Interface (4959) menu.
2. Press **F9** (Config) and change the Mass Store directory to `c:\hptools\utildisk`.
3. Press **F10** (Exit Config).
4. Go to the Advisor Mass Store display by pressing **F7** (More) and then pressing **F4** (Mass Store).
5. Use the arrow keys to highlight the `demodata.m&d` file.
6. Press **F7** (More) until **F3** is labeled (Load).
7. Press **F3** (Load) and then press **F6** (Execute).
8. Press **F8** (Halt/Exit) to return to the Low Speed WAN Interface (4959) menu.
9. Press **F6** (Exam Data). The Advisor searches the capture buffer for data and displays it using the most recent display format selected.

---

#### NOTE

The Advisor always displays a directory of the active DOS directory. This can be changed at any time by pressing **F9** (Config) and entering a different directory.

## Evaluating Data Using the Examine Data Menu

10. Press → to highlight the 'A' in the data stream.

You can see the data is ABCDEFGH transmitted continuously. With the cursor highlighting the 'A', you can see the character decoded in binary, octal, and hexadecimal at the top of the display. The data is DCE data, so it is displayed in inverse video. The DTE data is displayed in normal video.

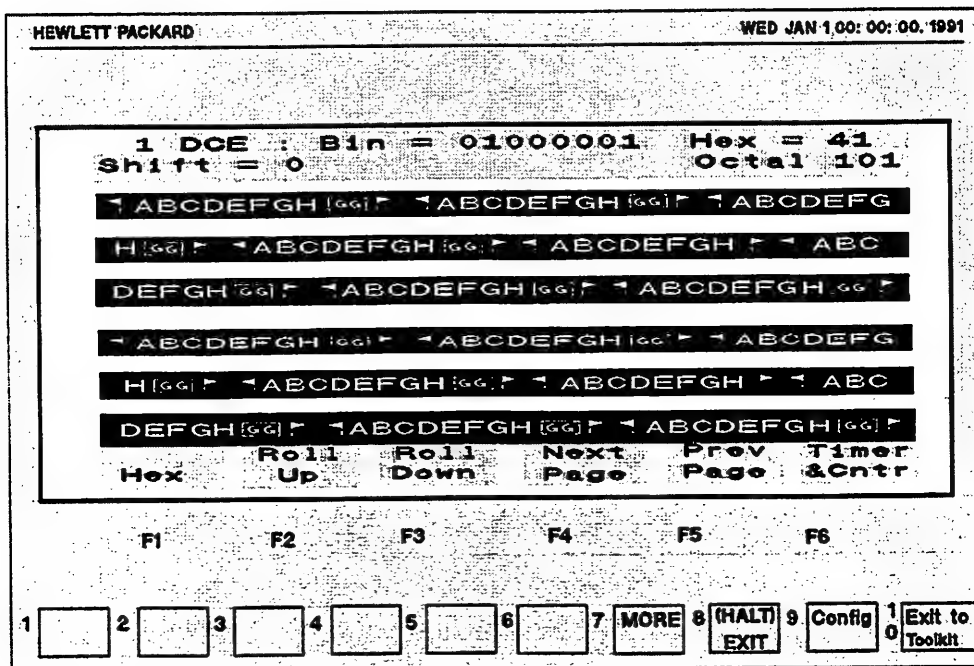


Figure 5-1: Demonstration Data in Two Line Format

---

## Changing the Display Format

1. In the Examine Data menu, select (Chang Dsply) to access the display format softkeys.
2. Press the softkey for the most meaningful data representation.

You can press the Hex softkey and change all data to hexadecimal display and press the same softkey, now labelled Text to change it back.

You have six options that allow flexibility and ease of viewing. Choose the display that best suits your needs:

- Two Line displays both DTE and DCE data
- DTE Only
- DCE Only
- Data & State displays DTE and DCE data with RTS, CTS, DSR, and CD leads
- Frame displays a breakdown of the frame information (BOPs only)
- Packet displays a breakdown of the packet information (BOPs only)

There are two methods you can use to change the display format. There is a softkey in the Examine Data menu that displays the selections available. The Setup menu also contains a field where you can change the display format.

The Advisor is equipped with a "smart cursor" - whenever you change display formats the cursor stays at the same data location.

---

## Measuring Time

You can measure the interval between specific characters using cursor timing in the Examine Data menu.

1. With the cursor still highlighting the 'A', press **F7** (MORE) two times. This should display the **F1** (Start Time) softkey.
2. Press **F1** (Start Time).


## Evaluating Data Using the Examine Data Menu

3. Press → enough times so the 'A' in the next frame is highlighted.

4. Press F2 (End Time).

The time between the 'A's is displayed. The measurement should be 99.0 ms. Using this technique, you can measure frame length, from start flag to end flag, 57.0 ms. This difference, from end flag to start flag, measures the delay between frames.

The GG displayed in a box indicates a good frame check, BB indicates bad frame check, and AA indicates abort.

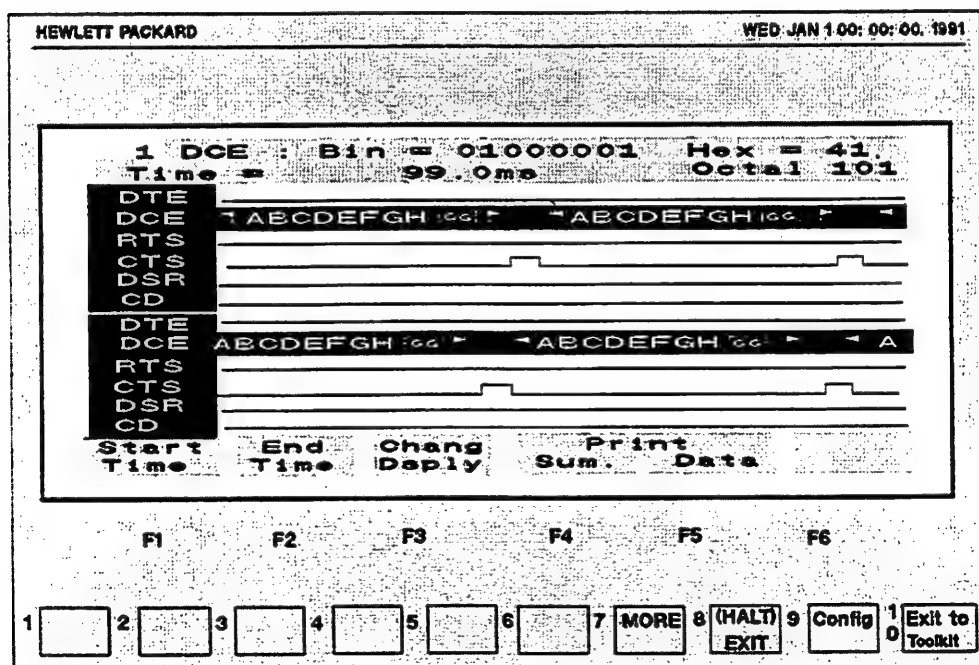

PC0403

Figure 5-2: Timing Interval in Data & State Format

---

## Analyzing Captured Data

You can evaluate captured data many times and in many ways without corrupting the original data file. When data is in the capture buffer you can view it, make manual measurements, write programs, look for specific events, and run programs from the Data Communications Test Library.

---

## Post-Processing Data

The procedure below creates a program that measures the time between the rising edge of RTS and the rising edge of CTS.

1. If you are not already at the Low Speed WAN Interface (4959) menu, select Low Speed Analyzer in the Toolkit by pressing **ENTER**, and then select Protocol Analyzer by pressing **ENTER**. This brings up the Low Speed WAN Interface (4959) menu.
2. Press **F3** (Mon Menu). Enter the program listed below. (Monitor programs are also discussed in chapters 4 and 11.)

Monitor

Block 1  
When Lead RTS goes On  
Go To Block 2


Block 2  
Start Timer 1  
and then  
Highlight  
When Lead CTS goes On  
Go To Block 3

Block 3  
Highlight



## Evaluating Data Analyzing Captured Data

- and then  
Stop Timer 1  
and then  
Stop Tests
3. Press **F8** (EXIT) to go back to the Low Speed WAN Interface (4959) menu.
4. Press **F5** (Run Menu).
5. Press **F2** (Monitor Buff).
6. When the program has finished executing, press **F6** (Exam Data). You can see the transitions that were measured because the program highlighted them.
7. Press (Timer&Cntr). This displays the results of timers and counters.

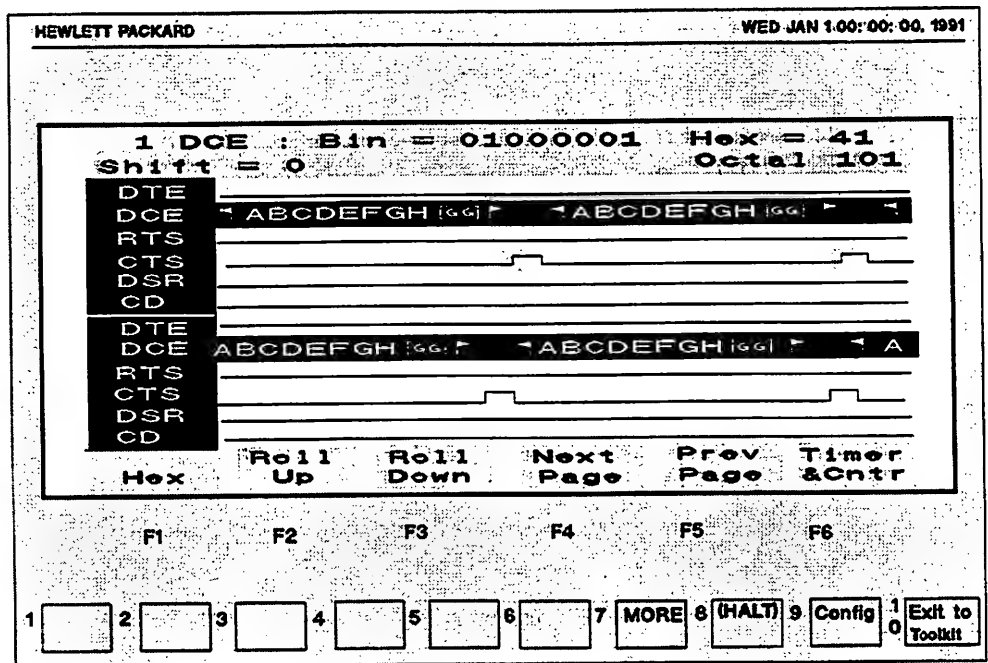

PC0404

**Figure 5-3: Measuring Frame Time from the Buffer**

When you view the data in the Data & State display mode, you can see that CTS goes on between frames. Therefore, the time between CTS pulses equals the time for one frame.

HEWLETT PACKARD
WED JAN 1 00:00:00 1991

Protocol	X.25	Display	D & S
Code	ASCII 8	Err chk	CCITT
Bits/sec	1200		
Parity	None		
Mode	Sync	DTE clock	DCE

Counter 1= 0	Timer 1= 99
Counter 2= 0	Timer 2= 0
Counter 3= 0	Timer 3= 0
Counter 4= 0	Timer 4= 0
Counter 5= 0	Timer 5= 0

Data  
Disp

F1F2F3F4F5F6

1

2

3

4

5

6

7

MORE

8

(HALT)  
EXIT

9

Config

10

Exit to  
Toolkit

PC0405

Figure 5-4: Timers and Counters

## Timing Resolution

Timing resolution is the smallest unit of measurement that can be timed at a given speed. Use the following table:

**Table 5-1: Timing Resolution**

Speed	Resolution
50-2400	1.0 msec
3200-4800	0.5 msec
7200-9600	0.2 msec
12000 - 256 kbps	0.1 msec

---

**Printing**

## Printing

Display information can be sent to a printer connected and configured to your instrument. You can print monitor/simulate menus, buffer data, and other Low Speed Internet Advisor menus.

The Low Speed Internet Advisor can print:

- buffer data
- monitor and simulate menus
- timer and counter results
- disk directories
- other Advisor menus

---

## Printing Data

For printing, the Advisor Printer Setup menu must be configured and the printer must be connected.

---

### NOTE

Characters are printed differently between graphics and text (ASCII) mode printers. The graphics mode printer output is virtually identical to the Advisor's display. The text (ASCII) mode printer output does not appear like the Advisor's display. It is slightly altered, especially when it displays hexadecimal characters.

---

---

## Connecting the Printer

You can connect your printer to the Advisor's serial or parallel port. The default is LPT1 out the parallel port.

---

## The Printer Setup Menu

A printer should be attached to the Advisor and be able to communicate with it before you try to configure the Printer Setup menu.

The following figure shows the Printer Setup menu configured for a Graphics mode printer connected to a parallel port (LPT1). Whether you have a graphics or text (ASCII) mode printer determines the other Printer Setup menu selections.

Printing  
Printing Data

HEWLETT PACKARD WED JAN 1 00:00:00.1991

Printer Setup

Printer Type	Graphics	[a] Graphics
Printer Brand	HP Deskjet	[b] Text
Printer Port	LPT1	
Horiz Scaling	100	
Vert Scaling	100	

1 2 3 4 5 6 7 8 9 0 Exit Setup

PC0501

**Figure 6-1: The Printer Setup Menu Configured to a Graphics Mode Printer**

1. If you are not already at the Low Speed WAN Interface (4959) menu, select Low Speed Analyzer in the Toolkit by pressing **ENTER**, and then select Protocol Analyzer by pressing **ENTER**. This brings up the Low Speed WAN Interface (4959) menu.
2. Press **F3** to enter the Printer Setup menu. Use the **↑** and **↓** keys to move between the printer setup fields.
3. Press **ENTER** to activate a field, and use the **↑** and **↓** keys to highlight another choice. Press **ENTER** again to make the selection.

The following list explains the purpose of each field in the Printer Setup menu:

Printer Type	Select Graphics printer if your printer is among the list under Printer Brand. Otherwise select Text for standard ASCII printers.
Printer Brand (Graphics print only)	Select the brand of printer being used.
Printer Port	Select LPT1 or COM1.
Baud Rate (COM1 only)	Select from the list of supported baud rates through the serial ports.
Word Size (COM1 only)	Type the number of bits per word, either 7 or 8.
Parity (COM1 only)	Select odd, even, or none.
Stop bits (COM1 only)	Type 1 or 2.
Horizontal Scaling (Graphics print only)	If the default setting of 100 produces a printout that is either too wide or too narrow, change this field to a number between 75 and 110. A smaller number reduces the width of the printout, a larger number increases the width.
Vertical Scaling (Graphics print only)	If the default setting of 100 produces a printout that is either too long or too short, change this field to a number between 75 and 110. A smaller number reduces the length of the printout, a larger number increases the length.



---

## Printing Menus

Select the Advisor's (Print) softkey, which is found in most of the Advisor's menus. The following table is a list of the menus that can be printed. You can also do a Print Screen (a PC print function) to a graphics printer to print the current screen.

---

### NOTE

The Print Screen command cannot be used in text mode. If you try to use the Print Screen command in text mode, an error message is displayed.

**Table 6-1: Menus that can be Printed**

Menu	What is Printed
Setup	all setup parameters from the setup menu (13 lines)
Monitor	the entire monitor program
Simulate	the entire simulate program
Data Filter	the data filter menu (first 13 lines)
Examine Data	Print Sum - Timers and Counters summary (first 14 lines) Print Data - selected number of pages (screen fulls of data) of data beginning at the current page or cursor position
BERT	the BERT setup menu (first 13 lines)
BERT Results	the BERT test results display (first 13 lines)
Mass Store Menu	the file directory with the comments

---

## Printing the Buffer

1. If you are not already at the Low Speed WAN Interface (4959) menu, select Low Speed Analyzer in the Toolkit by pressing **ENTER**, and then select Protocol Analyzer by pressing **ENTER**. This brings up the Low Speed WAN Interface (4959) menu.
2. Select (Exam Data) to enter the Examine Data menu.
3. Press **F7** (More) two times and locate the (Print Data) softkey.

[illegible]

6-7

## Printing Printing Data

\*\* HP 4959 Printer Output      Wed Sep 13 10:23:20 1995      Page 1 \*\*

Block	4	Print	Page	1
D T E	1 Sh 5 [G G] P	1 Sh 5 [G G] P	1 Sh 5 [G G] P	1 Ex
D C C	1 Sh 5 [G G] P	1 Sh 5 [G G] P	1 Sh 5 [G G] P	1 Ex
R T S				
C T S				
D S R				
C D				
D T E	DL NU [G G] P 1 Ex ** DL NU [G G] P	DL NU [G G] P 1 Ex ** DL NU [G G] P	DL NU [G G] P 1 Ex ** DL NU [G G] P	DL NU [G G] P 1 Ex ** DL NU [G G] P
D C C	1 Sh 5 [G G] P	1 Sh 5 [G G] P	1 Sh 5 [G G] P	1 Ex
R T S				
C T S				
D S R				
C D				

**Figure 6-3: Printed Output in Data & State Format(graphics mode)**

---

## Text Mode Printers and Printed Characters

Characters are printed differently for graphics and text mode printers. The output for a graphics mode printer is virtually identical to what the Advisor displays. The output format for a text mode printer is the same except:

- All hex codes are in upper case. All ASCII control characters are in lower case. All other sequences are top character upper case, and lower character lower case.
- All characters that have no ASCII representation are printed in hexadecimal mode.

## Hexadecimal Characters

Hexadecimal characters are printed in upper case, most significant digit over the least significant digit. For example, B7 hex is printed as:

B  
7

## ASCII Control Characters

ASCII control characters are printed in lower case with the same mnemonics as displayed except printed on two lines. For example, an ASCII acknowledge is printed as:

a  
k

DCE data that is displayed in total inverse video is printed with an asterisk printed at the end of the line. This is useful for differentiating between DCE and DTE data.

## Special Characters

The following table defines special characters and how they are displayed.

**Table 6-2: Displayed Special Characters**

Message	Display
Don't Care	x
	x
Undefined Character	?
	?
Good FCS	GG
	gg
Abort	AA
	aa
Highlighted Timer	H
	t
Discontinuity	D
	c
Start Flag	S
	f
End Flag	E
	f
Bad FCS	BB
	bb
Don't Care FCS	XX
	xx

Lead levels displayed are printed as follows:

High = 1, Low = 0,

Transition (rising or indeterminate) = /,

Transition (falling or indeterminate) = \.

---

## Getting an ASCII Print File from Captured Data

Use the following procedure to obtain an ASCII print file from captured data:

1. Start with data in the buffer. This can be verified by pressing F6 (Examine Data) and you can return by pressing F8 (Exit) from Examine Data.
2. If the data has not already been stored to disk (such as doing a disk buffer extract), store the data at this time. Be sure to use the File Type of MENU AND DATA.
  - Press F7 (More)
  - Press F4 (Mass Store)
  - Press F4 (Store), < filename >, File Type = MENU AND DATA
  - Press F6 (EXECUTE)
  - Press F8 (EXIT)
3. Press F10 and then F9 to Exit to the MAIN GROUP of Toolkit.
4. Highlight PC DECODES in Toolkit and then press ENTER.
5. This shows the default display for the PC decodes (c:\hptools\analysis\data).

Change the directory to the one used in the Low Speed Analyzer.

DATE DIR (F7) , (C:\HPTOOLS\STARTUP)

6. PC Decodes uses a specific file format for it's data structure. The data needs to be converted to that format.

Cursor to the *filename* .M&D to be converted. (CONVERT TO EVENTS, F4). Then Next Menu can be ignored since the information will be detected from the MENU portion of the MENU & DATA file, (EXECUTE, F7).

7. A new file has been created with the .EVE extension. Place the cursor over this file and press F5 (EXAMINE DATA) and then F5 (EXAMINE DATA) again.

8. The data is now displayed on the screen in the PC DECODE format. This format can be either printed to a hard copy device or stored as an ASCII text file for viewing using a text editor.

SPECIAL FUNCTIONS (F7), PRINT EVENTS (F7).

Select F4 (TO FILE)

Valid entries here are:

filename.txt - goes to the directory specified in step 5  
a:\filename.txt - goes to a floppy disk  
lpt1 - goes to a parallel port printer

Printing  
Printing Data

**Remote/Slave Operation**



## Remote/Slave Operation

Remote operations are convenient with the Low Speed Internet Advisor. The master PC and slave instruments can communicate, transfer data, menus, applications, test the remote data lines, and provide test results from timers and counters.

You can use the Advisor as a slave to a central site controller (the central site controller doesn't have to be an Advisor, it can be a PC). This lets the Advisor be the eyes for the central site controller. A central site controller can initiate all standard remote operations, as well as control an Advisor operating in the virtual terminal mode.

The Advisor has a "slave" mode of remote. You can make setup choices to configure the Advisor to receive incoming calls from a master remote application.

---

## Remote/Slave Setup

The Remote/Slave setup is in the top level of the Toolkit. This application is a set of programs that lets you remotely control an Advisor, upload and download menu and data files from a remote site, load/store an Advisor file from/to your instrument disk, and analyze data files (in event file format) on your instrument.

---

## Remote/Slave Configuration

You can set up the Advisor for remote operations in the Toolkit. To configure the Slave Setup, perform the following:

1. If you are already at the Low Speed WAN Interface (4959) menu, exit it by pressing **F10** (Exit to Toolkit) and then press **ENTER** (for yes).
2. Press **F4** (Slave Setup). The Slave Setup menu is displayed and shows the following choices:
  - Modem Command Set
  - Hardware Handshaking
  - Baud Rate
  - Com Port
3. **F1** (Com Window) (displayed with modem selections) lets you open a terminal emulator window where you can manually configure modems.
4. **F10** (Exit) lets you leave the Remote Configuration menu.

### The Modem Command Set

The choices in the Modem Command Set field are:

- Hayes™
- Other
- Direct Connect

## Remote/Slave Operation

### Remote/Slave Setup

Press **ENTER** to select one of these choices, and then press **ENTER** again to confirm your selection.

If you select 'Hayes' for this field, another field is displayed called Auto Answer. The choices for this field is On or Off. If you select On, your modem will automatically be configured for Auto Answer the next time you turn on your instrument.

### Hardware Handshaking

The choices in the Hardware Handshaking field are On or Off. Press **ENTER** to select one of these choices, and then press **ENTER** again to confirm your selection.

### Baud Rate

The choices in the Baud Rate field are:

115,200 bps	9,600 bps
57,600 bps	4,800 bps
38,400 bps	2,400 bps
19,200 bps	1,200 bps
14,400 bps	

Press **ENTER** to select one of these choices, and then press **ENTER** again to confirm your selection.

### Com Port

The choices in the Com Port field are:

- COM1
- Modem (COM2)
- Other

Press **ENTER** to select one of these choices, and then press **ENTER** again to confirm your selection.

---

## Remote/Slave Features

You can accept keys from the slave or the master keyboard if your instrument is operating as a slave. If the slave's keyboard is locked by the master, then only master site keys are accepted.

There is a "hot key" sequence that lets you operate a set of command mode remote functions as a slave. When you use the hot key sequence, the master site is automatically put in the command mode remote. To use the hot key sequence, press the left **Alt** key and the right **SHIFT** key simultaneously.

The functions you can perform as a slave are:

- Chat Mode
- Mass Store

### Chat Mode

The Chat Window lets a two way dialogue occur between the master site specialist and the remote site technician.

Highlight Chat Window in the Remote Commands and press **ENTER** to start the chat mode between two sites.

Text typed at one site is sent to the other. The Local Chat Window is where text is sent. The Remote Chat Window is where text is received. The master and the slave can both initiate a chat session.

To quit a chat session, press **F10** (Exit Chat).

### Mass Store

The Mass Store function lets you transfer files between sites.

Highlight Mass Store in the Remote Commands and press **ENTER** to start the Mass Store function. A DOS Mass Store menu is displayed.

## Remote/Slave Operation

### Remote/Slave Setup

The Mass Store menu is divided into two windows. The top window is labeled Disk drive and displays both local drives and remote drives. The remote drives are listed with an r next to the drive letter.

The bottom window is labeled Files and displays the files and directories in the disk drive that is highlighted.

---

#### NOTE

---

Press both the left **Alt** key and the right **SHIFT** key to enter the remote command mode.

---

### External Modem Configuration

The Low Speed Internet Advisor remote operation requires proper modem configuration to work properly in the Hayes emulation mode. The default settings of a modem are usually adequate for proper operation with the Advisor.

The following table shows the specific configuration parameters that are needed for an external modem used with the Advisor:

**Table 7-1: Recommended Modem Settings**

S2 register	Escape character must be set to '+' or ASCII 43
S3 register	Carriage return character must be set to ASCII 13
S4 register	Line Feed character must be set to ASCII 10
S5 register	Backspace character should be set to ASCII 8
S12 register	Escape code and remote access guard time should be set to 50 (= 1 second)
ATQ0	Modem must have result codes enabled
Flow Control	If a modem supports XON/XOFF or ENQ/ACK flow control, these should be set to OFF. This should be checked for error correcting modems (such as MNP5 or V.42)

---

## PCMCIA Modem

If your Internet Advisor has a PCMCIA slot, you can also use a PCMCIA Modem for remote control of the WAN Advisor. To do so, you must configure the WAN Advisor software for COM port 4 and Interrupt 3. The master controller configuration menu is reached by selecting the *Remote Control* tool at the Toolkit top level menu. The slave configuration menu is reached by selecting the *Slave Setup* function key from within the Toolkit menu. Changing one configuration automatically changes the other. The exact settings should be:

Com Port	Other
Hardware	Off
Handshaking	
Com Base	744 (this is the decimal equivalent of 2E8H for the COM 4 I/O address)
IRQ	3

The other settings in the menu depend on the type of modem. However, it is recommended that you leave AutoAnswer ON when modifying the slave setup. This allows the instrument to be remotely captured in an unattended setting.

**Remote/Slave Operation**  
**PCMCIA Modem**

**BERT Measurements**



## BERT Measurements

The quality of any communication is dependent on the quality of the communications channel. Bit error rate testing (BERT) is a method of assessing and quantifying the quality of a communications channel.

BERT measures the effects of a communications circuit on a digital signal. BERT measurements tell you how often highs are changed to lows and lows to highs in error in a known signal.

A BERT generates pseudorandom bit sequences (PRBS) from a shift register of length  $L$ , where the sequence contains  $2^L - 1$  bits. The Low Speed Internet Advisor supports patterns of 63, 511, 2047, and 4095. The Advisor can also send patterns with all 1 bits, alternating 1 and 0 bits, all 0 bits, the "THE QUICK BROWN FOX..." message, or a user-defined message.

The bit error rate (BER), calculated as bit errors divided by bits received, in itself does not give the whole picture. The distribution of errors is also an important consideration. A lightning strike, for example, may cause a large number of errors on the line, but the errors occur grouped together producing a temporary interruption. For this reason, bits are grouped in blocks for measuring block error rate, calculated as block errors divided by blocks received. The Bell system uses 1000 bits per block. CCITT uses block sizes equal to the PRBS pattern length.

---

## Understanding BERT

The Advisor Enhanced BERT includes block and bit error statistics for basic measurements with error analysis and reporting techniques outlined in the CCITT Recommendation G.821.

Information acquired from BERT measurements can be used to determine the performance characteristics on a circuit segment, or end-to-end for the complete circuit. You can also use BERT measurements to make sure a circuit meets performance specifications.

---

### Basic Measurements

Basic measurements include raw error count information accumulated from the line under test along with the calculated percentage of error free seconds and the block and bit error ratios. The information includes:

Time Elapsed	displays the total time the circuit is or was under test for the current measurement.
Errored Seconds and Error Free Seconds	displays the number of seconds that contained bit errors and the percentage of the total time without errored seconds.
Block Count	displays the total number of blocks received for the current measurement.
Block Errors and Block Error Ratio	displays the number of blocks with errors and the ratio of errored blocks to total blocks received in the current measurement.
Bit Count	displays the total number of bits received in the current measurement.
Bit Errors and Bit Error Ratio	displays the number of bits in error and the ratio of errored bits to total bits received in the current measurement.

---

**NOTE**

---

Measurement Notation Ratios in the Basic Measurements window are displayed in exponential notation. Therefore, a value of  $1 \times 10^{-6}$  is displayed as 1.0e-6.

---

## G.821 Analysis

The CCITT Recommendation G.821 outlines performance objectives for digital voice and data signals on bidirectional 64 Kbps circuit-switched connections used for ISDN. The specifications outline performance goals in terms of performance parameters based on the bit error ratio (BER) for a threshold period when measured over a period of time that is much longer than the assessment period.

The performance objectives were designed to:

- give users of digital services an indication of expected error performance in an operational network
- serve as a working document for the definition of performance standards for equipment manufacturers and users

The G.821 defines the following terms:

Available Time	is the elapsed time less the unavailable time, in seconds.
Unavailable Time	is the amount of time the circuit is not able to reliably transmit data, defined as beginning with ten consecutive severely errored seconds and ends at the beginning of a period of ten consecutive seconds that are not classified as severely errored seconds.
Severely Errored Seconds	are the number of one second intervals where the bit error ratio is worse than $1 \times 10^{-3}$ .
Errored Seconds	are the number of seconds with at least one bit error.
Degraded Minutes	are the number of one minute intervals where the bit error ratio is worse than $1 \times 10^{-6}$ .

---

## Different BERT Measurements

BERT measurements can be run:

- for end-to-end connections over a network using two bit error rate test sets
- using a loopback

### End-to-end Connections

An end-to-end test, also referred to as a point-to-point test, involves the use of two BERT instruments to measure a circuit. A test is started on each of the instruments at both ends of the circuit. The results are noted and used for comparison. Each instrument transmits to the other, and the errors noted on the circuit are recorded by the instruments.

End-to-end tests simulate the results of one device communicating with another.

### Loopback Testing

In a loopback test, one BERT instrument transmits a BERT message. The message is then echoed back to the original instrument which then records the results of the test.

---

## Running Enhanced BERT

The Enhanced BERT application can be found in the Toolkit menu.

The Advisor lets you select the parameters for controlling BERT measurements. The values selected and displayed in the Enhanced BERT windows are the parameters used when you start a BERT measurement.

To start an Enhanced BERT measurement:

1. Connect the Advisor for the type of measurement you want to make and then turn the Advisor on.
2. From the Toolkit top level menu, select Enhanced BERT and press ENTER.

You can stop the Enhanced BERT and return to the Toolkit top level menu by pressing F10 (Exit).

You can also start a BERT measurement and then exit the BERT application to use your system for other functions. See the section "Exit with a Measurement Running" for more information on this function.

## BERT Setup

Hewlett-Packard		Enhanced BERT Revision 01.00		WED JAN 1 00:00:00 1991					
<b>Basic Measurements</b>			<b>G.821 Analysis</b>						
Time Elapsed:	00:00:02		Avail. Time:	00:00:02 100.00%					
Errored Seconds:	0		Errored Secs:	0	0.00%				
Error free seconds—	100.00%		Degraded Mins:	0	0.00%				
Block Count:	33		Sev. Err. Secs:	0	0.00%				
Block Errors:	0 0.0		Unavail. Time:	00:00:00 0.00%					
Bit Count:	17,222								
Bit Errors:	0 0.0								
Emulate	DCE	Pattern	511						
DTE Clock	DTE	Flow Cntl	None						
Bits/Sec	19200	Block Size	511						
Mode	Asyno	Duration	15 min.						
Parity	None	Log-results	Off						
Stop Bits	1								
Framing	8								
		DTE							
		DCE							
1 Start BERT	2 View Logs	3 Message Editor	4 Load Setup	5 Store Setup	6	7	8 Mass Store	9 Config	10 Exit

590804

**Figure 8-1: The Enhanced BERT Interface**

emulation	DTE, DCE
line speed	from 50 to 64000 bits per second
analysis	bit/block statistics, G.821 performance analysis
mode	synchronous, asynchronous, isochronous
block size	511, 1000, 2047
patterns	PRBS of 63, 511, 2047, and 4095, all 1s, alternating 1s and 0s, all 0s, "THE QUICK BROWN FOX..." message, user-defined messages up to 1024 characters in length

## BERT Measurements

### BERT Setup

framing	set a type of framing bit - none, 8, 7, 6, 5
parity	none, odd, even, mark, space
error injection	single errors, a burst of ten errors, at intervals of one every $10^2$ , $10^4$ , $10^5$ , or $10^7$ bits
flow control	Control Leads, XON/XOFF, none

---

## Setting the Line Characteristics

The line characteristics determine the physical layer interface. Select the parameters that match the circuit being tested.

1. From the Toolkit, select Enhanced BERT and press **ENTER**.
2. Select the appropriate line characteristics for your test from the fields in the left column of the parameters window. Use the  $\uparrow$  and  $\downarrow$  keys to position the cursor in the field to change.
3. Press the **ENTER** key to select the list box panel on the right side of the parameters window.
4. Use the  $\uparrow$  and  $\downarrow$  keys to highlight the desired value, and press **ENTER** to select it.
5. Repeat steps 2 through 4, as needed, to set each of the line characteristics.

## Emulate

Select an emulation type in this field. You can select an emulation type of DTE or DCE.

## DTE clock

Select a clock source in this field. You can select a clock source of DTE or DCE.

## Bits/Sec

Select a transmission rate in this field. You can select from the following:

All Framing Types				Synchronous Only
50	200	2000	7200	
75	300	2400	9600	38400
110	600	3200	12000	48000
134.5	1200	3600	14000	56000
150	1800	4800	19200	64000

## Mode

Select the mode in this field. You can select Sync (synchronous), Async (asynchronous), or Isoc (isochronous)

## Parity

Select a parity bit for asynchronous communications in this field. For character sizes less than eight bits, you can select a parity of None, Odd, Even, Mark, or Space.

Mark and space parity are not available for eight bit character tests.

## Stop Bits

Select the number of stop bits sent with each character transmitted in this field. You can select stop bit durations of 1, 1.5, or 2.

## Framing

Select the type of framing in this field. You can select none, 8, 7, 6, or 5.



## BERT Measurements

### BERT Setup

---

#### NOTE

#### Field Display

The Parity, Stop Bits, and Char Size fields only appear in the parameter window when asynchronous or isochronous framing are selected. The Char Size field does not appear when you select a user-defined message pattern since the character size is determined by the data code selected in the Message Editor.

---

---

### Setting the BERT Options

The BERT options determine the characteristics for the measurement. Select the parameters that match the circuit being tested.

1. From the Toolkit menu, select **Enhanced BERT** and press **ENTER**.
2. Select the appropriate BERT options for your test from the fields in the upper right column of the parameters window. Use the **↑** and **↓**, **←**, and **→** keys to position the cursor in the field to change.
3. Press the **ENTER** key to select the list box panel on the right side of the parameters window.
4. Use the **↑** and **↓** keys to highlight the desired value, and press **ENTER** to select it.
5. Repeat steps 2 through 4, as needed, to set each of the line characteristics.

#### Pattern

Select a BERT pattern in this field. You can select patterns of:

63	to send frames with the 63 pseudorandom bit sequence.
511	to send frames with the 511 pseudorandom bit sequence.
2047	to send frames with the 2047 pseudorandom bit sequence.
4095	to send frames with the 4095 pseudorandom bit sequence.

FOX	to send frames containing the character test string "THE QUICK BROWN FOX JUMPED OVER THE LAZY DOG."
All 1's '	to send frames of all 1 bits.
101010...	to send an alternating pattern of 1 and 0 bits.
All 0's	to send frames of all 0 bits.
USER	to send user-defined messages.

### Block Size

Select the BERT block size in this field. You can select block sizes of 511, 1000, or 2047.

### Duration

Select the test duration in this field. You can select test durations of:

1e5 bits	to select a 100,000 bit test.
1e6 bits	to select a 1,000,000 bit test.
1e7 bits	to select a 10,000,000 bit test.
1e8 bits	to select a 100,000,000 bit test.
1e9 bits	to select a 1,000,000,000 bit test.
1 min.	to test for 1 minute.
5 min.	to test for 5 minutes.
10 min.	to test for 10 minutes.
15 min.	to test for 15 minutes.
1 hour	to test for 1 hour.
4 hours	to test for 4 hours.
12 hours	to test for 12 hours.
24 hours	to test for 24 hours.
48 hours	to test for 48 hours.

---

## Select Result Logging

Result logging sets a destination for the results of the BERT measurement to be saved (logged). Select the parameters that match the circuit being tested.

1. From the Toolkit top level menu, select **Enhanced BERT** and press **ENTER**.
2. Select the appropriate logging options for your test from the fields in the lower right column of the parameters window.  
  
Use the **↑**, **↓**, **←**, and **→** keys to position the cursor in the field to change.
3. Press the **ENTER** key to select the list box panel on the right side of the parameters window.
4. Use the **↑** and **↓** keys to highlight the desired value, and press **ENTER** to select it.
5. Repeat steps 2 through 4, as needed, to set each of the line characteristics.

## Log Results

Select a destination for the results in this field. You can select:

Off	when you do not want to log the results of the measurement.
Disk	when you want to save the results to a disk file. Also select a file name to receive the measurement results.
Printer	when you want to print out the results as the test proceeds.

## Interval

Select a logging interval in this field. You can select 1 Min., 5 Min., 15 Min., 30 Min., or 1 Hour.

This field only appears if 'Log-results' is not *Off*.

## Log File

Select a file to receive data when you have selected 'Log-results: Disk.' You can enter a file name or press **ENTER** to activate the 'browse' window. This field only appears if you have selected 'Log-results: Disk.'

---

## Saving a BERT Configuration

You can save the current parameter selections in a file for later use. The file includes the responses to each of the fields on the Enhanced BERT parameter window as well as any user-defined message string.

1. Press **F5** (Store) in the Enhanced BERT main window.
2. Enter a valid DOS file name in the file name field, or press **ENTER** to open the Mass Store window where you can select a file name.
3. Select the (OK) softkey.

---

## Loading a BERT Configuration

You can retrieve a previously saved BERT configuration.

1. Press **F4** (Load) in the Enhanced BERT main window.
2. Enter the file name of a previously saved configuration, or press **ENTER** to open the Mass Store window where you can select the file name of a previously saved configuration.
3. Select the (OK) softkey to retrieve the contents of the file.

The BERT parameters, and the associated user-defined message, will be loaded into the Enhanced BERT application.

---

## The Message Editor

The Message Editor lets you create your own message to be used in a BERT measurement. Messages can be entered and changed in the Message Editor. Messages can be saved using the Enhanced BERT main window (Store) softkey, and previously saved messages are loaded with the interface parameters when a BERT menu file (.BMF) is loaded.

The longest message you can enter is 1024 characters. The data code for the message can be selected by using the (Data Code) softkey. The Message Editor uses the following control keys:

Key	Response
↑	move the cursor up one line in a message
↓	move the cursor down one line in a message
←	move the cursor left one position in the message
→	move the cursor right one position in the message
HOME	move the cursor to the beginning of the current line
END	move the cursor to the end of the current line
SHIFT + HOME	move the cursor to the beginning of the message
SHIFT + END	move the cursor to the end of the message
INS	toggle the insert/overwrite input mode; insert mode (the default) is indicated by a block cursor, the overwrite mode is indicated by an underline cursor.
← (Backspace)	delete of the character immediately to the left of the cursor
DEL	delete the character at the cursor position
F2 (Clear Message)	to clear a previously entered message

Key	Response
<b>F3</b> (Data Code)	you can select the appropriate data code for the user-defined message
<b>F4</b> (Hex)	to select hexadecimal input and display mode
<b>F5</b> (Text)	to select text input and display mode
<b>F10</b> (Exit)	to return to the Advisor Enhanced BERT window

---

## The Message Editor Window

The Message Editor window contains 13 full length (74 character) rows and an additional 62-character row for a total message size of 1024 characters. A diamond character marks the end of the message. The status window displays information on the current cursor position (by byte offset into the message, and by row and column number in the display). When the cursor is positioned under a character in the message, the value of the character is also displayed in the status window in character, hexadecimal, and binary formats.

### Start the Message Editor

The message editor is started by pressing **F3** (Message Editor) in the Enhanced BERT main window.

### Select a Data Code

You can enter message strings using ASCII or EBCDIC characters as text or as their hexadecimal values.

1. Press **F3** (Data Code) to activate the data code window.
2. Press the **ENTER** key to select the list box panel on the right side of the parameters window.
3. Use the **↑** and **↓** keys to highlight the desired value and press **ENTER** to select it.

## **BERT Measurements The Message Editor**

4. Press **F10** (OK) softkey to accept the value or press **F1** (Cancel) to retain the current setting.
5. Select data codes of ASCII, ASCII 7, ASCII 8, EBCDIC, HEX-8, HEX-7, HEX-6, or HEX-5.

### **Enter a Character String**

You can enter ASCII and EBCDIC characters in text mode.

1. Position the cursor where you want entry to begin.
2. Press **F5** (Text) to select the text entry mode.
3. Enter the text.

### **Enter Non-Text Characters**

You can enter non-text (hexadecimal) characters into the message at any location.

1. Position the cursor at the location where the input should take place.
2. Use **F4** (Hex) to switch to hexadecimal input mode.
3. Enter the two hexadecimal characters that make up the value of the message character (octet).

Any data code can be entered in hexadecimal format. Data codes with less than eight bits are entered as eight bit hexadecimal values but are masked to store only the significant bits for the selected data code character size.

---

#### **NOTE**

---

##### **Display Format**

Hexadecimal characters are displayed in double character-compressed format.

### **Canceling Message Changes**

If you're in the process of changing a message and would like to restore the original message, use **F1** (Cancel) to restore the original message.

### **Exiting the Message Editor**

Press **F10** (Exit) to exit the message editor and return to the Enhanced BERT main window.



---

## Testing a Circuit

After you have selected the parameters for a measurement and have properly connected the lines you can start BERT. For more information on selecting an interface, see chapter 4.

When you start a BERT measurement the interface is initialized and the leads are brought to the appropriate condition. For the RS-449 interface, the RS and DS leads are asserted. For all other cases, the RTS and DTR leads are asserted.

---

### NOTE

#### Synchronization

The BERT receiver must be synchronized to the transmitter for the receiver to properly evaluate the signal on the line. The BERT transmitter must have the following characteristics:

- |                   |   |
|-------------------|---|
| Unframed patterns | The speed of the clock generating the transmitted pattern must be within 1% of the clock generating the receiver pattern. |
| Framed patterns   | Both clocks must be within 5% of each other.  |

Hewlett-Packard		Enhanced BERT Revision 01.00		WED JAN 1 00:00:00 1991	
<b>Basic Measurements</b>			<b>G.821 Analysis</b>		
Time Elapsed:	00:02:14		Avail. Time:	00:02:14	100.00%
Errored Seconds:	0		Errored Secs:	0	0.00%
Error free seconds:	100.00%		Degraded Mins:	0	0.00%
Block Count:	1,836		Sec. Err. Secs:	0	0.00%
Block Errors:	0 0.0		Unavail. Time:	00:00:00	0.00%
Bit Count:	938,196				
Bit Errors:	0 0.0				
<b>Receive Status</b>			<b>Transmit Status</b>		
Leads: On			Leads: On		
Data: Synchronized			Data: Transmitting		
Emulate	DCE	Pattern	511	Log-results - Off	
DTE Clock	DTE	Flow Cntl	None		
Bits/sec	19200/Async	Block Size	511		
Parity	None	Duration	15 min.		
Framing	8/1 stop				
1 Stop BERT	2 Reset Counts	3 Inject 1e-2	4 Inject 1e-3	5 Inject 1e-6	6 Inject 1e-7
				7 Inject 10	8 Inject 1
					9 Config
					1 Exit 0

590806

Figure 8-2: The BERT Measurement Window

## Starting/Stopping a Measurement

1. Select the appropriate interface, measurement and logging options.
2. Press **F1** (Start BERT) to start the measurement.

The BERT runtime window is displayed. The middle pane shows the line transmit and receive status. The lower pane shows the selected measurement options.

3. Press **F1** (Stop BERT) to STOP the measurement and return to the BERT main window. If you selected result logging to disk, the results up to the point where you stop the logging are saved in the log file.

---

## Injecting Errors into a Circuit

You can evaluate the circuit by forcing errors into the data stream. The Advisor lets you select repetitive injection of errors at a known rate or injection of a fixed number of errors. You can use the softkeys on the BERT run window to select the desired option.

1. Start the Enhanced BERT.
2. Select the appropriate interface and BERT parameters.
3. Start a test with **F1** (Start BERT).
4. Select one of the error injection options for the run window softkeys.

Use the run window error injection softkeys:

<b>F3</b> (Inject 1e-2)	to start the injection of an errored bit every 100th bit sent
<b>F4</b> (Inject 1e-4)	to start the injection of an errored bit every 10,000th bit sent
<b>F5</b> (Inject 1e-5)	to start the injection of an errored bit every 100,000th bit sent
<b>F6</b> (Inject 1e-7)	to start the injection of an errored bit every 10,000,000th bit sent
<b>F7</b> (Inject 10)	to inject 10 errored bits into the data stream, one in each of 10 successive characters
<b>F8</b> (Inject 1)	to inject an errored bit into the data stream.

5. Press **F9** (Stop Inject) softkey when you want to stop injecting errors.

---

### NOTE

#### Error Softkey Usage

When errors are being injected at a selected rate, **F7** (Inject 10) and **F8** (Inject 1) are disabled, and **F7** (Stop Inject) is enabled.

---

---

## Resetting Counters

1. Press **F2** (Reset Counters) to zero all of the BERT accumulators and to re-initialize the clock.

The measurement will start running again and collect statistics. Resetting the counters has the same effect as restarting a measurement by pressing **F1** (Stop BERT) followed by **F1** (Start BERT) at the BERT main window.

---

## Exit with a Measurement Running

Enhanced BERT lets you start a BERT measurement and then exit the BERT application to use your system for other functions.

1. Configure the measurement as needed.
2. Press **F1** (Start BERT) to start the measurement.
3. When the measurement has started, press **F10** (Exit) on the BERT test window to return to the BERT main window.
4. Press **F10** (Exit) on the BERT main window to return to the Toolkit.
5. Press the Toolkit (Exit) softkey (**F10**) to exit to MS-DOS or run another application.

---

### NOTE

#### No Exit with Logging Enabled

You cannot exit a running measurement when you have selected log to printer or log to disk.

If you start another Advisor application while you are running a BERT measurement, the measurement will be stopped and the results will be lost. You can, however, leave the Toolkit and run other (DOS, etc) applications.

---

### **Restarting BERT with a Measurement Running**

When you want to display the results of a BERT measurement left running, you can restart the BERT measurement. When you restart the application, the measurement is immediately displayed.

---

## Looking at the Results

You can evaluate test data after you have completed a BERT measurement. Information can be viewed in three different formats:

- Single Entries
- Basic Measurements
- G.821 Analysis

---

## Viewing a Log File

You can look at a log file that has been previously saved to a disk. To load a log file:

1. Press **F2** (View Logs) in the Enhanced BERT main window.
2. Enter a log file name or press **ENTER** to open the Mass Store window where you can select a file name.
3. Select (OK) to retrieve the file or (Exit) to cancel the request.

After the contents of the log file have been retrieved, you can use the softkeys to move around the log file.

You can also select a different log file by selecting (Load File).

## Summary Format

The summary format shows you information on basic measurements and G.821 analysis for all entries in the log file.

Find individual entries in the summary log file by using the following softkeys:

- The (Goto Entry) softkey opens a box where you can enter the number of the entry you want to highlight.

## BERT Measurements

### Looking at the Results

- The **PgUp**, **PgDn**, and arrow keys move you through the file.
- The **HOME** key displays the first entry in the log file.
- The **END** key displays the last entry in the log file.

You can select an entry by highlighting it and selecting the (Exit) softkey. This shows you the individual information for the entry you selected.

**Highlighted Data** - The CCITT Recommendation G.821 defines performance objectives for different grades of circuitry. The BERT G.821 summary display highlights degraded minutes, errored seconds, and severely errored seconds when these values are above the recommended limits.

Refer to the CCITT Recommendation G.821 for more details on error performance objectives, their calculations, and allocations.

### Single Entry Format

The Single Entry display shows you detailed information for a single entry from the log file. The entry number is shown in the bottom right corner of the display.

You can look at different entries in the log file by using the following softkeys:

- The (Goto Entry) softkey opens a box where you can enter the number of the entry you want to display.
- (Prev Entry) displays the prior entry in the log file.
- (Next Entry) displays the next entry in the log file.

Go to the Summary display by pressing **F2** (Summary Display).

Select a different log file by selecting (Load File).

---

## **Capturing High Speed Data**



## Capturing High Speed Data

You can use a provided high speed capture application for monitoring and capturing data at speeds above 64 Kbps. However, simulating above 64 Kbps is not supported in the Low Speed Internet Advisor.

To load and use the high speed application, use the following procedure. More information on the selections that can be made for the high speed application is given in "High Speed Capture Selections" following this procedure.

1. If you are not already at the Low Speed WAN Interface (4959) menu, select Low Speed Analyzer in the Toolkit by pressing **ENTER**, and then select Protocol Analyzer by pressing **ENTER**. This brings up the Low Speed WAN Interface (4959) menu.
2. Press **F7** (MORE) and then **F5** (Load Appl).
3. Press **↓** until you highlight HS\_Capture. Select (Execute).
4. Select (Set Up) and set the Advisor to match the line parameters and display format you want to use. When you make a bits/sec selection, you can choose from 72k bits/second up to 256k bits/second. Press **F7** (MORE) if you need more softkey selections.

HEWLETT-PACKARD WED JAN 1 00: 00: 00, 1991

**Protocol Setup**

Protocol	HDLC	Display	2Line
Code	ASCII 8	Err chk	CCITT
Bits/sec	256K		
Parity	None		
Mode	Sync	DTE clock	DCE
		Blk sense	Norm.
		Ext Addr	Off
		Ext Ctrl	Off

72k 76.8k 100k 112k 128k  
kbps kbps kbps kbps kbps

F1 F2 F3 F4 F5 F6

1 2 3 4 5 6 7 MORE 8 (HALT) 9 Config 0 Exit to Toolkit  
EXIT

PC0310

**Figure 9-1: Setup Menu with High Speed Capture**

5. Press **F8** (Halt/Exit) to go back to the Low Speed WAN Interface (4959) menu with High Speed capture loaded. The (Run Menu) softkey is replaced with (HS Capt).
6. Press **F5** (HS Capt) to start the application.

## NOTE

If you try to run the application using the internal RS-232 interface, the Low Speed Advisor will not let you capture data. A warning screen tells you that RS-232 is not valid for High Speed Capture.

## Capturing High Speed Data

HEWLETT PACKARD WED JAN 1 00:00:00 1992

---

**High Speed Capture Application**

Capture Continuously, Capture until buffer full, Capture to Disk, change the data Filter and Display, Select the Interface.

Protocol: BOP  
Speed: 256 kbps  
Filter: Off  
Display: On

Capt Cont	Capt Full	Capt Disk	Filter Display	Select Interface
-----------	-----------	-----------	----------------	------------------

F1 F2 F3 F4 F5 F6

1	2	3	4	5	6	7 MORE	8 (HALT) EXIT	9 Config	0 Exit to Toolkit
---	---	---	---	---	---	--------	---------------	----------	-------------------

590311

**Figure 9-2: Selection Screen for High Speed Capture**

---

## High Speed Capture Selections

Selections that are available for capturing high speed data are selected with the following softkeys:

<b>Capt Cont</b>	circular store 768 Kbytes of data to the buffer
<b>Capt Full</b>	capture and fill the buffer. The Advisor stops capturing data when the buffer is full
<b>Capt Disk</b>	capture data and store continuously to the circular hard disk buffer. Specify the disk buffer size by following the steps in the section titled Sizing the Disk Buffer. This mode only operates with the runtime display off
<b>Filtr &amp; Disp</b>	enable or disable all data filters and the runtime display. Effected data filters are lead changes, timing information, and errors. Data can be captured on DCE Only, DTE Only, DCE & DTE, or Errs Only
<b>Sel Ifac</b>	select one of three internal or an external interface

You must set the bit rate if you are monitoring asynchronous or NRZI encoded data.

---

### NOTE

When monitoring in High Speed Capture, triggers are inactive and the Monitor menu is disabled.

---

---

## Sizing the Disk Buffer

The Low Speed Internet Advisor comes with a default disk buffer size of 5 Mbyte. You can change the disk buffer size to match your testing needs.

To change the disk buffer size you must delete the current disk buffer and create a new one. Before deleting the current disk buffer, you can save the contents of the

## Capturing High Speed Data High Speed Capture Selections

current disk buffer. Refer to the section titled "Saving Data Captured to the Hard Disk During Run-Time" in chapter 4.

To change the disk buffer size:

1. Press **F9** (Config), from the High Speed Capture Application menu.
2. Press **F8** (Dsk Buf Manager).
3. Press **F4** (Delete Buffer). You must delete the current disk buffer prior to creating the new one.
4. Enter the disk drive and the disk buffer size. The disk buffer size will be adjusted slightly due to system requirements.
5. Press **F1** (Create Buffer).
6. Press **F10** twice to return to the High Speed Capture Application menu.

To use the new disk buffer, create a Monitor program that contains 'start disk' in the first program block. See "Capturing to Disk While Running at 64Kbps or Less" in chapter 4 for an example program.

---

## High Speed Capture Limits

- Async only uses eight-bit data codes, no parity, no error check, LSB first.
- You cannot store directly to floppy disk while capturing data. When you store menus to disk, the high speed setup cannot be stored.
- Disregard bits/second in the Summary screen (runtime or examine data).
- High speeds present some utilization problems. If you encounter Buffer Overflow error message, turn off the display.
- If you encounter Receiver Overflow turn off the timing information.
- Time stamps are placed only on start flags. Measuring other characters returns unpredictable results.

---

**Terminal Emulators**

## Terminal Emulators

Intelligent devices must often be configured with an asynchronous terminal. In these cases the terminal emulator is used to establish a connection and perform a test on that connection. For example, some statistical multiplexers must be configured through an asynchronous terminal connected to them.

Simulate menus can be run from the VT100 Terminal Emulator to troubleshoot a problem. In some cases, if the DTR/DSR lines drop, the connection is lost. In these cases the terminal emulator can execute the test by establishing a connection and then keeping the DTR/DSR lines up while you run a Simulate menu.

---

### NOTE

#### Not Through the Com Port

The VT100 terminal emulator supplied with the Low Speed Internet Advisor runs through the selected interface, not through the Comm port. If you want to run through the Com port, load a PC based terminal emulator program such as ProComm or another of your choice.

---

---

## Using the ProComm Terminal Emulator

A PC based terminal emulator called ProComm has been included in the Toolkit.

To start Procomm, highlight Terminal Emulator in the Toolkit top level menu and press enter. The ProComm program is displayed. Press enter again to actually start the terminal emulator. If you need help, press **ALT F10** to access the ProComm help files.

Press **ALT X** to quit ProComm. The display will ask exit to DOS? Enter yes to return to the Toolkit display.



---

## Using the VT100 Emulator

The VT100 Emulator has four main functions:

- Setup - Set communication parameters for communication for terminal.
- Setup=Sim. - Copy parameters from simulate setup to terminal.
- Simulate - Run simulatemenu and return, keeping leads up.
- Execute - Enter terminal mode.

When operating in the terminal mode, each character is transmitted immediately after it is typed.

---

### NOTE

#### Lost Connection

In some cases, if the DTR/DSR lines drop, the connection is lost. To avoid this problem, these lines are maintained while going between terminal mode and running a simulate menu.

The VT100 Terminal Emulator never acts as a host. This means ENQ/ACK is initiated by the host computer. The computer is set up to send a specified number of characters (e.g., 80) followed by an ENQ character (usually 05H). When the terminal has processed all received characters and is ready for more, it sends an ACK character (usually 06H). To select this type of handshake choose ENQ/ACK in the Terminal Setup menu.

In the terminal mode of operation, you can manually control the data flow using the Xon and Xoff characters. To stop receiving data, transmit an Xoff signal (usually press **CTRL + S**). To restart the flow of data transmit an Xon signal (usually press **CTRL + Q**). This method of flow control can be used with either ENQ/ACK or NONE handshaking.

The software handshake controls the flow of data between devices so overflows do not occur. Although very few dumb terminals are designed to handle software handshaking, the terminal emulator application supports ENQ/ACK (for HP Computers).

---

## Loading the VT100 Emulator

1. If you are not already at the Low Speed WAN Interface (4959) menu, select Low Speed Analyzer in the Toolkit by pressing **ENTER**, and then select Protocol Analyzer by pressing **ENTER**. This brings up the Low Speed WAN Interface (4959) menu.
2. Press **F9** (Config) and change the Current Mass Store directory to C:\hptools\utildisk.
3. Press **F10** (Exit Config).
4. Press **F5** (Load Appl) and move the cursor to highlight the VT100 application.
5. Press **F6** (Execute).
6. Press **F7** (More) and then select (VT100) to enter the VT100 top level menu.

## Terminal Emulators

### Using the VT100 Emulator

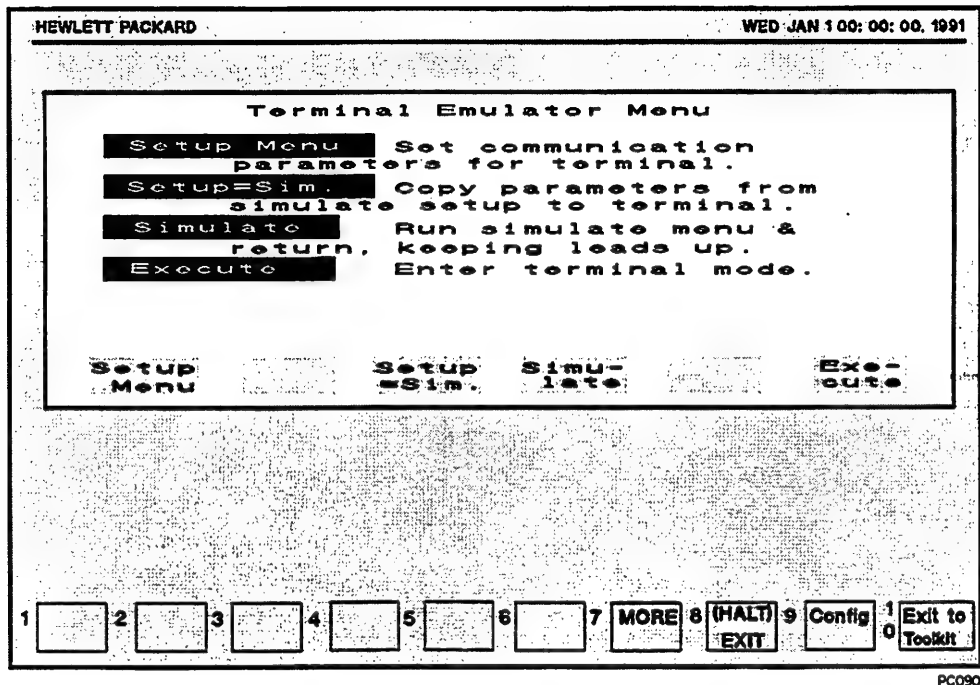


Figure 10-1: Terminal Emulator Menu

---

## Setting Up the VT100 Emulator

The Asynchronous Terminal Emulator lets you use the Advisor as an asynchronous terminal. You must configure the Setup menu to correspond with the host.

From the VT100 top level menu:

1. Select (Setup Menu) to access the TerminalSetup menu.
2. Select the Data Code: (ASCII 7) or (ASCII 8).

3. Press ↓ and select the Parity: (None), (Odd), (Even), (Space), and (Mark) or (Ignore).
4. Press ↓ and select the data rate in Bits/sec: (50) ... (19200).
5. Press ↓ and select the emulation Mode: (DTE) or (DCE).
6. Press ↓ and select Handshake: (None) or (Enq/Ack).
7. Press ↓ and turn local Echo (On) or (Off). If local echo or remote echo (echo from main office computer) is in effect, characters appear on the display as they are typed.
8. Press ↓ and turn Bell (On) or (Off).
9. Press → and turn Display Functions (On) or (Off).
10. Press ↓ and turn Auto LF after CR (On) or (Off).
11. Select (Exit) to return to the VT-100 top level menu.

## Terminal Emulators

### Using the VT100 Emulator

HEWLETT PACKARDWED JAN 1 00: 00: 00: 1991

**Terminal Setup Menu**

Data Code	ASCII17
Parity	None
Bits/sec	1200
Mode	DCE
Handshake	None
Echo	On
Bell	On
Display Functions	On
Auto LF after CR	On
None    Odd    Even    Space    Mark    Ignore (ASCII7)	

1

2

3

4

5

6

7 MORE

8 (HALT)  
EXIT

9 Config

0 Exit to  
Toolkit

PC0902

**Figure 10-2: Terminal Setup Menu**

You can set up the VT100 Terminal Emulator to match a previously loaded simulate menu. With Setup=Simulate, you can transfer all setup parameters that were used when you developed a Simulate menu. This automatically makes all settings correspond to the loaded Simulate menu.

Instead of using the Setup menu:

1. Select (Setup=Sim.) to transfer the parameters from the Monitor/Simulate Setup and Simulate menus to the Terminal Emulator menu. The following terminal setup parameters are overwritten:
  - a. Parity of Monitor/Simulate Setup menu
  - b. Bits/sec of Monitor/Simulate Setup menu
  - c. Mode, DCE or DTE (first line of Simulate menu)

2. Select (Simulate). The Simulate menu is executed.
3. To stop running the Simulate menu press **F8 (EXIT)** and return to the Terminal Emulator menu.

---

## Running the VT100 Emulator

1. From the VT100 top level menu, select (Execute) to go to the terminal mode. The last terminal session appears on the display.
2. If no previous terminal emulator sessions have been initiated, the display is cleared and the cursor is placed in row 1, column 1 (top row, far left column). The current row and column are displayed in the bottom left portion of the screen.
3. Press **F8 (EXIT)** in the terminal mode to get back to the VT100 top level menu.

As an asynchronous terminal, the Advisor receives one or more stop bits and transmits two stop bits, making it compatible with all asynchronous devices. When using the application in DTE mode, the Data Terminal Ready (DTR) and the Request To Send (RTS) leads are set ON to ensure communications, however, the terminal emulator application will transmit regardless of the state of Data Set Ready (DSR), Clear To Send (CTS), and Carrier Detect (CD) from the other device. When operating in DCE mode, the DSR, CTS, and CD leads are set ON but the terminal emulator will transmit regardless of the state of DTR and RTS from the other device. In the terminal mode the following terminal softkeys appear.

Cap Lock	All keys are displayed in upper case. An asterisk is displayed in the softkey to indicate that caps lock is on.
Clear Screen	Press to clear both top and bottom half of the screen.
Display Top	Displays the top half of the display buffer, rows 1 through 13. The cursor location symbol is at the top of the line.
Display Bottom	Displays the bottom half of the display buffer, rows 12 through 24. The cursor location symbol is at the bottom of the line.

## Terminal Emulators

### Using the VT100 Emulator

Hex Entry	Lets you enter hexadecimal characters through the keyboard. An asterisk is displayed in the softkey when hex entry is on.
Break	Press this softkey to signal an interrupt of computer operations. A break is sent for 55 milliseconds. The shortest break possible is 6 milliseconds.

---

## Using the Display Buffer

The VT100 display buffer contains information for 128 columns and 24 rows, however, only 32 columns and 13 rows are displayed at one time. The Advisor's screen is 32 columns by 13 rows. The display buffer contains information for up to two complete screens, or 24 rows with one row of overlap between screens and 128 columns. This effectively gives you an active display area of two screens vertically and four horizontally.

The current cursor row and column location is displayed at the bottom of the screen, below the softkeys.

- To move the cursor forward in the active screen, press **SHIFT + →**. When the cursor reaches column 128 it will immediately wrap to column 113 of the next row.
- To move the cursor backward, on the same line, press **←**. The cursor will not wrap.
- To move the cursor up one row in the same column, press **SHIFT + ↑**. When the cursor reaches the top row in the bottom screen, it will move to the bottom row of the top screen.
- To move the cursor down one row and to column 1, press **↓**.

---

### NOTE

#### Scrolling

You must use commands that support scrolling to move the cursor from one screen to another. If scrolling commands are not used, the cursor remains at either the top or the bottom of the current screen.

---

## Working with Control Characters

Control characters can be sent by simultaneously holding down **CTRL** and pressing the desired character key. The terminal ignores most control characters and does not display them. Control characters the terminal does recognize are:

**Table 10-1: Active Control Characters**

ASCII	Hex	Response	Keystroke
ENQ	0 <sub>5</sub>	Transmit ACK	CTRL + E
BELL	0 <sub>7</sub>	Beep	CTRL + G
BS	0 <sub>8</sub>	Backspace	CTRL + H
HT	0 <sub>9</sub>	Tab one space	CTRL + I
LF	0 <sub>A</sub>	Line feed	CTRL + J
CR	0 <sub>D</sub>	Carriage return	CTRL + M

---

## Using the Escape Codes

Special escape codes are used to perform the VT100 terminal operations. The Advisor VT100 Terminal Emulator can send and receive the escape sequences.

The convention <ESC> is used to show an escape character. Refer to the operating manual of your host computer for entering the escape character. To enter an escape code on the Advisor, press **CTRL + [**. The square open bracket symbol ( [ ) is a literal entry to introduce the following parameter (p1).



Terminal Emulators  
Working with Control Characters

Code	Definition
<ESC>[p1 A	Moves the cursor up by p1 lines in the same column. The screen does not scroll.
<ESC>[p1 B	Moves the cursor down by p1 lines in the same column. The screen does not scroll.
<ESC>[p1 C	Moves the cursor right by p1 spaces. If the cursor is at the right edge of the screen, it does not move.
<ESC>[p1 D	Moves the cursor left by p1 spaces. If the cursor is at the left edge of the screen, it does not move.
<ESC>[p1;p2 H	Moves the cursor to row p1 and column p2. Row 1 and column 1 are the top left corner of the screen. The cursor cannot be moved beyond row 24 or column 80.
<ESC>[p1 J	Blanks the screen according to p1 when: p1 = 0 from cursor position to bottom of screen p1 = 1 from start of screen to cursor position p1 = 2 entire screen
<ESC>[p1 K	Blanks the line according to p1 when: p1 = 0 from cursor position to end of line p1 = 1 from start of line to cursor position p1 = 2 entire line
<ESC>[p1;p2 f	Same as <ESC>[p1;p2 H
<ESC>[p1;...;pn m	Set graphic parameters according to: p = 0 all attributes off p = 1 bold p = 4 underline p = 5 blink p = 7 inverse video
<ESC>7	Saves cursor position
<ESC>8	Restores parameters saved by <ESC>7

<code>&lt;ESC&gt;D</code>	Moves the cursor down 1 line. If the cursor is at the last line, the screen scrolls and displays subsequent buffer screens. If the current screen is the last (fourth) buffer screen, the cursor does not move.
<code>&lt;ESC&gt;E</code>	Moves the cursor to the left margin, down 1 line
<code>&lt;ESC&gt;M</code>	Moves the cursor up 1 line. If the current buffer screen is not the first buffer screen, the display screen scrolls. If the current display screen is the first buffer screen, the cursor does not move.
<code>&lt;ESC&gt;c</code>	Resets to saved/power-on state and self test

For example:

`<ESC>[0;1;4;5;7 m`

will turn all graphic parameters on.

**Terminal Emulators**  
**Working with Control Characters**

---

**Programming Reference**

## Programming Reference

The Monitor and Simulate menus let you configure the Low Speed Internet Advisor to look for specific events, capture user defined data, and emulate data communications equipment. Softkeys provide all commands and conditions that you will need to develop these programs. As each softkey is selected new softkey selections appear that lead you through your program. For example, if you select (Start), new softkey selections appear that allow you to tell the Advisor what to start. In this case, the Display, the Disk, or a Timer.

Always set up the Advisor with the proper parameters before programming. If the setup is incorrect the program may not work. For example, if the data code being monitored is EBCDIC, but your setup is ASCII, the data strings intended in these menus will be incorrect. If you change the setup menu after entering a program, the program may have blinking entry fields indicating those entries are inappropriate for the setup. If you change the setup data code or protocol after entering a character string, you must retype the string. The program will fail unless you change either the setup or the program.

Programs are organized in blocks. A maximum of 31 blocks is allowed per program. Blocks provide a reference for looping back or jumping ahead during program execution. When you insert and delete blocks, the numbering is automatically adjusted.

---

## Editing Programs

Use the (Insert Line/Block) and (Delete Line/Block/Prg) softkeys for editing programs. To insert or delete characters in a 'when' string, use the (Insert) or (Delete) softkey. The action is taken at the current cursor position.

The (Delete) key is continuous, the (Insert) key is not. Use the (Insert) key for each character you want to insert. You can delete several characters by holding the (Delete) softkey down.

---

## Executing Programs

To execute a program:

1. If you are not already at the Low Speed WAN Interface (4959) menu, select Low Speed Analyzer in the Toolkit by pressing **ENTER**, and then select Protocol Analyzer by pressing **ENTER**. This brings up the Low Speed WAN Interface (4959) menu.
2. Press **F5** (Run Menu).
3. Press the appropriate key: **F1** (Monitor Line), **F2** (Monitor Buffer), or **F3** (Simulate).

---

## Defining Triggers

By telling the Advisor to trigger on an event, you are telling it to look for that event in the data stream. The Advisor can trigger on up to 63 different events simultaneously. Once the Advisor has found an event, it can:

- notify you by beeping
- mark a highlighted event in memory
- modify a counter
- start and stop a timer
- branch to another block
- start and stop storing data to disk
- start and stop displaying data on screen
- pause execution
- write a message to the screen
- stop testing

Only the 'when' statement can define a trigger. Press the (When Trig) softkey in the monitor and simulate menus to invoke the 'when' trigger.

---

## Triggers Provide a Reference

'When' statements provide a point of reference in the data stream. They tell the Advisor exactly when to start an action. All 'highlight', 'beep', 'start' and 'stop' statements reference the last preceding 'when' statement in the program. Without a preceding 'when' statement, the Advisor cannot determine the exact point to start, stop, beep, or highlight.

If you put a command at the beginning of the program, action starts at the beginning of execution. But, for an action to start at the precise time that some event occurs, you must use a preceding trigger for that event.

There is a maximum of 63 triggers in a monitor or simulate program.

---

## Types Of Triggers

There are five different types of trigger conditions:

- Characters
- Leads
- Errors
- Timers
- Softkeys

---

## Characters

There are many conditions you can place on characters and character strings. This section explains what characters and character strings are, and how you can define your triggers.

Select (When Trig) and then select the (Text) softkey so you can enter keyboard characters. Press **SHIFT** with another key to access lower case characters. Press **CTRL** and another key to access control characters. See the keyboard diagram in chapter 1 for the locations of the control characters.

**Edit Character Strings.** Use the cursor keys or the (Delete) and (Insert) softkeys to edit a string. Use (More) to access additional softkeys when the cursor is placed in the string.

**Setup After Typing a String.** If you change the data code or protocol in the setup menu after typing a character string, you must retype the string to avoid triggering on the wrong characters. Characters in one code may not have the same meaning in another code. The Advisor displays ? if the newly selected code is not compatible with the previous code.

**Characters Not On the Keyboard.** EBCDIC and some other data codes have control characters not on the keyboard. Enter the hexadecimal equivalent of that character from the keyboard. Hexadecimal characters are displayed with an underline, control characters are not underlined. This is to distinguish the two on the screen. See the keyboard figure in chapter 1 for a complete view of where control characters are located on the keyboard.



## Programming Reference

### Defining Triggers

**Masking Out Characters.** Use the don't care condition to mask out string characters or bits of no interest. If any bit in a binary string is designated as 'don't care', the compressed character is denoted by a ? in a box.

**Binary and Hex Characters.** Select (Hex) to enter characters in hexadecimal; enter two hex digits for each character. Select (Binary) to enter characters in binary. If the setup menu data code is less than eight bits, enter the correct binary digits, right-justified. The excess bits on the left are disregarded.

Use the (Hex) or (Binary) softkeys to enter hexadecimal characters or binary strings. Two hex numbers occupy each character position, requiring two keyboard entries. Hex characters are displayed with an underline to distinguish them from text control characters with the same abbreviation.

When you select (Binary), eight binary bits are displayed, allowing you to enter a 1, 0, or don't care in any bit position. When you move the cursor out of the binary string, it collapses to its hex equivalent but is double underlined to indicate it was entered in binary.

You can see the binary or hex value of a character by placing the cursor over that character and selecting (Hex) or (Binary).

---

#### NOTE

---

##### **Data Code**

If the data code selected in the Setup Menu is less than eight bits (e.g., Baudot or Transcode), the appropriate number of higher order bits are disregarded.

**Excluding Characters.** To trigger on anything except a particular character, select (Not) before selecting the character. The Advisor places a bar over each character that you select until you select (Not\*) again.

**Flags and Frame Check Characters.** Flags and frame check characters are not automatically appended for 'when' strings. Enter these characters with the (Start Flag) and (End Frame) softkeys. End frame characters (the FCS characters and the last flag) may be useful if you wish to trigger on Bad FCS or Abort characters. Triggers for FCS errors or abort characters can only be programmed when a bit oriented protocol is selected on the setup menu.

**Parity.** The Advisor ignores the parity bit when triggering. You can see this by expanding the specified trigger character in binary when the setup is ASCII 7. The MSB (left) is designated 'don't care.' You can explicitly define this character by entering a 1 or 0 in binary to override the setup Menu. Parity error triggers can be entered only when a character oriented protocol is selected in the setup menu.

---

## Leads

To trigger on lead changes, select the desired lead from the softkeys. Depending on the interface selected and/or pod being used, the appropriate leads automatically appear as softkey choices. The lead trigger is satisfied when the lead goes on or off.

---

### NOTE

#### Needs a Transition

Unlike an 'if' statement, the lead trigger requires a transition.

**Delaying Output.** Use 'Wait' statements only with 'Send' and 'Set Lead' statements. Wait has no effect on program flow or timers. If you need to insert program pauses, use timers or counters.

---

### NOTE

#### Wait Statement

The 'wait' statement controls output only.

The 'wait' command can be set in 1 millisecond increments to cause delays of up to 65,535 milliseconds. In combination with counters, very long delays can be set up.

---

## Errors

You can trigger on the following errors:

**Table 11-1: Error Triggers per Setup Parameters**

BOPs	sync COPs	async COPs
FCS DTE	Parity DTE	Parity DTE
FCS DCE	Parity DCE	Parity DCE
Abort DTE	BCC DTE	BCC DTE
Abort DCE	BCC DCE	BCC DCE
		Framing DTE
		Framing DCE

---

## Timeouts

You can specify one of five timers in 1 millisecond increments from 0 to 65534.

You can trigger on the timeout of one of the five timers. The Advisor will trigger whenever the timer becomes greater than some specified time in milliseconds. You can select any time from 0 to 65,534 milliseconds. While monitor and simulate programs are limited to a maximum of 63 counters, timer triggers are not included in this number.

---

## Softkeys

The softkeys are numbered from 1 to 6 from left to right. The Advisor can trigger on the press of softkeys 3, 4, and 5.

‘When Softkey’ triggers can only be recognized when a softkey is pressed while the program is executing in the block which they appear. ‘When Softkey’ triggers can cause a character trigger in the same block to be missed, if the character trigger is more than one character long. It is a good practice to have only error, lead, or timer triggers in the same block with softkey triggers.

---

## Multiple Triggers

You can combine triggers two ways:

- You can logically 'OR' triggers by putting 'when' statements in the same block.
- You can 'sequence' triggers by putting 'when' statements in different blocks.

---

## ORing Triggers

'When' statements in the same block are ORed. To tell the Advisor to look for both events simultaneously put the 'when' statements in the same block. Once a trigger event is found all other triggers in that block are disabled. If two 'when' statements in the same block are satisfied simultaneously, only the one appearing first in the block is recognized.

```
Block 1:
When DTE abcd
    then goto Block 2
When Error Parity on DTE
    or
When Error Parity on DCE
    then goto Block 3
When Lead RTS goes On
    then goto Block 4
```

---

## Sequencing Triggers

In this example, the Advisor must find the string 'abcd' on the DCE before it can look for string 'efgh' on the DTE. To get to block 5, the Advisor must find both strings.

```
Block 1:
When DCE abcd
    then goto Block 2
```

## Programming Reference

### Defining Triggers

```
Block 2:  
When DTE  efgh  
    then goto Block 5
```

This allows the triggers to be conditionally enabled.

---

## Overlapping and Duplicate Triggers

For overlapping or duplicate triggers in the same block, the one found first disables the other triggers.

In the following example, if the data is 'yabc', only the first 'when' statement is executed. If the data is 'ybc' the second 'when' statement is executed. If the data is 'yc', only the third 'when' statement is satisfied. The first 'when' statement to be satisfied disables the others.

```
Block 1:  
When DTE  abc  
    then goto Block 2  
When DTE  bc  
    then goto Block 3  
When DTE  c  
    then goto Block 4
```

In the following example, if the data is 'ybc', only the trigger 'c's followed.

```
Block 1:  
When DTE  c  
    then goto Block 2  
When DTE  bc  
    then goto Block 3
```

When there are multiple trigger strings in a block, some of the triggers may be partially matched at the time one of the triggers is satisfied. If the program loops back for the next 'when' statement, these partial matches are remembered when

triggering resumes. This is useful when looking for strings on both sides of the line. This example, counts the number of times the string 'HELLO' occurs on the DTE and DCE side of the data line.

```
Block 1:
When DTE HELLO
    then goto Block 2
When DCE HELLO
    then goto Block 3

Block 2:
Increment counter 1 by 1
    and then
    goto Block 1

Block 3:
Increment counter 2 by 1
    and then
    goto Block 1
```

The Advisor begins matching triggers as the data comes in. When the 'O' comes in on DTE, the first when statement is matched. If, at the same time, the first four characters of the second when statement are already matched (since the program returns to block 1 for the next set of triggers) the partial match is remembered. When the final character on the DCE hello is received, the match on the second when statement is completed.

---

## Marking Triggers

The Advisor can mark each event you specify in the buffer by beeping or highlighting the event. Each marking condition refers to the last preceding trigger event.

---

## Beep

The 'beep' statement provides an audible sound for some specified condition. The Advisor can beep anytime, and as often as desired.

---

## Highlight

Use the 'highlight' command after a 'when' statement to mark trigger events in the buffer. Highlighted characters appear in half-bright, inverse video in the Examine Data menu.

Lead and timer transitions appear on the DCE line in the Examine Data menu if you are not using the Data and State display.

The Advisor remembers the last 64 highlights in the buffer (not disk). Only the last character of a trigger string is highlighted.

---

## NOTE

### Not to Disk

Highlights are not stored to disk when the data file is saved away (either .m&d or .buf).

---

---

## Measuring Time

Timers measure the time between triggers. The Advisor monitor and simulate menus each contain five timers, 1, 2, 3, 4, and 5. Each timer can measure up to 65,535 milliseconds.

---

## Time Stamps

Timers measure by looking at time stamps that are inserted with the data entering the Advisor.

In order to make accurate timing measurements, the bits/sec field of the Setup menu should match the line rate. Time stamps are stored in the buffer depending upon the bits/sec selection. If bits/sec is slower than the line rate timing measurement resolution is reduced. If bits/sec is faster than the line rate the buffer is filled with more time stamps than necessary and storage efficiency is reduced.

In bit oriented protocols, the start flag and address of a string have the same time mark. This is also true of the last character, the FCS, and the end flag.

---

## Timers

Timers measure the interval between trigger events. A timer must have a reference point to start and stop. Triggers provide a reference because they point to real events in the data stream.

To measure the time interval between two events, use two trigger statements to identify the events. After one trigger statement identifies the first event, start the timer. When the second trigger statement identifies the second event, stop the timer.

Timers are set to zero at the start of program execution and can be reset during program execution with a 'reset' statement.



## Programming Reference

### Measuring Time

**Stop a Timer Without Resetting.** Timers can be stopped with either a 'stop timer' or a 'stop tests' statement.

---

#### NOTE

##### **No Stop Tests**

Do not use a 'Stop Tests' statement unless you want to stop program execution.

---

### **Effects Of the Data Filter On Timing**

You cannot measure time if the data filter is turned on because the time stamps are filtered out of the data stream. And if you have 'timing information' turned off in the data filter your timing measurements will be inaccurate. The data filter can be found by selecting (Run Menu).

---

#### NOTE

##### **Timing Information**

Make sure 'timing information' is turned on in the data filter before you try to measure time.

Cursor timing is meant to be used only when timing information is enabled. Timers in Monitor and Simulate menus do not work at all if the timing information is disabled when data is captured.

Timing information should only be disabled to retain the maximum amount of data in the capture buffer, especially in line use situations. One time stamp is inserted in the incoming data stream for each six bits. With low line usage, this will fill the buffer with more time stamps than is necessary.

---

### **Lead Changes**

Timing on lead changes is exact to the resolution provided by the data rate selection in the setup menu. Lead changes on the T and R lines (when an X.21 protocol is selected) are exceptions. Timing information for the T and R lines is delayed 16 bit times from the beginning of a steady state '1' or '0'. Timing on these signals represents when the lead should be recognized as a steady state '1' or '0', and not when the steady state signal began.

---

## COP Send Strings

Data sent by the Advisor in character-oriented protocols (using send strings) has a two-bit offset in the timing information. Each transmitted character actually begins two bit times after the time reported by a cursor timing measurement.

Data received by the Advisor in character-oriented protocols is time stamped two bit times after each character is completed. So the delay from the start of each character to its time stamp is one character time plus two bit times.

The last character in a sync pattern has an added delay of one more character time. So the delay from the start of the last sync character to its time stamp is two character times plus two bit times.

The first character in a two character sync pattern has an added delay of still another character time.

---

## Bit-Oriented Protocols

Data in bit-oriented protocols is time stamped in the same way whether it is sent or received by the Advisor.

The start flag time stamp has a delay equal to 26 bit times plus one bit time for each zero automatically inserted in the bit stream of the first two characters following the start flag. A zero is automatically inserted after a series of five consecutive ones.

The first byte (address) has a time stamp delay of 18 bit times plus one bit time for each zero inserted during its own transmission or during the following byte. The result is that a cursor timing measurement from the start flag to the first byte shows  $\text{time} = 0.0 \text{ ms}$ .

All other bytes, except the Frame Check Sequence (FCS), are time stamped 34 bit times after they begin, plus one bit time for each zero inserted after any of these 34 bits.

The first byte of the FCS is time stamped 24 bit times after it begins plus one bit time for each inserted zero. The second FCS character is time stamped 16 bit times after it begins plus one bit time for each inserted zero.

The end flag time stamp has a delay of eight bit times.

---

## Timing Resolution

Timing resolution is the smallest unit of measurement that can be timed at a given speed. The following table gives the resolution for speed ranges:

**Table 11-2: Timing Resolution**

Data Rate Selection	Resolution
50-2400	1.0 msec
3200-4800	0.5 msec
7200-9600	0.2 msec
12 k - 64 kbps	0.1 msec

---

## Cursor Timing Limits

The maximum cursor time that can be measured before an overflow will occur is given in the table below. To determine the maximum cursor time that can be measured, select the speed (Bits/sec) and the corresponding maximum cursor time is given to the right in the table. If an overflow does occur, you will have to use the Monitor menu timers and run from buffer data.

**Table 11-3: Cursor Timing Limits**

Bits/sec	Maximum Cursor Time
50 - 2400	66.24 seconds
3200 - 4800	33.14 seconds
7200 - 9600	13.28 seconds
12 k - 64 kbps	6.66 seconds

At 64 kbps full duplex, data may be time stamped so that occasional groups of two or three sequential characters appear to be simultaneous. This has no cumulative effect.

---

## Counting Events

The Advisor has five counters that can count five different events simultaneously. The counter can be incremented by any number up to 65,535. For example, if you increment counter 4 by 2 every time an event occurs, the statement looks like this:

```
Increment Counter 4 by 2
```

---

## Countable Events

Countable events can be characters or character strings, lead changes, timer changes, counter changes, or program loops. Almost any action the Advisor performs can be counted. Place the increment counter statement directly after the event of interest.

### Maximum Count

Each counter counts to 65,535 and then starts over from zero. You can cascade counters by having one counter increment whenever a second counter overflows.

### Resetting Counters

Counters are always reset to zero at the start of execution. Counters can be reset with the 'reset counter' statement. When they are reset during a program, they go to zero and do not restart unless you start them again with an 'increment counter' statement.

### Decrementing Counters

To decrement a counter by 1, set the increment value to 65,535 rather than 1. To decrement by 2, set the increment value to 65,534. And so on.

## **Branching**

You can cause a conditional branch in the program using the 'if' statement or an unconditional branch with a 'goto block' statement. The 'if' statement branches if a condition is satisfied. The 'goto block' statement forces a branch regardless of any conditions.

---

## **Conditional Branching**

Tell the Advisor when to test lead status with a trigger. 'If lead' statements always test the link at the time the last trigger was found. There should always be a trigger statement before the 'if' statement.

A trigger must be used to define the exact time, therefore a 'when' statement must appear earlier in the program when using 'if lead'. An 'if lead' statement always refers to the lead condition at the time of the last trigger.

### **If Counter**

Counters run independently of line status. Therefore, 'if counter' statements do not need to be preceded by 'when' statements.

To use the 'if counter' command, press (Counter) and select the counter number. Then type the comparison number. You can enter any number from 0 to 65,534.

### **How 'If' and 'When' Are Different**

Only 'when' can define a trigger and wait for an event. 'If' tests the current status. Unlike 'if', the 'when' statement pauses program execution until the trigger is satisfied.

### Combining 'If' Statements

'If' statements in the same block are 'ORed'. The Advisor looks for all the conditions at the same time. The first satisfied 'if' controls the branch.

### Combining 'If' and 'When'

'If' can be used to guarantee action. For example, if you enter:

```
When Lead RTS goes Off  
    then goto Block 2
```

and RTS is already off, the program never moves. No program statements are executed until the trigger is satisfied. The 'when' statement requires a transition. On the other hand, if you enter:

```
If Lead RTS is Off  
    then goto Block 2
```

and RTS is on when the 'if' statement is executed, the program will never go to block 2. Unlike the 'when' statement, 'if' does not wait for a condition to happen. To ensure that execution always moves to block 2 when RTS goes off, enter the following:

```
If Lead RTS is Off  
    then goto Block 2  
When Lead RTS goes Off  
    then goto Block 2
```

---

## Unconditional Branching

An unconditional branch forces a jump in the program. Use the 'goto block' or 'gosub' command to branch to a different part of the monitor or simulate program.

## Programming Reference

### Branching

#### **'If' and 'When' Always Force a Branch**

Both 'if' and 'when' commands automatically append a conditional 'goto block' statement.

You can use 'goto block' to loop continuously. In the following example, you increment counter 1 until it reaches 200 and then jump out of the loop.

```
Block 1:  
Increment Counter 1 by 1  
If Counter 1 > 199  
    then goto Block 3  
Block 2:  
Goto Block 1
```

---

## Program Pauses

There are many times in a program you must enter a pause statement.

### Pause Example

Wait 40 milliseconds for a relay to open before performing the next program command.

---

### NOTE

#### Not wait statement

Do not use the 'wait' statement in the simulate menu to delay simulate programs. 'Wait' affects 'send' and 'set lead' output statements.

---

A timer is the best way to insert a program delay without multiple triggers (NOTE - this program only works if there is data being received).

```
Block 1:  
Beep  
    and then  
Start Timer 1  
When Timer 1 > 3000  
    then goto Block 2
```

```
Block 2:  
Reset Timer 1  
    and then  
Goto Block 1
```

Using a timer to delay is not always the right solution. Timer status can only be tested with a 'when' trigger. The trigger pointer moves through the data looking for the trigger event, but cannot move backwards.



---

## Starting and Stopping Commands

You can control the display or the disk using 'start' and 'stop' commands. The 'stop tests' command halts program execution.

There are two ways to provide a reference point for 'start' and 'stop' commands:

- **Start of execution.** If you put a 'start' or 'stop' command at the beginning of the program, it becomes active when you begin program execution.
- **Preceding trigger.** The last 'when' statement in the program provides a reference.

A 'start' or 'stop' becomes active when the last trigger event was found. If you insert a program pause using a timer or counter, 'start' or 'stop' is delayed by the amount of the pause.

---

## Filtering Data With 'Start' and 'Stop'

The 'start' and 'stop' commands can filter events of interest. Define an event in a 'when' statement and then start or stop the display or disk when that event occurs.

---

## 'Start' and 'Stop' Disk

You can start and stop the disk to capture only events of interest as often as you like. The following rules apply to 'start' and 'stop' disk statements:

- The disk can be started and stopped more than once.
- The 'start' command stores 256 bytes of the buffer preceding the event. The 'stop' command stores 256 bytes of the buffer after the event (256 bytes may be up to 125 characters depending on time stamp frequency and line utility). There is no way to indicate the event on the disk because highlights are not stored to disk.

- Timing measurements should not be made across fragmented data segments which have been gathered by pressing 'Start' and 'Stop' disk. The results could be in error.

---

**NOTE**

---

**Not from the buffer**

'Start Disk' is ignored when running from the buffer.

When you execute a monitor or simulate program with a 'start disk' statement, data is stored to the disk drive selected in the **F9** Config menu. For hard drives, data is stored to the disk buffer created in the Toolkit's Disk Buffer Manager. When storing to hard disks, make sure you 'Extract' the data to a \*.m&d file or files immediately afterwards.

---

**NOTE**

---

**Do Not stream to floppy**

Data should not be stored to the floppy drive while running because of excessive wear to the read/write heads.

---

**'Start' and 'Stop' Display**

---

The 'stop display' statement freezes the display after the occurrence of a trigger event. That trigger event and the preceding data are displayed on the screen. Execution is not stopped even though the display is turned off. The buffer is continually being filled with new data. To start the display again, use a 'start display' statement, or the (Start Display) softkey.

---

**NOTE**

---

**Turn the display off**

It is more efficient to turn the display off if you are running a program that causes buffer overflow errors.

## **Stop Tests**

The 'stop tests' statement halts program execution. No new data is loaded into the buffer, the disk stops, and any active timers stop.

- A 'stop tests' command is executed only after all the 'wait', 'send', and 'set lead' statements prior to it are performed.
- The 'stop tests' statement halts execution of all other program statements.
- If there are no 'when' statements in the program, the display will continue running until rule 1 is satisfied.
- The **EXIT** key is the only way to halt immediately.

---

## Message Capabilities

The Advisor lets you input 16 characters in the 'message' statement. These messages are also displayed at the bottom of the screen during execution. Messages are entered the same way as send strings, except that characters can only be inserted or deleted. Hex characters cannot be entered. Some sample reasons for entering messages are:

- You can have the Advisor tell you to perform some action during execution, such as pressing a softkey.
- You can label softkeys 3, 4, and 5, which are those used for softkey triggers.
- You can display a status message to tell users how a test is proceeding.

---

## Entering Messages

Select (Message) and begin typing text after Message. Messages can be up to 16 characters long (including spaces).

You must enter something in the message field, even if it is only blanks. If you do not enter anything in the field, an error message appears when you try to execute.

---

### NOTE

#### Fill the field

It is recommended to fill in all 16 characters of the message field, using spaces as necessary.

If a message is not 16 characters, some characters of a previous message may still show on the display.

## Programming Reference

### Message Capabilities

#### **Entering Messages Example**

If your first message was EXIT RUN PROGRAM, and the second message was START PROGRAM, the display after the second message would be START PROGRAMRAM. Filling the rest of the second message with spaces would fix the problem.

If a message is used to label softkeys 3, 4, and 5, the example just described becomes an advantage. A message can be sent to label the three softkeys. Later in the program, a new message can change one of the softkeys and leave the others.

---

## Subprograms

You can enter subprograms using the 'gosub block' and 'return' commands. You can nest up to eight subroutines. Subprograms are useful if a sequence of statements is used repeatedly in the program. Enter the sequence of statements once. If you put a 'return' statement at the end of the sequence, you can call that sequence anytime with a 'gosub block' statement.

The 'gosub block' statement causes a jump to the designated block. The 'return' statement causes a jump back to the line immediately following the 'gosub block' statement.

### Subprogram Error Example

For example, there are several places in a program where one of three different error messages might need to be displayed. Instead of entering all of the different error messages in the program repeatedly you can enter three subprograms.

```
Block x:
Message This is BCC Err
      and then
Return

Block xx:
Message This is Par. Err
      and then
Return

Block xxx:
Message This is Frame Err
      and then
Return
```

## Programming Reference

### Subprograms

#### Subprogram Delay Example

The same five second delay is used three times.

```
Block 5:  
  Start Display  
    and then  
  Gosub Block 25
```

```
Block 6:  
  Stop Display  
    and then  
  Gosub Block 25
```

```
Block 7:  
  Start Display  
    and then  
  Gosub Block 25
```

```
....  
Block 25:  
  Start Timer 1  
  When Timer 1 > 5000  
    then goto Block 26
```

```
Block 26:  
  Reset Timer 1  
    and then  
  Return
```

---

## Level 2 Programming

The Advisor assists you in entering level 2 and level 3 'send' and 'when' strings. This extension of softkey programming is in the monitor and simulate menus.

---

### NOTE

#### **Must be BOPs**

The setup menu protocol must be bit oriented, e.g., SDLC, HDLC, or X.25.

The 'send' command is available only in the simulate menu. However, the level 2 and 3 assisted mode is similar for 'when' and 'send' strings.

As you type in each entry the cursor automatically moves to the next entry position. A prompt appears to tell you the next entry and the previous entry. The prompting message also appears when you manually move the cursor with the cursor keys. For the cursor to move automatically to the next entry position, you must actually type in an entry, even if it is the same as the present entry. Of course, you can always move the left and right cursor keys to the adjacent field.

The Level 2 softkey allows the entry of the Address (Extended if present), Frame bits, Frame type, Poll/Final bit, N(S) (if present), and N(R) (if present).

To enter the level 2 assisted mode from a monitor or simulate menu, select (when) or (send) and then select (level 2).

---

### Address Field

You are asked to enter (in hex) a value for the address field. This prompt is displayed at the bottom of the Advisor display. If the right-cursor key is pressed before entering an address, it defaults to 00 hex.



## Extended Addressing

If extended addressing is on in the setup menu, two softkeys appear in the address field: (End Addr) and (Extend). Selecting (Extend) sets the least significant bit (LSB) to 0 and then adds a new byte to the address field, if necessary. Selecting (End Addr) ends the address field by setting the LSB at the cursor position to 1.

---

## Frame Type

After entering the address, you are prompted to enter the frame type.

### I-Frame

When you select I-frame, the LSB (farthest right) is set to zero. Then you are prompted to fill three fields: P/F is one bit, N(R) and N(S) are three bits each.

N(R) | P/F | N(S) | 0

N(S) Takes on values 0-7 if extended control (in the setup menu) is off; 0-127 if extended control is on. If a number greater than the upper limit is entered, N(S) defaults to the upper limit.

P/F Enter a 1 or 0 in the P/F field.

N(R) Same as N(S). After you enter a value for N(R), it exits from level 2 entry.

### S-Frame

When you select S-frame, the LSB (farthest right) are set to 01. Then you are prompted to fill the next three fields from right to left. S-frame type is two bits, P/F is one bit, N(R) is three bits.

N(R) | P/F | type | 01

After entering the S-frame type, you are then prompted to enter the P/F field and then the N(R) field. After entering N(R) the Advisor exits from the level 2 entry mode.

## U-Frame

When you select U-frame, the two LSBs (farthest right) are set to 11. You are then prompted to select the type of U-frame.

The type of U-frame is defined by two 3-bit fields filled at the same time when you select U-frame type from the softkeys. The default value for the U-frame type is UI. The P/F field requires one bit.

type		P/F		type		11
------	--	-----	--	------	--	----

After entering P/F the Advisor exits you from the level 2 entry mode.

---

## Level 3 Programming

---

### NOTE

**Level 3 Programming is for X.25 ONLY**

Packets are entered by selecting Level 3 and then the entry point, general format identifier (GFI), logical channel number (LCN), or packet type. When GFI is chosen, the Q and D bits and the modulo 8 or 128 can be entered. If packet type is chosen, softkeys appear for 17 different packet types.

The (Level 3) softkey enables you to enter the three fields of the packet header: GFI, LCN, and Packet Type. For most packets, these each take up one byte. Some packet types, however, require a longer packet header. The packet header normally follows the first two bytes of level 2 information, 'address' and 'control.'

flag | address | control | GFI | LCN | packet type

Of course, if either extended address or extended control in the setup menu are on, there may be more than two level 2 bytes. Frame type also determines the number of level 2 fields.

---

### NOTE

#### **Moving the cursor**

If you move the cursor too far and drop out of assisted mode, select the (Level 2) or (Level 3) softkeys again. Then move the cursor to the desired field.

---

## Selecting Level 3 Before Level 2

In this case, zeroes are automatically appended for the level 2 bytes in send strings, and 'don't cares' in trigger strings. Unless extended address or extended control in the setup menu are on, the cursor is positioned on the third byte, 10 hex. Flags are shown by '|', and a good frame check sequence by GG.

| 000010GG |

When you select (Level 3), three new softkeys appear allowing you to enter the packet header from three different points: GFI, LCN, and Packet Type.

If LCN is selected before GFI (missing GFI), the Q and D bits are set to zero, modulo 8 is selected, and the LCGN is set to zero (don't cares for trigger strings).

If Packet Type is selected first (missing GFI and LCN), GFI is set the same as above, and the LCN is also set to zeros (don't cares for trigger strings).

## GFI Field

The GFI byte consists of four fields from left to right: Q, D, MOD, and LCGN. Q and D consist of one bit each, Mod is a 2-bit field, and LCGN is a 4-bit field.

Q | D | mod | LCGN

- Q Bit**      Selecting the GFI softkey prompts you to enter a 1 or 0 for the Q bit. When you enter a value for the Q bit or press the right-cursor key, the D-bit prompt appears.
- D bit**      When you enter the D bit or press the right-cursor key, the D prompt appears.
- Mod**        Select either (Mod 8) or (Mod 128) to select either 01 or 10 for the two-bit mod field. Entering a value for the mod field or pressing the → causes the LCGN prompt to appear. Selecting (Mod 128) causes the packet type field to expand to two bytes for some packet types (see the Packet Type Field).
- LCGN**      The LCGN is a four-bit field which you can enter with a decimal value from 0 - 15.

## LCN Field

The LCN field is the next byte to the right of the GFI byte. You can use either decimal or hex entry to select values from 0-255 or 00-FF.

## Packet Type Field

When the last digit of the LCN is entered, the 'packet-type' field appears. The default packet type is Data. If Mod 128 was chosen in the GFI field, the packet-type field expands to two bytes for some packet types, as described below.

The Packet-Type field for a data packet is like the control field for an I-frame. Entry of the P(S), M, and P(R) is just like the entry of N(S), P/F, and N(R) fields. When you select a Data packet, the LSB (far right) becomes zero. Then you are prompted to fill three fields from right to left. P(S) and P(R) each require three bits; M requires one bit.

P(R) | M | P(S) | 0

If you selected Mod 128 in the GFI, the packet-type field consists of two bytes rather than one. P(S) and P(R) each take up seven bits.

### **Other Packet Types**

RR, REJ, and RNR packet types have a P(R) field. All other packet types do not have any such fields except Data.

---

## Conditions when Simulating

The line does not display idles or store idles in the buffer unless the send characters are explicitly placed in the send string.

---

### Block Check Characters

In character oriented protocols, the Advisor automatically appends the correct Block Check Characters (BCC) to 'send' strings. You can see this character at run-time or in the buffer after a run. In 'char' protocol setup you can select the characters on which error checking is to start and stop. In the setup menu, the 'start on' selection begins error checking following the designated character. The 'stop on' character includes the designated character in the error check.

---

#### NOTE

##### **Automatic for BSC**

Bisync automatically appends BCC characters. The start and stop characters are preset.

The BCC is automatically generated for the first required BCC. For any subsequent BCC blocks of text or data within the same sync pattern, you must enter BCC manually into the string.

---

### Frame Check Sequence

Flags and frame check sequence (FCS) characters are automatically added when a bit oriented protocol (HDLC, SDLC, X.25) is selected.

For received data, GG, BB, or AA are displayed to indicate 'good FCS', 'bad FCS', or 'abort'. For 'send' strings, good FCS characters (GG) are automatically selected; but you may choose bad FCS (BB) characters or abort (AA) characters

by selecting (End Frame) and then selecting either (Bad FCS) or (Abort). Flags and frame check characters disappear if you change the setup to a character oriented protocol and again move the cursor into the string.

In bit oriented protocols, the Advisor automatically inserts a 0 (invisible to you) after five consecutive 1's before transmitting non-flag characters (invisible to the user). When receiving, it automatically removes any 0 bits inserted by the transmitter.

---

## **Set Lead**

The 'set lead' command turns a selected interface lead on (SPACE) or off (MARK). With an EIA-232C/V.24 interface, a lead is on when the voltage is greater than +3V and off when the voltage is less than -3V. The protocol idles in the SPACE condition.

## **Lead Status During Simulation**

When simulating, only the appropriate lead softkeys are displayed. At the beginning of simulate execution, the Advisor sets all the leads it can drive to off. You must use 'set lead' statements to perform handshaking with the receiving device.

Because the Advisor always sets the appropriate DTE or DCE leads off at the beginning of the simulation run, 'set lead' statements are needed to turn the appropriate leads on before sending data. If this is not done, the receiving device might not accept data from the Advisor.

---

### **NOTE**

#### **Set Leads**

Determine which interface leads must be set on or off before sending data. Otherwise, the receiving equipment may not accept the data.

---



**Programming Reference**  
**Conditions when Simulating**

\_\_\_\_\_

\_\_\_\_\_

## **Glossary**

## Glossary

This glossary is a general explanation of terms that are used in this manual. The terms are not necessarily Hewlett-Packard specific, but are for data communications in general.

# A

### ***ADCCP (Advanced Data Communication Control Procedure)***

This level 2 protocol was developed by ANSI (American National Standards Institute). All data transmissions are in frames, and the starting flag, address, and control fields are known as "header" information and the FCS and ending flags are known as "trailer" information.

### ***Advanced Data Communication Control Procedure (ADCCP)***

This level 2 protocol was developed by ANSI (American National Standards Institute). All data transmissions are in frames, and the starting flag, address, and control fields are known as "header" information and the FCS and ending flags are known as "trailer" information.

### ***Alternate Mark Inversion (AMI)***

The bipolar AMI format alternates the polarity of each 1 (or mark). The first 1 is sent as a positive signal; the second 1 as a negative signal; and so on. On a T1 line, two consecutive 1s of the same polarity cause a "bipolar violation" and indicate an error on the line.

### ***American Standard Code for Information Interchange (ASCII)***

ASCII utilizes seven bits to represent numbers, letters of the alphabet, and special characters to be transmitted.

### ***AMI (Alternate Mark Inversion)***

The bipolar AMI format alternates the polarity of each 1 (or mark). The first 1 is sent as a positive signal; the second 1 as a negative signal; and so on. On a T1 line, two consecutive 1s of the same polarity cause a "bipolar violation" and indicate an error on the line.

### ***ASCII (American Standard Code for Information Interchange)***

ASCII utilizes seven bits to represent numbers, letters of the alphabet, and special characters to be transmitted.

### ***Auto Configure***

The Advisor can sample line data and automatically make Advisor settings (auto configure) to correctly monitor a line.

# B

***B8ZS (Bipolar 8 Zero Substitution)***

B8ZS deals with the one's density (or zero constraint) rules. Whenever eight zeros in a row are seen on the line, a special B8ZS code is sent.

***Backward Explicit Notification Bit (BECN)***

In Frame Relay, the BECN bit notifies the sending node (or source end) that there is congestion in the opposite direction of the data flow.

***Bandwidth***

The maximum rate that data can be sent without errors measured in bits per second (or bps).

***BCC (Block Check Character)***

An error checking character that is appended to a character-oriented protocol by the transmitter. The BCC is automatically appended to send strings in the Simulate menu.

***BECN (Backward Explicit Notification Bit)***

In Frame Relay, the BECN bit notifies the sending node (or source end) that there is congestion in the opposite direction of the data flow.

***BERT***

Bit Error Rate Tests (BERT) measure analog noise on a digital circuit. You can determine how often highs are erroneously changed to lows and lows to highs.

***Bipolar 8 Zero Substitution (B8ZS)***

B8ZS deals with the one's density (or zero constraint) rules. Whenever eight zeros in a row are seen on the line, a special B8ZS code is sent.

***Bisync (BSC)***

Most common character-oriented protocol that predefines sync characters depending upon data code.

***Bit Count***

The number of actual data bits sent since synchronization (excluding framing, start, stop, and parity bits).

## Glossary

### ***Bit Error Rate***

The number of bit errors divided by the number of bits received.

### ***Bit Error Rate Tests (BERT)***

BERT measures analog noise on a digital circuit. You can determine how often highs are erroneously changed to lows and lows to highs.

### ***Bit Oriented Protocols (BOPs)***

Bit Oriented protocols are level 2 protocols developed for a variety of system requirements. Some of the more common BOPs are HDLC, SDLC, ADCCP, and LAPB.

### ***Block***

Bits are grouped in blocks for measuring block error rate, sometimes referred to as BLERT.

### ***Block Count***

Tells how many blocks have been sent thus far in a test.

### ***Block Error Rate***

The number of block errors divided by the number of blocks received. Whether there is one error or ten errors in a block, it is still counted as one block error.

### ***Block Errors***

Tells how many blocks had at least one error.

### ***Block Sizes***

The Bell system uses a block size of 1000 bits. CCITT, the world-wide standard, uses a block size equal to the pattern size. For example, if the PRBS pattern is 511 bits, then the block size would also be 511 bits.

### ***BOPs (Bit Oriented Protocols)***

Bit Oriented protocols are level 2 protocols developed for a variety of system requirements. Some of the more common BOPs are HDLC, SDLC, ADCCP, and LAPB.

### ***bps***

bits per second.

## C

***BSC (Bisync)***

Most common character-oriented protocol that predefines sync characters depending upon data code.

***Character-oriented protocol (COPs)***

Half-duplex protocol that utilizes each significant character.

***Control field***

Field used to identify an I-frame, S-frame, and U-frame and control the behavior of the frame.

***CRC (Cyclic Redundancy Checking)***

A method of checking the valid transfer of data in equipment that doesn't do character checking.

***Cyclic Redundancy Checking (CRC)***

A method of checking the valid transfer of data in equipment that doesn't do character checking.

## D

***D/E (Discard Eligibility Bit)***

In Frame Relay, this bit identifies frames that can be discarded.

***D4 Frame***

A D4 frame is a group of 193 bits that makes up a single transmission in T1 networks. This frame may be unformatted (193 continuous bits) or formatted (24 DS0 channels). Each 193 bit frame is made up of 192 bits with one framing bit (F bit).

***Data Link Connection Identifier (DLCI)***

The Data Link Connection Identifier (DLCI) is made up of six bits in a frame relay frame. All DLCIs are listed in a table. A DLCI checks the integrity of the frame using a Frame Check Sequence (FCS). If an error is found, the frame is deleted.

***Data Link Layer***

Level 2 of the seven level OSI reference model defined by ISO. This layer provides the link access control and reliability to networks.

## Glossary

### ***DCE***

Data Communications Equipment

### ***Digital Signal, level one (DS-1)***

DS-1 is the 1.544 Mbps signal generated at the output of a T1 network such as a channel bank, MUX, or digital PBX. DS-1 normally transfers 24 channels of DS-0 and can be used with SF or ESF framing.

### ***Digital Signal, level zero (DS-0)***

DS-0 is the 64 Kbps single-channel signal generated by T1 and used in terminal devices such as a channel bank, MUX, or digital PBX.

### ***Discard Eligibility Bit (D/E)***

In Frame Relay, this bit identifies frames that can be discarded.

### ***DLCI (Data Link Connection Identifier)***

The Data Link Connection Identifier (DLCI) is made up of six bits in a frame relay frame. All DLCIs are listed in a table. A DLCI checks the integrity of the frame using a Frame Check Sequence (FCS). If an error is found, the frame is deleted.

### ***Download***

A remote operation that transfers data, menus, or applications from a controller Advisor to a remote slave Advisor.

### ***DS-0 (Digital Signal, level zero)***

DS-0 is the 64 Kbit/s single-channel signal generated by T1 and used in terminal devices such as a channel bank, MUX, or digital PBX.

### ***DS-1 (Digital Signal, level one)***

DS-1 is the 1.544 Mbps signal generated at the output of a T1 network such as a channel bank, MUX, or digital PBX. DS-1 normally transfers 24 channels of DS-0 and can be used with SF or ESF framing.

### ***DSU/CSU (Data Service Unit/Channel Service Unit)***

DSU/CSU is a term commonly applied to equipment at the customer premises (equipment) side or the company (line) side of a network.

### ***DTE***

Data Terminal Equipment

# E

***Elapsed Seconds***

Elapsed time since receiver synchronization.

***Emulation***

An Advisor enters the network as a DCE or DTE. This technique exercises the network with known (user defined) data. Emulation differs from simulation in that it provides the interaction necessary to emulate a device on the network.

***Equipment Build Out***

This is an option used to set the transmitter signal level and pulse shape to match the length of cable to the first repeater on the network.

***Errored Seconds***

Tells how many of the elapsed seconds had errors.

***ESF (Extended Superframe Format)***

An Extended Superframe consists of 24 frames with 193 bits each. One of the 193 bits is used for framing and called the framing bit. In ESF, not all of the framing bits (24) are needed. Six of these framing bits are used for framing, six are used for a CRC, and the remaining 12 bits make up a data link for control and maintenance.

# F

***FCS (Frame Check Sequence)***

An error checking character that is appended to a bit-oriented protocol by the transmitter.

***FECN (Forward Explicit Notification Bit)***

In Frame Relay, the FECN bit notifies the sending node (or source end) that there is congestion in the direction of the data flow.

***Forward Explicit Notification Bit (FECN)***

In Frame Relay, the FECN bit notifies the sending node (or source end) that there is congestion in the direction of the data flow.

***Fractional T1 (FT1)***

A method of providing T1 service in 64 kbit/s units (for example - 256 kbit/s or 128 kbit/s). For Nx64 capability, clear channels (64 kbit/s) are provided by using B8ZS coding or ones insertion. The ones insertion is usually done by



## Glossary

using every other timeslot for customer data and filling the in-between timeslots with ones, or by setting one bit per timeslot to one (in that case, the service is Nx56).

### ***Frame***

A frame is a unit of information transferred on a network which contains control and data information.

### ***Frame Check Sequence (FCS)***

An error checking character that is appended to a bit-oriented protocol by the transmitter.

### ***Frame Relay***

Frame Relay is an interface protocol which provides efficient transport of variable units of data (frames) from sources to destinations over a physical connection.

### ***Fs (Signal Framing)***

The framing bit (f) identifies frames 6 and 12 in which signaling states, A and B are transmitted when traffic on a network is channelized voice service.

### ***Ft (Terminal Framing)***

The framing bit (F bit) identifies the frame boundaries in a Frame Relay frame.

### ***FT1 (Fractional T1)***

A method of providing T1 service in 64 kbit/s units (for example - 256 kbit/s or 128 kbit/s). For Nx64 capability, clear channels (64 kbit/s) are provided by using B8ZS coding or ones insertion. The ones insertion is usually done by using every other timeslot for customer data and filling the in-between timeslots with ones, or by setting one bit per timeslot to one (in that case, the service is Nx56).

# H

### ***HDLC (High Level Data Link Control)***

This level 2 protocol was developed by ISO (International Standards Organization). All data transmissions are in frames, and the starting flag, address, and control fields are known as "header" information and the FCS and ending flags are known as "trailer" information.

***High Level Data Link Control (HDLC)***

This level 2 protocol was developed by ISO (International Standards Organization). All data transmissions are in frames, and the starting flag, address, and control fields are known as "header" information and the FCS and ending flags are known as "trailer" information.

***I-frame***

Information frame (level 2) used to carry user data.

***IPARS***

International Passenger Airline Reservation System is used by most airlines. IPARS is a character-oriented protocol with six-bit data code and inverted bit sense.

***Isochronous***

Isochronous transmission is BERT asynchronous data with the Advisor acting as a DCE with an internal X1 clock.

***LAN (Local Area Network)***

A short distance network (up to a few thousand meters) used to connect many network devices using a communication standard.

***LAP-B (Link Access Procedure, Balanced)***

This level 2 protocol was developed by CCITT (International Telegraph and Telephone Consultative Committee) as a part of the X.25 network standard. All data transmissions are in frames, and the starting flag, address, and control fields are known as "header" information and the FCS and ending flags are known as "trailer" information.

***Leased Line***

Permanent connection for private use within a data communication network independent of the public switching and signalling equipment.

***Line Build Out***

This is an option used to set the transmitter signal level and pulse shape to match the length of cable to the first repeater on the network.

***Link Access Procedure, Balanced (LAP-B)***

This level 2 protocol was developed by CCITT (International Telegraph and Telephone Consultative Committee) as a part of the X.25 network standard. All data transmissions are in frames, and the starting flag, address, and control fields are known as "header" information and the FCS and ending flags are known as "trailer" information.

***Longitudinal Redundancy Check (LRC)***

A technique for error checking in the data stream where each character plus parity is used to calculate errors.

***Mass Store Device***

Devices used to store menus, data, and applications.

***Monitor***

Non-intrusive method of looking at the data stream on a line.

***Multi-drop configuration***

A remote configuration that has a controlling Advisor connected to more than one slave.

***N(R)***

Receive Sequence Number.

***N(S)***

Send Sequence Number.

***Network Layer***

Level 3 of the seven level OSI reference model defined by ISO. This layer provides the routing of data through the network.

***NRZI Non-Return to Zero Inverted***

With no clock present, the clocking signal is embedded in the data stream.

***Nx56***

Nx56 is used to represent the number of 56 Kbps channels to be used by a connection where N represents the number of channels. A connection using 2x56, for example, has 112 Kbps of bandwidth available, and uses 2 of the 24 individual 56 Kbps time slots in a channel.

***Nx64***

Nx64 is used to represent the number of 64 Kbps channels to be used by a connection where N represents the number of channels. A connection using 3x64, for example, has 192 Kbps of bandwidth available, and uses 3 of the 24 individual 64 Kbps time slots in a channel.

**O*****Octet***

The common term used for a collection of 8 bits is a byte. In some cases, the term used is an octet. Although many people use these terms interchangeably, there are a few differences. The bits of a byte are normally numbered from 0 to 7. The bits of an octet are generally numbered from 1 to 8. While the 4th bit of both a byte and an octet are the same, "bit 4" of each is a different bit.

**P*****P/F***

Poll/Final bit.

***Packet Switching***

A technique implemented by the Public Data Networks where all data transfers are broken up in fixed length blocks (usually 128 bytes) surrounded by control information.

***Permanent Virtual Circuit***

A permanent virtual circuit is a permanent association between two DDS, established by the user when subscribing to a packet-switched network and is similar to a leased line.

***Physical Layer***

Level 1 of the seven level OSI reference model defined by ISO. This layer provides the electrical, mechanical, and other physical aspects for a network.

***Point-to-point configuration***

A remote configuration that has two Advisors connected to each end.

***PRBS (Pseudo Random Bit Sequence)***

A BERT tester generates pseudo random bit sequences from a shift register of length L, where the sequence length equals  $2^L - 1$  bits. A PRBS may be of any length but certain pattern lengths have become standard. The Advisor uses PRBS lengths of 63, 511, 2047, or 4095.

***Pseudo Random Bit Sequence (PRBS)***

A BERT tester generates pseudo random bit sequences from a shift register of length L, where the sequence length equals  $2^L - 1$  bits. A PRBS may be of any length but certain pattern lengths have become standard. The Advisor uses PRBS lengths of 63, 511, 2047, or 4095.

# R

***RS-232C/V.24***

Most common level 1 interface up to 20 Kbps and 50 feet. It is a 25 pin interface and uses an unbalanced single end generator and receiver.

***RS-449***

Mechanical standard that defines 37 pins plus nine secondary channels. This mechanical standard uses two electrical standards; EIA-423A/V.10 and EIA-422A/V.11.

# S

***S-frame***

Supervisory frame (level 2) used to acknowledge or reject frames.

***SDLC (Synchronous Data Link Control)***

This level 2 protocol was developed by IBM. While it is not actually a standard (as being defined by a standards organization) it is commonly used. All data transmissions are in frames, and the starting flag, address, and control fields are known as "header" information and the FCS and ending flags are known as "trailer" information.

***Signal Framing (Fs)***

The framing bit (f) identifies frames 6 and 12 in which signaling states, A and B are transmitted when traffic on a network is channelized voice service.

***Simulation***

An Advisor enters the network as a DCE or DTE. This technique exercises the network with known (user defined) data.

***Switched Virtual Circuit***

Temporary association between two DDS established by the calling DTE sending a call request packet to the packet-switched network. This circuit is held for the duration of the call.

***Synchronous Data Link Control (SDLC)***

This level 2 protocol was developed by IBM. While it is not actually a standard (as being defined by a standards organization) it is commonly used. All data transmissions are in frames, and the starting flag, address, and control fields are known as "header" information and the FCS and ending flags are known as "trailer" information.

**T*****T1***

T1 is a 1.544 Mbps network.

***Timing Resolution***

Smallest unit of measurement that can be timed at a given speed.

***Toolkit***

The User Interface for the Low Speed Internet Advisor.

***Transparent Text***

Text that is masked out in the data stream. You can selectively define transparent text so a receiver will accept unexpected characters.

***Trigger***

When a programming condition is defined, a trigger is used to alter program execution. The Advisor defines triggers with a 'when' condition.

**U*****U-frame***

Unnumbered frames (level 2) used to initialize and disconnect the DTE/DCE link.

***Upload***

A remote operation that transfers data, menus, or applications from a remote slave Advisor to a controller Advisor.

# V

## ***V-Series***

The term associated with using a interface such as RS-232C, RS-449, V.35, etc.

## ***V.35***

A digital interface transmitting data at 48 kbps. This interface is for clock and data signals with each signal requiring a pair of wires. This is a typical interface for 56 kbps DDS lines.

## ***Vertical Redundancy Check (VRC)***

A technique for error checking in the data stream where each character plus parity is used to calculate for errors (similar to LRC).

## ***Virtual Circuit***

Bi-directional association between two DDS across a packet switched network. It is not a direct connection, but a logical communication path.

## ***Virtual Terminal Remote***

A remote operation with the ability to display an exact duplicate of the slave screen on the controller. This allows for real-time viewing and troubleshooting from a remote site.

# W

## ***WAN (Wide Area Network)***

A communications network that uses public and/or private telecommunications facilities to link computing devices that are spread over a wide geographic area.

## ***Wide Area Network (WAN)***

A communications network that uses public and/or private telecommunications facilities to link computing devices that are spread over a wide geographic area.

# X

## ***X.25***

Interface between DTE and DCE for terminals operating in the packet mode on Public Data Networks. This CCITT recommendation specifies that the necessary elements for an interface recommendation should be defined independently in three levels.

---

## Index

### A

- AA 11-37
- Additional Help ix
- Address Field 11-29
- Advisor
  - connections 2-3
  - operating system 1-2
  - Set up 4-2
  - starting 2-2
  - turn on 2-2
- Analyzing Captured Data 5-7
- ASCII control characters
  - printed 6-9
- ASCII print file 6-10
- Asynchronous Data
  - Auto Configure 4-17
- asynchronous terminal 10-2
- Asynchronous Terminal Emulator 10-6
- Auto Configure 4-2
  - asynchronous 4-16, 4-17
  - BOP 4-18
  - COPs 4-19
  - results 4-15
  - starting 4-15
  - synchronous 4-16
- Auto Configure algorithm 4-16
- Auto Configure Softkey 4-15
- autorun 3-12

### B

- Baud Rate 7-4
- baud rate

- printer 6-5

- BB 11-37
- beep 11-4
- Beep statement 11-12
- BERT 8-4
  - Basic Measurements 8-3
  - configuring 8-8
  - End-to-end connections 8-5
  - error injection softkeys 8-20
  - evaluating results 8-23
  - exiting a running 8-21
  - G.821 Analysis 8-4
  - handshaking 8-18
  - injecting errors 8-20
  - loading a configuration 8-13
  - log files 8-13
  - Loopback testing 8-5
  - Message Editor 8-14
  - no exit with logging 8-21
  - resetting counters 8-21
  - result logging 8-12
  - saving a configuration 8-13
  - setting line characteristics 8-8
  - starting a measurement 8-19
  - stopping 8-6
  - stopping a measurement 8-19
  - summary format 8-23
  - synchronization 8-18
  - test options 8-10
  - testing a circuit 8-18
  - types of tests 8-5
  - viewing a log 8-23
- Bisync 4-8
  - setup definitions 4-8



- Bisync (BSC) 4-8
  - Bit sense 4-8
  - bits/sec 4-8
  - code 4-8
  - display 4-8
  - DTE Clock 4-8
  - error checking 4-8
  - mode 4-8
  - parity 4-8
  - suppress 4-8
  - Sync on 4-8
- bit error rate 8-2
- Bit Error Rate Testing (BERT) 8-2
- bit error ratio 8-4
- Bit Oriented Protocols 4-7, 4-18, 11-15
- Bit Oriented Protocols (BOPs)
  - Bits/sec 4-7
  - clock 4-7
  - error checking 4-7
  - ext address field 4-7
  - ext control 4-7
  - mode 4-7
  - setup definitions 4-7
- Bit Rates
  - User Defined 4-13
- Bit shifting 4-21
- blinking asterisk 4-16
- Block Check Characters 11-36
- block error rate 8-2
- BOPs 4-7, 4-18
  - Auto Configure 4-18
- Branching 11-18
- breakout box 1-4
- breakout box connections 1-4
- browsing directories 3-9
- BSC 4-8
- Buffer Data
  - viewing 5-3
- buffer data 4-20
- buffer printing 6-6

**C**

- capture buffer 5-2
- Captured Data 5-7
  - analyzing 5-7
  - ASCII print file 6-10
- capturing data 2-6, 4-32, 4-49, 9-2
  - hard disk 4-49
  - high speed 9-2
- Capturing Unknown Data 4-20
- CCITT G.821 8-4
- Chang Dsply 5-5
- change display format 5-5
- Character Oriented Protocols 4-9, 4-19
- Character Oriented Protocols (COPs)
  - Bit order/sense 4-9
  - Bits/sec 4-9
  - clock 4-9
  - code 4-9
  - display 4-9
  - drop sync after 4-9
  - mode 4-9
  - parity 4-9
  - setup definitions 4-9
  - start on/stop on 4-9
  - suppress 4-9
  - sync on 4-9
  - transparent text char 4-9
- Character Triggers 11-5
- Characters Not On the Keyboard 11-5
- Chat Mode 7-5
- Com Port 7-4
- Com port
  - VT100 10-2
- Combining If and When 11-19
- Combining If Statements 11-19

- comments 3-10, 3-13
- Conditional Branching 11-18
- configuration
  - loading BERT options 8-13
  - saving BERT options 8-13
- Configuring a BERT Measurement 8-8
- Connecting the Printer 6-3
- connections
  - Active Connection to Test DCE and Link 2-7
  - Active Connection to Test Terminal Device 2-5
  - Advisor 2-3
  - breakout box 1-4
  - Passive Monitor In-Line Connection 2-3
  - Passive Monitor Test Panel Connection 2-4
  - V-Series 2-3
  - Y-Cable 2-3
- connector pins
  - RS-232/V.24 1-7
  - RS-449 1-8
  - V.35 1-9
- control characters
  - emulator 10-11
- COPs 4-9, 4-19, 4-22
  - Auto Configure 4-19
- Countable Events 11-17
- Counter Softkey 11-18
- Counting Events 11-17
- creating a simulate program 4-33
- Current Mass Store Directory 5-3
- cursor timing 11-14, 11-16

## **D**

- D bit 11-32, 11-34
- Data
  - printing 6-2
- data
  - analyzing 5-7

- post-processing 5-7
- Data Communications Library parameters 4-31
- Data Filter 11-14
- decrementing counters 11-17
- default packet 11-34
- defining triggers 4-24, 4-32, 11-4
- Delaying Output 11-7
- Delete Block Softkey 11-3
- disconnect switches 1-5
- disk buffer 4-49, 4-50
  - definition 4-49
  - extracting data 4-46
  - initialization 4-50
  - suggested 4-49
- disk buffer extractor 4-46
- display
  - exponential notation 8-4
  - hexadecimal 8-16
- Display Format 5-5
- Don't Care 4-28
- drop sync 4-12
  - example 4-13
- drop sync characters 4-12
  - example 4-12
- Duplicate Triggers 11-10

## **E**

- Edit Character Strings 11-5
- Editing Programs 11-3
- Emulator 10-3
  - ProComm 10-3
  - VT100 10-4
- emulator 10-9
- End Addr Softkey 11-30
- End Frame 11-37
- End Frame Softkey 11-6
- ENQ/ACK 10-4
- entering binary characters 11-6

- entering hex characters 11-6
- Entering Messages 11-25
- Error Checking
  - drop sync 4-12
  - drop sync example 4-13
- Error Triggers 11-8
- escape codes
  - from emulator 10-11
- evaluating data 5-3
- Exam Data 5-3
- Examine Data 5-3
  - buffer data 5-3
- Excluding Characters 11-6
- Execute Softkey 10-4
- Executing Programs 11-3
- exponential format 8-4
- Extend Softkey 11-30
- extended address 4-19, 11-32, 11-33
  - Auto Configure 4-18
- Extended Addressing 11-30
- extended control 4-19, 11-32, 11-33
  - Auto Configure 4-18
- Extract Block softkey 4-47
- extracting data 4-46, 4-48
  - disk buffer 4-46, 4-48
  - field definitions 4-48, 4-49
  - macro view 4-48
  - micro view 4-49

## **F**

- files
  - BERT logs 8-13
  - editing a message 8-14
  - viewing BERT logs 8-23
- Flags 11-6
- floppy disk
  - storing data 4-43
- frame check 5-6

- Frame Check Characters 11-6
- Frame Check Sequence 11-36
- Frame Type 11-30

## **G**

- G.821
  - BERT Analysis 8-4
- GFI 11-32, 11-33, 11-34
- GG 11-37
- gosub block statement 11-27
- graphics mode 6-3
  - printed output 6-8
- group icon 3-6
- group information menu 3-11
- groups
  - adding 3-7
  - copying 3-8
  - deleting 3-7
  - modifying 3-8
  - pasting 3-8

## **H**

- hard disk
  - storing data 4-42
- Hardware Handshaking 7-4
- Help
  - Additional ix
- Hex 5-5
- Hex codes
  - printed 6-8
- Hex Entry 10-10
- Hexadecimal characters
  - printed 6-8
- Hexadecimal Entry 4-11
  - parity 4-11
- High Speed Analyzer Menu 3-5
- High Speed Capture Limits 9-6

- high speed data
  - capturing 9-2
- highlight 11-4, 11-12
- horizontal scaling
  - printer output 6-5
- hptools 3-5
- HS Capt Softkey 9-3
- HS\_Capture 9-2

## I

- If Counter 11-18
- I-frame 4-29, 11-30
- initializing a hard disk buffer 4-49
- initializing the disk capture buffer 4-50
- initializing the hard disk
  - capturing data 4-49
- Insert Block Softkey 11-3
- Insert Line 11-3
- interactive testing 2-6
- interface
  - selecting 4-4
  - user 3-2
- interface activity LEDs 1-10
- interface pod 10-2
- inverse video
  - printed 6-9
- ISDN 8-4

## L

- label 3-12
- LCGN 11-34
- LCN 11-32, 11-33, 11-34
- Lead Levels
  - printed 6-9
- lead status LEDs 1-10
- Lead Triggers 11-7
- LEDs 1-10

- different groups 1-10
- interface activity 1-10
- lead status 1-10
- Level 2 4-27
- Level 2 programming 11-29
- Level 2 programming| 4-27
- Level 3 4-35
- Level 3 programming 4-35, 11-32
- Level 3 send string 4-35
- Levl 2 4-28
- line characteristics
  - BERT 8-8
- Load Appl Softkey 9-2
- loading a monitor program 4-31
- Loading the VT100 Emulator 10-5
- low speed analyzer
  - starting 3-5

## M

- macro view
  - extracting data 4-48
- manual flow control 10-4
- manual set up 4-2
- Marking Triggers 11-11
- Masking Out Characters 11-6
- Mass Store
  - Remote 7-5
- maximum count 11-17
- maximum cursor time 11-16
- maximum highlights 11-12
- maximum program blocks 11-2
- maximum subroutines 11-27
- maximum triggers 11-4
- measure time intervals 5-5
- Measuring Time 5-5, 11-13
- Measuring Time Intervals 5-5
- Menu
  - Printer Setup 6-2

## Message Editor

- BERT 8-14

- canceling changes 8-17

- data codes 8-15

- entering characters 8-16

- entering non-text data 8-16

- exiting 8-17

- starting 8-15

- using message 8-11

- Message Softkey 11-25

- message statement 11-25

- Messages 11-25

- Micro View 4-49

- micro view

- extracting data 4-49

- Mod 11-34

- Mod 8 4-37

- modem

- Command Set 7-3

- configuration 7-6

- Hayes 7-4

- other types 7-4

- PCMCIA 7-7

- modulo

- modulo 128 11-32

- modulo 8 11-32

- monitor

- loading a program 4-31

- program 4-31

- Monitor Buffer 5-8

- Multiple Triggers 11-9

## N

- N(R) 11-30

- N(S) 11-30

- Next Page 5-2

- Non-Return to Zero Inverted (NRZI) 4-18

- Non-Return to Zero(NRZ) 4-18

- Not Softkey 11-6

- Not\* Softkey 11-6

- NRZ 4-18

- NRZI 4-18

- NRZI encoded data 9-5

## O

- ORing Triggers 11-9

- Overlapping Triggers 11-10

## P

- P/F 11-30

- Packet Type 11-33, 11-34

- Packets 11-32

- parameters 3-10, 3-13

- parity

- example 4-11

- printer 6-5

- triggering 11-7

- partial trigger match 11-11

- PCMCIA Modem 7-7

- pinouts

- standard connectors 1-6

- poll/final bit 4-29

- post-process 5-7

- Post-Processing Data 5-7

- power-on 2-2

- Prev Page 5-2

- print buffer contents 6-7

- print file

- ASCII 6-10

- print screen 6-6

- printed characters 6-8

- printer port 6-5

- printer selection 6-5

- Printer Setup menu 6-2

- baud rate 6-5

- brand 6-5
- definitions 6-3
- horizontal scaling 6-5
- parity 6-5
- port 6-5
- stop bits 6-5
- type 6-5
- vertical scaling 6-5
- word size 6-5
- printing 6-2
  - ASCII control characters 6-9
  - buffer 6-6
  - configure 6-3
  - data 6-2, 6-6
  - graphics mode 6-8
  - graphics vs. text mode 6-3
  - hexadecimal characters 6-8
  - lead levels 6-9
  - menus 6-6
  - special characters 6-9
  - text mode 6-8
- Printing Menus 6-6
- program blocks 11-2
- program information menu 3-9
- program path 3-9
- program pauses 11-7, 11-21
- programming 4-24, 4-32
- Protocol selection 4-6
- pseudorandom bit sequences 8-2

## Q

- Q bit 11-32, 11-34

## R

- receive sequence number 4-30
- recommended Modem Settings 7-6
- Remote

- Baud Rate 7-4
- chat mode 7-5
- Com Port 7-4
- Com Window 7-3
- hardware handshaking 7-4
- Mass Store 7-5
- modem command set 7-3
- Modem Configuration 7-6
- slave 7-5
- Remote Operation 7-3
- Resetting Counters 11-17
- result logging
  - BERT 8-12
- return statement 11-27
- Roll Down 5-2
- Roll Up 5-2
- RS-232/V.24
  - breakout box 1-4
  - connector pins 1-7
- RS-449
  - connector pins 1-8
- Run Menu 11-3
- Running the VT100 Emulator 10-9

## S

- saving data 4-46
- saving stored data 4-46
- scrolling
  - VT100 10-10
- selecting tests 3-5
- selecting the physical interface 4-4
- send characters 11-36
- send command 11-29
- send sequence number 4-29
- Send Strings 11-15
- Sequencing Triggers 11-9
- set lead command 11-37
- Set Up

- Advisor 4-2
- Auto Configure 4-2
- Setting Up the VT100 Emulator 10-6
- Setup
  - auto run 3-12
  - changing parameters 3-10
  - configuring Toolkit 3-12
  - DOS programs 3-10
  - making tests 3-12
  - simulate 4-32
  - special tests 3-12
- Setup After Typing a String 11-5
- Setup Menu 4-2, 4-5
  - manually configure 4-5
  - slave 7-3
- Setup=Sim. 10-8
- Setup=Sim. Softkey 10-4
- S-Frame 11-30
- Sim Menu 4-34
- Simulate
  - VT100 10-9
- simulating 2-6, 4-32
  - program 4-33
  - setup 4-32
- simulating and capturing data 2-6, 4-32
- simulating conditions 11-36
- simulation 2-6, 4-32
- Sizing the Disk Buffer 9-5
- Slave
  - chat mode 7-5
  - configuration 7-3
  - functions 7-5
  - ID 7-3
  - Mass Store 7-5
  - Setup menu 7-3
- smart cursor 5-5
- Softkey
  - Auto Configure 4-15

- Binary 11-6
- Break 10-10
- Cap Lock 10-9
- Chang Dsply 5-5
- Clear Screen 10-9
- Counter 11-18
- Data 4-38
- Delete 11-3
- Delete Block 11-3
- Delete Line 11-3
- Display Bottom 10-9
- Display Top 10-9
- Don't Care 4-28
- End Addr 11-30
- End Frame 11-6
- Exam Data 5-3
- Extend 11-30
- Extract Block 4-47
- Hex 5-5, 11-6
- HS Capt 9-3
- I-frame 4-29
- Insert 11-3
- Insert Block 11-3
- Insert Line 11-3
- Levl 2 4-28
- Levl 3 11-32
- Load Appl 9-2
- Message 11-25
- Micro View 4-47
- Mod 8 4-37
- Monitor Buffer 5-8
- Next Page 5-2
- Not 11-6
- Not\* 11-6
- Prev Page 5-2
- Print 6-6
- Print Data 6-6
- Reset Counters 8-21

- Roll Down 5-2
- Roll Up 5-2
- Setup 4-5
- Setup=Sim. 10-4, 10-8
- Sim Menu 4-34
- Simulate 4-34
- Start Flag 11-6
- Start Marking 4-48
- Summary 4-16
- Text 5-5, 11-5
- Timer&Cntr 5-8
- VT100 Execute 10-4
- VT100 Setup 10-4
- VT100 Simulate 10-4
- When Trig 11-4
- softkey programming 4-25, 11-2
- Softkey Triggers 11-8
- Softkeys
  - VT100 menu 10-9
- standard connector pinouts 1-6
- start 11-4
- Start Disk 11-22
- Start Display 11-23
- Start Flag Softkey 11-6
- start flag time stamp 11-15
- Start Marking softkey 4-48
- starting directory 3-10
- start-up directory 3-13
- stop 11-4
- stop bits
  - emulator 10-9
  - printer 6-5
- Stop Disk 11-22
- Stop Display 11-23
- Stop Tests 11-24
- storing data 4-41, 4-42, 4-43, 4-44
  - hard disk 4-42
  - saved data 4-46

- timestamps 4-41
  - while monitoring 4-44
  - while running at normal speed 4-44
  - while simulating 4-44
- storing information 4-41
- storing to hard disk 4-41
- Subprograms 11-27
- Summary Softkey 4-16
- sync characters 4-11
- sync on idles 4-11
- Synchronous Data
  - Auto Configure 4-16

## T

- Terminal Display
  - VT100 10-10
- terminal mode 10-4
- Terminal Setup menu 10-6
- test
  - BERT options 8-10
- Text 5-5
- text mode 6-3
  - printer output 6-8
- Text Softkey 11-5
- time 5-5
  - measuring 5-5
  - resolution 5-10
- Time Stamps 11-13
- Timeouts 11-8
- timer interval 11-13
- Timer&Cntr 5-8
- Timers 11-13
- timing 5-10
- timing information 11-14
- timing on lead changes 11-14
- timing resolution 5-10, 11-16
- Toolkit 3-2
  - adding groups 3-7



- adding tools 3-7
- autorun 3-12
- browsing 3-9
- changing fields 3-3
- changing parameters 3-10
- comments 3-5, 3-10
- copying a group 3-8
- copying a tool 3-8
- creating a comment 3-10
- deleting groups 3-7
- deleting tools 3-7
- displays 3-3
- exit 3-5
- functions 3-5
- group icon 3-6
- group information menu 3-11
- making tests 3-12
- modifying groups 3-8
- modifying tools 3-8
- moving around 3-3
- new tests 3-12
- operation 3-2
- pasting a group 3-8
- pasting a tool 3-8
- program information menu 3-9
- program path 3-9
- scrollbar 3-3
- selecting tests 3-5
- setting up special tests 3-12
- setup menu 3-7
- softkeys 3-3, 3-5, 3-6
- special tests 3-12
- starting 3-5
- start-up directory 3-10
- storing programs 3-9
- tools 3-5
- windows 3-3

tools

- adding 3-7
- copying 3-8
- deleting 3-7
- modifying 3-8
- pasting 3-8
- top level display 2-2
- transition
  - printed 6-9
- Triggers
  - reference 11-4
- triggers 4-32
- Types of Triggers 11-5

## U

- UDBR 4-13
- U-Frame 11-31
- Unconditional Branching 11-19
- Unusual Protocol Settings 4-22
- User Defined Bit Rates 4-13
- user interface 3-2
- user-defined messages 8-14
  - selecting 8-11
- Utilities
  - User Defined Bit Rates 4-13

## V

- V.35
  - connector pins 1-9
- vertical scaling
  - printer output 6-5
- viewing data 5-3
- V-Series
  - Active Connection to Test DCE and Link 2-7
  - Active Connection to Test Terminal Device
    - 2-5
  - connections 2-3
  - Passive Monitor In-Line Connection 2-3

## **Passive Monitor Test Panel Connection 2-4**

### **VT100**

display buffer 10-10

Escape Codes 10-11

execute 10-4

loading 10-5

setup 10-4, 10-6

setup=sim 10-4

simulate 10-4

Working with Control Characters 10-11

VT100 Emulator 10-4

VT100 Setup menu 10-6

VT100 Setup Softkey 10-4

VT100 Simulate Softkey 10-4

## **W**

Wait statements 11-7

when statements 4-24, 4-32

When Trig Softkey 11-4

within text 4-12

word size

printer 6-5

## **X**

Xon/Xoff 10-4

## **Y**

Y-Cable

connections 2-3

## **Z**

zero bit deletion 11-37

zero bit extraction 4-6

zero bit insertion 4-6, 11-37



# Hewlett-Packard Sales Offices

Arranged alphabetically by country

## Headquarters Offices

*If no local office is listed for your area, contact one of these headquarters offices.*

### Asia-Pacific

Hewlett-Packard Asia Pacific Ltd.  
17-21/F Shell Tower  
Times Square  
1 Matheson Street  
Causeway Bay

### Hong Kong

Tel: (852) 599-7777  
Fax: (852) 506-4997

Yokogawa Hewlett-Packard Ltd.  
3-29-21 Takaido-higashi  
Suginami-ku  
Tokyo 168

### Japan

Tel: (81/3) 3331-6111

Fax: (81/3) 3335-1478

### Canada

Hewlett-Packard (Canada) Ltd.  
5150 Spectrum Way  
Mississauga, Ontario L4W 5G1  
Tel: (905) 206-4725  
Fax: (905) 206-4739

### Eastern Central Europe

Hewlett-Packard GmbH  
Liebigasse 1  
P.O. Box 72  
A-1222 Vienna, Austria  
Tel: (43/1) 25000-0  
Fax: (43/1) 25000-444  
Telex: 134-425

### Europe

Hewlett-Packard S.A.  
Route du Nant-d'Avril 150  
CH-1217 Meyrin 2

### Switzerland

Tel: (41) 22780-81-11  
Fax: (41) 22780-85-42  
Telex: 419 019 hps

### Latin America

Hewlett-Packard Co.  
5200 Blue Lagoon Drive, 9th Floor  
Miami, Florida, USA 33126  
Tel: (305) 267-4245  
Fax: (305) 267-4288

### Middle East and Africa

Hewlett-Packard S.A.  
International Sales Branch  
Middle East/Africa  
Rue de Veyrot 39  
P.O. Box 364  
1217 Meyrin 1  
Geneva, Switzerland  
Tel: (41/22) 780-4111  
Fax: (41/22) 780-4770  
Telex: 418907

## Local Area Offices

*Alphabetically by country*

### Albania

IBS (Information & Business Systems)  
Hewlett-Packard Distributor  
1, Rr. Kongresi Permetit  
Tirana  
Tel: 5/4223854  
Fax: 5/4223864

### Algeria

R.T.I.  
Realisation Telematiques  
Internationales  
Lot A, Villa no 57  
Bab - Hassen  
Wilaya de Tipaza  
Algerie  
Tel: (213) 230-6430  
Fax: (213) 230-6431

### Angola

*See South Africa*

### Argentina

Hewlett-Packard Argentina S.A.  
Montaneses 2140  
1428 Buenos Aires  
Tel: (54/1) 781-4059/69  
(54/1) 781-4090

### Australia

Adelaide  
Hewlett-Packard Australia Ltd.  
191 Fullarton Road  
Dulwich, S.A. 5065  
Tel: (61/8) 366-5111  
Fax: (61/8) 332-0020

### Canberra

Hewlett-Packard Australia Ltd.  
Thynne Street, Fern Hill Park  
Bruce, ACT 2617  
Tel: (61/6) 251-6999  
Fax: (61/6) 251-6948

### Melbourne

Hewlett-Packard Australia Ltd.  
31-41 Joseph Street  
Blackburn, VIC 3130  
Tel: (61/3) 272-2895  
Fax: (61/3) 898-7831

### Perth

Measurement Innovation (WA) Pty. Ltd.  
55B Duncraig Road  
(P.O. Box 313)  
Applecross, W.A. 6153  
Tel: (61/9) 316-2757  
Fax: (61/9) 316-1392  
Mobile: 61-18-33-6434

### Sydney

Hewlett-Packard Australia Ltd.  
17-23 Talavera Road  
North Ryde, N.S.W. 2113  
Tel: (61/2) 950-7444  
Fax: (61/2) 888-9072

### Austria

Hewlett-Packard GmbH  
Liebigasse 1  
A-1222 Vienna  
Tel: (43/1) 25000-0  
Fax: (43/1) 25000-444

### Bahrain

BAMTEC  
P.O. Box 10373  
Mezzanine Floor, Al-Hasan Bldg.  
Diplomatic Area  
Manama  
Tel: (973) 53-66-43  
Fax: (973) 53-66-67  
Telex: 8550 WAEI BN

### Belgium

Hewlett-Packard Belgium  
S.A./N.V.  
Boulevard de la Woluwe  
100/102 Woluwedal  
B 1200 Brussels  
Tel: (32/2) 778-34-17  
Fax: (32/2) 778-34-14

### Bolivia

Siser, Ltda  
Rosendo Gutierrez 727  
Casita 4084  
La Paz  
Tel: (591-2) 34-2485  
Fax: (591-2) 35-9268

### Brazil

Edisa Hewlett-Packard S.A.  
Alameda Rio Negro, 750  
06454-000 - Alphaville-Barueri-  
São Paulo  
Tel: (011) 726-8155  
(011) 726-8160  
Fax: (011) 726-8171

Edisa Hewlett-Packard S.A.  
Rua Lauro Mueller, 116  
Grupo 803 - Edifício Torre  
Rio Sul  
22290-160 - Botafogo-  
Rio de Janeiro  
Tel: (021) 541-4404  
Fax: (021) 295-2195

### Brunei

Komputer Wisman Sdn Bhd  
Room 1, 3rd Floor  
Jalan Tutong  
BS Begawan  
Brunei Darussalam  
Tel: (673/2) 23918  
Telex: 0809-2447

### Bulgaria

S&T Bulgaria Ltd.  
Hewlett-Packard Distributor  
114 Vasil Levski Blvd.  
1504 Sofia  
Tel: (2) 468429  
Fax: (2) 468391

### Canada

Canadian Headquarters Office  
Hewlett-Packard (Canada) Ltd.  
5150 Spectrum Way  
Mississauga, Ontario L4W 5G1  
Tel: (905) 206-4725  
Fax: (905) 206-4739

### Alberta

Hewlett-Packard (Canada) Ltd.  
150 6th Avenue S. W.  
Petro Canada Tower, Ste. 3600  
Calgary, Alberta T2P 3Y7  
Tel: (403) 262-0777  
Fax: (403) 237-9309

Hewlett-Packard (Canada) Ltd.  
11120 178th Street  
Edmonton, Alberta T5S 1P2  
Tel: (403) 486-6666  
Fax: (403) 489-8764

### British Columbia

Hewlett-Packard (Canada) Ltd.  
13575 Commerce Pkwy, Ste. 110  
Richmond, British Columbia  
V6V 2L1  
Tel: (604) 270-2277  
Fax: (604) 270-0859

### Manitoba

Hewlett-Packard (Canada) Ltd.  
200 Graham Avenue, Ste. 1000  
Winnipeg, Manitoba R3C 4L5  
Tel: (204) 942-4725  
Fax: (204) 989-3553

### New Brunswick

### Nowfoundland

### Nova Scotia

Hewlett-Packard (Canada) Ltd.  
238 Brownlow Avenue, Ste. 103  
Park Place Centre  
Dartmouth, Nova Scotia  
B3B 1Y2  
Tel: (902) 468-4725  
Fax: (902) 468-4311

## Sales Offices Canada (cont'd)

### Canada (cont'd)

#### Ontario

##### London See Mississauga

Hewlett-Packard (Canada) Ltd.  
5150 Spectrum Way  
Mississauga, Ontario L4W 5G1  
Tel: (905) 206-4725  
Fax: (905) 206-4739

Hewlett-Packard (Canada) Ltd.  
2670 Queensview Drive  
Ottawa, Ontario K2B 8K1  
Tel: (613) 820-6483  
Fax: (613) 820-0377

#### Prince Edward Island See Dartmouth, Nova Scotia

#### Quebec

Hewlett-Packard (Canada) Ltd.  
17500 Trans Canada Highway  
South Service Road  
Kirkland, Quebec H9J 2X8  
Tel: (514) 697-4232  
Fax: (514) 697-6941

#### Saskatchewan

See Winnipeg, Manitoba

#### Chile

ASC. S.A.  
Austria 2041  
Santiago  
Tel: (56-2) 274-7676  
Fax: (56-2) 223-1912

### China, People's Republic of

China Hewlett-Packard Co., Ltd.  
5-6/F West Wing Office  
China World Trade Center  
No. 1 Jian Guo Men Wei Avenue  
Beijing 100004  
Tel: (86/1) 505-3888  
Fax: (86/1) 505-0394  
Telex: 085-22601 CTSHP CN  
Cable: 1920 Beijing

China Hewlett-Packard Co., Ltd.  
7/F, the Electronic Foreign Trade  
Building #88  
East 2nd Section, Yi-Huan-Lu Road  
Chengdu 610051, PRC  
Tel: (86/28) 443-2666  
Fax: (86/28) 443-2618

China Hewlett-Packard Co., Ltd.  
Room 1201-1204, Giti Plaza Main  
Bldg. 339 Huangshi dong Roadoad  
Guangzhou 510060  
Tel: (86/20) 331-1421  
Telex: 44556 GPHGZ CN

China Hewlett-Packard Co., Ltd.  
Room 638, Office Building  
Shanghai Center  
1376 Nan Jing Road West  
Shanghai 200040  
Tel: (86/21) 279-8668  
Fax: (86/21) 279-8943  
Telex: 086-33577 CHPSB CN

China Hewlett-Packard Co., Ltd.  
4/F Huangqiang Component Building  
Zhenhua Road, Shangu District  
Shenzhen City 518031  
Tel: (86/755) 368-608  
Fax: (86/755) 363-154

#### Columbia

Instrumentacio, S.A.  
Calle 115 No. 11A-10  
Bogota  
Tel: (571) 612-1313  
Fax: (571) 612-0805

### Commonwealth of Independent States

Hewlett-Packard Company  
Pokrovski Blvd. 4/17 Kv. 12  
101000 Moscow, Russia  
Tel: (7/505) 213-740  
Fax: (7/095) 230-2611

#### Costa Rica

I.S. de Costa Rica  
Calle 25, Avenida 6 & 8, No. 648  
San Jose  
Tel: (506) 233-3722  
Fax: (506) 255-3528

#### Czech Republic

Hewlett-Packard Ceskoslovensko spo  
Novodvorska 82  
14200 Praha 4  
Tel: 2/4717321  
Fax: 2/47176111

#### Cyprus

Telexa Ltd.  
P.O. Box 1152  
Valentine House  
8 Stassandrou St.  
Nicosia  
Tel: (3572) 44.56.28  
Fax: (3572) 44.55.84  
Telex: 5845 tnx cy

#### Denmark

Hewlett-Packard A/S  
Kongevejen 25  
DK-3460 Birkerød  
Tel: (45) 45 99 10 00  
Fax: (45) 45 82 06 30  
Hewlett-Packard A/S  
Brenstrupgaardsvej 13  
DK-8200 Aarhus N  
Tel: (45) 86 78 30 00  
Fax: (45) 86 78 30 33  
Telex: 37409 hpas dk

#### Dominican Republic

Esacomp, S.A.  
Calle Semnana No. 55  
Ens. Piantu  
Santo Domingo  
Tel: (809) 563-6350  
Fax: (809) 565-0332

#### Ecuador

CYEDE Cia. Ltda.  
Avenida Eloy Alfaro 1749  
Quito  
Tel: (593-2) 44-4224  
Fax: (593-2) 44-4223  
Telex: 39322548 CYEDE ED

#### Egypt

ORASCOM  
Onsi Sawiris & Co.  
P.O. Box 1191  
160, 26th July Street  
Agiza/Cairo  
Tel: (202) 302-69-30  
Fax: (202) 344-02-01  
Telex: 92768 orcom un

#### El Salvador

IPESA de El Salvador  
29 Avenida Norte 1223  
San Salvador  
Tel: (503) 26-6858  
Fax: (503) 52-7772  
Telex: 301 20539 IPESA SAL

#### Finland

Hewlett-Packard Oy  
Pispankalliontie 17  
02200 Espoo (Helsinki)  
Tel: (358/0) 887-21  
Fax: (358/0) 887-22-77  
Hewlett-Packard Oy  
Teknologiantie 6  
90570 Oulu  
Tel: (358/81) 5515144  
Fax: (358/81) 5515145

#### France

Hewlett-Packard France  
Test et Mesure  
Z.A. de Courtaboeuf  
1 Avenue du Canada  
91947 Les Ulis  
Tel: (33/1) 69 82.62.20  
Fax: (33/1) 69 82.65.35

#### Germany

Headquarters  
Hewlett-Packard GmbH  
Herrenberger Strasse 130  
7030 Böblingen  
Tel: (49) 7031/14-0  
Fax: (49) 7031/14-2999  
Hewlett-Packard GmbH  
Hewlett-Packard-Strasse  
61352 Bad Homburg  
Tel: (49) 6172/16-0  
Fax: (49) 6172/16-1309

Hewlett-Packard GmbH  
Lützowplatz 15  
10785 Berlin  
Tel: (49) 30/25452-0  
Fax: (49) 30/25452-162

Hewlett-Packard GmbH  
Schickardstrasse 2  
71034 Böblingen  
Tel: (49) 7031/14-0  
Fax: (49) 7031/14-6429

Hewlett-Packard GmbH  
Friedrich-Ebert-Allee 26  
53113 Bonn  
Tel: (49) 228/23400-1  
Fax: (49) 228/235-315

Hewlett-Packard GmbH  
Überseering 16  
22297 Hamburg  
Tel: (49) 40/63808-0  
Fax: (49) 40/63808-327

Hewlett-Packard GmbH  
Baumschulenallee 20-22  
30625 Hannover  
Tel: (49) 511/9577-0  
Fax: (49) 511/9577-126

#### Karlsruhe See Waldbronn

Hewlett-Packard GmbH  
Nikolaistrasse 13-23  
04109 Leipzig  
Tel: (49) 341/21635-0  
Fax: (49) 341/21635-220

#### München See Taufkirchen

Hewlett-Packard GmbH  
Emmericher Strasse 13  
90411 Nürnberg 10  
Tel: (49) 911/9524-0  
Fax: (49) 911/9524-140

Hewlett-Packard GmbH  
Berliner Strasse 111  
40880 Ratingen  
Tel: (49) 2102/90.50  
Fax: (49) 2102/90.5300

Hewlett-Packard GmbH  
Eschenstrasse 5  
82024 Taufkirchen  
Tel: (49) 89/61412-0  
Fax: (49) 89/61412-300

Hewlett-Packard GmbH  
Hewlett-Packard Str. 8  
76337 Waldbronn (Karlsruhe)  
Tel: (49) 7243/602-0  
Fax: (49) 7243/602-512

#### Great Britain

See United Kingdom

#### Greece

G-Systems  
Hewlett-Packard Distributor  
76, Ymittou Street  
11634 Athens  
Tel: (30/1) 7264045

#### Guatemala

IPESA de Guatemala  
Avenida Reforma 3-48, Zona 9  
Guatemala City  
Tel: (502-2) 31-4786  
Fax: (502-2) 31-6627  
Telex: 3055765 IPESA GU

### Hong Kong

Hewlett-Packard (HK) Ltd.  
17-21/F Shell Tower  
Times Square  
1 Matheson Street  
Causeway Bay  
**Hong Kong**  
Tel: (852) 599-7777  
Fax: (852) 506-8261

### Hungary

Hewlett-Packard Magyarország Kft.  
Erzset kiralyne utja 1/c  
1146 Budapest  
Tel: (36) 1 2524505  
Fax: (36) 1 2527441

### India

Hewlett-Packard India Pvt. Ltd.  
29 Cunningham Road  
Bangalore 560 052  
Tel: (91/80) 226-0026  
Fax: (91/80) 221-0096  
Telex: 845-2773/2821 HP IN

Hewlett-Packard India Pvt. Ltd.  
Unit-3, B-Wing  
Ground Floor, Neelam Center  
Hind Cycle Road  
Worli, Bombay 400 018  
Tel: (91/22) 493-7817  
Fax: (91/22) 493-7823  
Telex: 11-76812 HPIL IN

Hewlett-Packard India Pvt. Ltd.  
DBS Executive Centre  
8 Acharya J.D. Bose Road  
Calcutta 700017  
Tel: (91/332) 470-666  
Fax: (91/332) 247-4614  
Telex: 21-5417/4163

Hewlett-Packard India Pvt. Ltd.  
5-9-13 Taramandal Complex  
9th Floor, Sailabad  
Hyderabad 500 004  
Tel: (91/40) 232-413  
Fax: (91/40) 231-756  
Telex: 425-2422 HPIL IN

Hewlett-Packard India Pvt. Ltd.  
Paharpur Business Centre  
21 Nehru Place  
New Delhi 110 019  
Tel: (91/11) 647-2311  
Fax: (91/11) 646-1117  
Telex: 31-71127 PBC IN

### Indonesia

P.T. BERCA Hardayaperkasa  
Jl. Taman Tanah Abang III No. 31  
Jakarta 10160 Pusat  
Tel: (62/21) 385-5381  
Fax: (62/21) 380-9166

### Ireland

Hewlett-Packard Ireland Ltd.  
Hewlett-Packard House  
Stradbroke Road  
Blackrock, Co. Dublin  
Tel: (353/1) 284-4633  
Fax: (353/1) 284-5134  
Telex: 30430

### Iran

Evertech  
11 bis, rue Toepffer  
1206 Geneva  
Tel: 4122/346 92 92  
Fax: 4122/346 86 91  
Telex: 421 787

### Israel

Computation and Measurement  
Systems (CMS) Ltd.  
11, Hashlosa Street  
Tel-Aviv 67060  
Tel: (9723) 538-03-80  
Fax: (9723) 537-50-55  
Telex: 371234 HPCMS

### Italy

Hewlett-Packard Italiana S.p.A.  
Via G. di Vittorio 9  
20063 Cernusco s/N (Mi)  
Tel: (39/2) 92-121  
Fax: (39/2) 92-104-069

Hewlett-Packard Italiana S.p.A.  
Via Nuova Rivotana, 95  
20090 Limbo (Mi)  
Tel: (39/2) 92-12-1  
Fax: (39/2) 70-300-456

Hewlett-Packard Italiana S.p.A.  
Via Emanuele Gianturco 92 G  
80146 Napoli (Na)  
Tel: (39/81) 73-40-100  
Fax: (39/81) 73-40-216

Hewlett-Packard Italiana S.p.A.  
Via Pragia 15  
10044 Pianezza (To)

Hewlett-Packard Italiana S.p.A.  
Viale del Tintoretto, 200  
00142 Roma Eur  
Tel: (39/6) 54-831  
Fax: (39/6) 54-01-661

Tomno See Pianezza (To)

### Japan

**Akita**  
Yokogawa-Hewlett-Packard Ltd.  
Nihonseimei Akita Chuodori Bldg.  
4-2-7 Nakadori  
**Akita 010**  
Tel: (81/188) 36-5021  
Fax: (81/188) 36-5099

### Atsugi

Yokogawa-Hewlett-Packard Ltd.  
9-32 Tamuracho  
**Kanagawa 243**  
Tel: (81/462) 25-0031  
Fax: (81/462) 25-0064

### Chiba

Yokogawa-Hewlett-Packard Ltd.  
WBG Maibu East Bldg. 19F  
2-6 Nakase  
Mihama-ku, Chiba-shi  
**Chiba 261-71**  
Tel: (81/43) 297-0581  
Fax: (81/43) 297-0558

### Fukuoka

Yokogawa-Hewlett-Packard Ltd.  
Daisan Hakata-Kaisei Bldg.  
1-3-6 Hakataekimami Hakata-ku  
**Fukuoka 812**  
Tel: (81/92) 472-8731  
Fax: (81/92) 473-4745

### Hachioji

Yokogawa-Hewlett-Packard Ltd.  
9-1 Takakura-cho  
Hachioji-shi  
**Tokyo 192**  
Tel: (81/426) 42-1261  
Fax: (81/426) 45-2631

### Hamamatsu

Yokogawa-Hewlett-Packard Ltd.  
219-21 Motoshiro-machi  
Hamamatsu-shi  
**Shizuoka 430**  
Tel: (81/53) 456-1771  
Fax: (81/53) 455-2371

### Hiroshima

Yokogawa-Hewlett-Packard Ltd.  
Nissei-Herwako Bldg.  
3-25 Nakajima-cho Naka-ku  
**Hiroshima 730**  
Tel: (81/82) 241-0611  
Fax: (81/82) 241-0619

### Kawasaki

Yokogawa-Hewlett-Packard Ltd.  
3-2-2 Sakado  
Takatsu-ku Kawasaki  
**Kanagawa 213**  
Tel: (81/44) 812-9711  
Fax: (81/44) 812-5235

### Kobe

Yokogawa-Hewlett-Packard Ltd.  
1-3-2 Muroya Nishi-ku  
**Kobe 651-22**  
Tel: (81/78) 993-2600  
Fax: (81/78) 993-2698

### Kumagaya

Yokogawa-Hewlett-Packard Ltd.  
Nissei-Kumagaya Bldg.  
2-42 Miya-machi Kumagaya-shi  
**Saitama 360**  
Tel: (81/485) 24-6563  
Fax: (81/485) 24-9050

### Kyoto

Yokogawa-Hewlett-Packard Ltd.  
Maeda NS Bldg.  
518 Akino-machi Niyo-Kudaru  
Karasuma Nakakyoku-ku  
**Kyoto 604**  
Tel: (81/75) 211-4301  
Fax: (81/75) 211-2833

### Mito

Yokogawa-Hewlett-Packard Ltd.  
Mito Mitsui Bldg.  
1-4-73 Sannomaru  
**Mito 310**  
Tel: (81/292) 25-7470  
Fax: (81/292) 31-6589

### Matsumoto

Yokogawa-Hewlett-Packard Ltd.  
38 Bldg.  
1-4-6 Nagisa  
Matsumoto  
**Nagano 390**  
Tel: (81/263) 28-8010  
Fax: (81/263) 28-8020

### Nagoya

Yokogawa-Hewlett-Packard Ltd.  
Nagoya Kokusai Center Bldg.  
1-47-1 Nakono, Nakamura-ku  
**Nagoya 450**  
Tel: (81/52) 571-5171  
Fax: (81/52) 565-0896

### Omiya

Yokogawa-Hewlett-Packard Ltd.  
Mitsui-seimei Omiya Miyamachi Bldg.  
2-96-1 Miyamachi Omiya-shi  
**Saitama 330**  
Tel: (81/48) 645-8031  
Fax: (81/48) 645-8001

### Osaka

Yokogawa-Hewlett-Packard Ltd.  
Chuo Bldg.  
5-4-20 Nishinakajima  
Yodogawa-ku  
**Osaka 532**  
Tel: (81/6) 304-6026  
Fax: (81/6) 304-0216

### Sapporo

Yokogawa-Hewlett-Packard Ltd.  
Sumitomo-seimei Sapporo  
Chuo Bldg.  
1-1-14 Nanjo-nigashi Chuo-ku  
**Hokkaido 060**  
Tel: (81/11) 251-1561  
Fax: (81/11) 222-3239

### Sendai

Yokogawa-Hewlett-Packard Ltd.  
Yamaguchi Bldg.  
1-1-31 Ichibancho Aoba-ku  
**Sendai 980**  
Tel: (81/22) 225-1011  
Fax: (81/22) 225-1616

## Sales Offices

### Japan (cont'd)

#### Japan (cont'd)

##### Takaido

Yokogawa-Hewlett-Packard Ltd.  
3-8-20 Takaido-higashi  
Suginami-ku  
Tokyo 168  
Tel: (81/3) 3335-8111  
Fax: (81/3) 3335-9123

##### Toyota

Yokogawa-Hewlett-Packard Ltd.  
Nakane-Nissei Bldg.  
4-25-18 Nishi-machi  
Toyota  
Aichi 471  
Tel: (81/565) 35-7411  
Fax: (81/565) 35-7446

##### Tsukuba

Yokogawa-Hewlett-Packard Ltd.  
Tsukuba-Mitsui Bldg.  
1-6-1 Takezono  
Tsukuba 305  
Tel: (81/298) 51-5141  
Fax: (81/298) 51-5381

##### Utsunomiya

Yokogawa-Hewlett-Packard Ltd.  
Chiyodaseimei-Utsunomiya Bldg.  
2-3-1 Odori  
Utsunomiya 320  
Tel: (81/286) 33-1153  
Fax: (81/286) 33-1175

##### Jordan

Scientific & Medical Supplies Co.  
P.O. Box 1387  
Amman  
Tel: (962/6) 62-49-07  
Fax: (962/6) 62-82-58  
Telex: 21456 sabco jo

##### Korea

Samsung Hewlett-Packard Co. Ltd.  
SHP House  
25-12, Yoido-dong  
Youngdeung-po-ku  
Seoul 150-010  
Tel: (82/2) 769-0114  
Fax: (82/2) 784-7084

Samsung Hewlett-Packard Co. Ltd.  
18/F Young Nam Tower B/D  
111, Shin Cheon-dong, Dong-Gu

##### Taejeon

Tel: (82/53) 754-2666  
Fax: (82/53) 752-4696

Samsung Hewlett-Packard Co. Ltd.  
3rd F, Hong In Tower Officetel  
536-9, Bong Myung-dong  
Yusung-gu, Taejeon  
Tel: (82/42) 828-6701  
Fax: (82/42) 828-6709

##### Kuwait

Al-Khaldiya Electronics & Electricals  
Equipment Co.  
P.O. Box 830  
Safat 13009  
Kuwait  
Tel: 965/24 59 815  
Fax: 965/24 59 852

##### Lebanon

Computer Information Systems (C.I.S.)  
Lebanon Street, Chammas Bldg.  
P.O. Box 11-6274  
Dora-Beirut  
Tel: (961/1) 405-413  
Fax: (961/1) 601-906  
Tel/Fax: (3579) 514-256  
Cyprus-based line  
Telex: 42309 chasis le

##### Malawi

See South Africa

##### Malaysia

Hewlett-Packard Sales (M) SDN  
BHD Ground Floor, Wisma  
CycleCarri  
288, Jalan Raja Laut  
50350 Kuala Lumpur  
Tel: (60/3) 298-6555  
Fax: (60/3) 291-5495  
Telex: MA 31011

##### Penang

Hewlett-Packard Sales (M) SDN BHD  
6/F Wisma Penang Garden  
42 Jalan Sultan Ahmad Shah  
10050 Penang  
Tel: (60/4) 376-532  
Fax: (60/4) 371-027  
Telex: MA 41111

##### Mauritius

See South Africa

##### Mexico

Hewlett-Packard de Mexico, S.A. de  
C.V.  
Prolongación Reforma 700  
Col. Lomas de Sante Fé  
01210 Mexico, D.F.  
Tel: (52-5) 326-4392  
Fax: (52-5) 326-4301

##### Morocco

SICOTEL  
Complexe des Habous  
Tour C, avenue des Far  
Casablanca 01  
Tel: (212) 231-22-70  
Fax: (212) 231-65-45  
Telex: 27604

##### Mozambique

See South Africa

##### Nambia

See South Africa

##### The Netherlands

Hewlett-Packard Nederland B.V.  
Postbox 667  
1180 AR Amstelveen  
Netherlands  
Tel: (31/20) 547-6669  
Fax: (31/20) 647-8706

##### New Zealand

Hewlett-Packard (N.Z.) Ltd.  
185-190 Willis Street  
Wellington  
Tel: (64/4) 802-6800  
Fax: (64/4) 384-3380

##### Nigeria

Management Information  
Systems Co. Ltd.  
3 Gerrard Road  
P.O. Box 53386  
Ikoyi, Lagos  
Tel: (2341) 269.34.23  
Fax: (2341) 269.34.19  
Telex: 23582 DATEC NG

##### Norway

Hewlett-Packard Norge AS  
Drammensveien 169  
P.O. Box 60 Skøyen  
N-0212 Oslo  
Tel: (47) 22-73-56-00  
Fax: (47) 22-73-56-19

Hewlett-Packard Norge AS  
Boehmergt. 44  
N-5037 Solheimsviken  
Tel: (47) 55-29-00-90  
Fax: (47) 55-29-10-72

##### Oman

IMTAC LLC  
P.O. Box 51196  
Mina al Fahal  
Muscat  
Tel: (968) 707-727, (968) 707-723  
Fax: (968) 796-639, (968) 797-709

##### Pakistan

Mushko Electronics (PVT) Ltd.  
68-W Sama Plaza  
Blue Area, G-7  
Islamabad 44000  
Tel: (92/51) 828-459  
Fax: (92/51) 816-190  
Telex: 54001 MUSKI PK

Mushko Electronics (PVT) Ltd.  
Oosman Chambers  
Abdullah Haroon Road  
Karachi 74400  
Tel: (92/21) 524-131  
Fax: (92/21) 568-2298  
Telex: 29094 MUSKO PK

##### Panama

Electronico Balboa, S.A.  
Edif. El Dorado  
Ave El Paiscal #30  
Apartado 4929  
Panama 5  
Tel: (507) 36-0722  
Fax: (507) 36-1820  
Telex: 368-3483 ELECTRON PG

##### Paraguay

ECSA Equipos Contables S.A.  
Calle Esidos Unidos No. 961  
Asuncion  
Tel: (595-21) 49-0076  
Fax: (595-21) 49-7849

##### Peru

Cia Electro Mdica, S.A.  
Los Flamencos 145, Of. 301-302  
San Isidro, Lima 27  
Tel: (51-14) 241-4325  
Fax: (51-14) 242-3703

##### Philippines

The Online Advanced Systems Corp.  
2/F, Electra House  
115-117 Esteban Street  
Legaspi Village, Makati  
Metro Manila  
Tel: (63/2) 815-3810  
Fax: (63/2) 816-0590  
Telex: 663-274 ONLINE PH

##### Poland

Hewlett-Packard Polska  
Ul. Nowelska 6  
01-447 Warszawa  
Tel: 22/375065  
Fax: 22/374783  
Telex: 813919

##### Portugal

Hewlett-Packard Portugal S.A.  
Rua Gregório Lopes, Lote 1732A  
Torre de Sto. António  
1400 Lisboa  
Tel: (351/1) 301 7330  
Fax: (351/1) 301 6332/3

##### Puerto Rico

Hewlett-Packard Puerto Rico (3175)  
Metro Office Texaco Plaza Suite 100  
Caparra Heights, PR 00920  
Tel: (809) 793-7800  
Fax: (809) 749-5325

##### Qatar

Qatar Datamations Systems  
Al Ahed Building, 5th floor  
Al Muthol Street  
Doha  
Tel: 974/43.99.00  
Fax: 974/43.21.54  
Telex: 4833

##### Romania

S&T Romania SRL  
Hewlett-Packard Distributor  
Sitraco Centre  
Bld. Dimitrie Cantemir 1  
Etaj II - 210, Sector 4  
Bucuresti  
Tel: (1) 3237250  
Fax: (1) 3237200

### Saudi Arabia

Modern Electronics Establishment  
P.O. Box 2769  
King Abdul Aziz St.  
Al-Khobar 31952  
Tel: (9663) 894 65 48 / 895 17 64  
Fax: (9663) 894 46 58  
Telex: 871106 HPMEK SJ  
Cable: ELECTA, AL-KHOBAR

Modern Electronics Establishment  
P.O. Box 1228  
Zaben Building, Tahiah St.  
Jeddah 21431  
Tel: (966/2) 661-1447  
Fax: (966/2) 661-0857  
Telex: 602712 FARNAS SJ  
Cable: ELECTA, JEDDAH

Modern Electronics Establishment  
P.O. Box 22015  
Prince Musad Ibn Abdulaziz St.  
Riyadh 11495  
Tel: (966/1) 476-3030  
Fax: (966/1) 476-2570 / 476-7649  
Telex: 402049 MEERYD SJ  
Cable: ROUFKO

### Singapore

Hewlett-Packard Singapore (Sales)  
Pte. Ltd. 150 Beach Road  
#29-00 Gateway West  
Singapore 0718  
Tel: (65) 291-9088  
Fax: (65) 296-7089  
Telex: 087-34209 HPSGSO RS

### Slovak Republic

High Performance Systems  
Hewlett-Packard Distributor  
Polianky 5  
844 14 Bratislava  
Tel: 7760217  
Fax: 7763408

### Slovenia, Croatia, Macedonia

Hermes-Plus  
Hewlett-Packard Distributor  
Celovaska 73  
61000 Ljubljana  
Slovenia  
Tel: 61/193322  
Fax: 61/55597

### South Africa

HiPerformance Systems (Pty.) Ltd.  
P.O. Box 120, Howard Place  
7450 Cape Town  
Tel: (27/21) 685-7922  
Fax: (27/21) 685-3785  
HiPerformance Systems (Pty.) Ltd.  
Private Bag, Wendywood  
2144 Sandton  
Tel: (27/11) 806-1000  
Fax: (27/11) 806-1213

### Spain

Hewlett-Packard Española, S.A.  
Avda. Diagonal, 605  
08028 Barcelona  
Tel: 93-401 91 00  
Fax: 93-430 84 68

Avda de Zugazarte  
Hewlett-Packard Española, S.A.  
Avda de Zugazarte, 8  
Edif El Abra, 4  
48930 Las Arenas, Guecho  
Tel: 94-481 80 00  
Fax: 94-481 80 40

Hewlett-Packard Española, S.A.  
Ctra N-VI km 16,500  
28230 Las Rozas, Madrid  
Tel: 1-631 16 00  
Fax: 1-631 18 30

Hewlett-Packard Española, S.A.  
Luis de Morales, 32  
Edificio Forum  
41018 Sevilla  
Tel: 95-453 29 10  
Fax: 95-453 30 92

Hewlett-Packard Española, S.A.  
plaza de America 2-51  
46004 Valencia  
Tel: 96-395 74 75  
Fax: 96-395 42 11

Vizcaya See Guecho

### Sri Lanka

Precision Technical Services (PVT) Ltd.  
65/14, Park Street  
Colombo 2  
Tel: (941) 687791  
Fax: (941) 687731

### Suriname

Surtel, Co., Inc.  
Grote Hofstraat 3-5  
P.O. Box 155  
Paramaribo  
Tel: (597) 47-7880  
Fax: (597) 42-0053

### Sweden

Hewlett-Packard Sverige AB  
Box 19  
Skalhögsgatan 9  
164 93 Kista  
Tel: (46/8) 444 20 00  
Fax: (46/8) 444 25 25  
Hewlett-Packard Sverige AB  
Vårdsgatan 6  
Box 5328  
402 27 Göteborg  
Tel: (46/31) 35-18-00  
Fax: (46/31) 35-18-99  
Hjälmarégatan 3  
Box 371  
201 23 Malmö  
Tel: (46/40) 660 72 00  
Fax: (46/40) 660 72 99

Hewlett-Packard Sverige AB  
Jägersrovägen 160  
Box 28066  
200 28 Malmö  
Tel: (46/40) 22-79-00  
Fax: (46/40) 22-79-99

Service Office  
Hewlett-Packard Sverige AB  
Arabygatan  
Box 3161  
350 43 Växjö  
Tel: (46/470) 396-06  
Fax: (46/470) 154-05

### Switzerland

Genève See Meyrin  
Hewlett-Packard (Suisse) SA  
39, rue de Veyrol  
CH-1217 Meyrin 1  
Tel: (41) 22-780 41 41  
Fax: (41) 22-780 42 20  
Hewlett-Packard (Schweiz) AG  
Menedweg 11  
CH-3172 Niederwangen (Bern)  
Tel: (41) 31-980 31 11  
Fax: (41) 31-980 33 90  
Hewlett-Packard (Schweiz) AG  
In der Luberzen 29  
CH-8902 Urdorf/Zürich  
Tel: (41) 1-735 71 11  
Fax: (41) 1-735 77 00

### Taiwan, ROC

Hewlett-Packard Taiwan Ltd.  
8/F No. 337, Fu Hsing North Road  
Taipei, 10483  
Tel: (886/2) 712-0404  
Fax: (886/2) 718-2928

### Chungli See Taoyuan Hsieh

Hewlett-Packard Taiwan Ltd.  
12th Floor, 10 Syh-Wei 4th Road  
Kaohsiung  
Tel: (886/7) 330-1199  
Fax: (886/7) 330-8568  
Hewlett-Packard Taiwan Ltd.  
10F, 540, Sec. 1  
Wen-Hsin Road  
Taichung  
Tel: (886/4) 327-0153  
Fax: (886/4) 326-5274

Hewlett-Packard Taiwan Ltd.  
No. 20 Kao-Shuang Road  
Ping-Chen, 32404  
Taoyuan Hsieh  
Tel: (886/3) 492-9666  
Fax: (886/3) 492-9669

### Thailand

Hewlett-Packard (Thailand) Ltd.  
11/F Pacific Place  
140 Sukhumvit Road  
Bangkok 10110  
Tel: (66/2) 254-6720  
Fax: (66/2) 254-6731

### Trinidad and Tobago

Borde Communications  
1 Valsayn Road  
Curepe, P.O. Box 897  
Port-of-Spain, Trinidad  
Tel: (809) 663-2087  
Fax: (809) 645-3352

### Tunisia

Precision Electronique  
5, rue de Chypre - Mutuelle Ville  
1002 Tunis Belvedere  
Tel: (216/1) 785-037  
(216/1) 890-672  
Fax: (216/1) 780-241  
Telex: (0409) 18238 TELECN

### Turkey

Hewlett-Packard  
Bilgisayar ve Olcum Sistemleri A.S.  
Paris Cadesi No3 D.9  
06670 Kavaklıdere Ankara  
Turkey  
Tel: 90 (312) 425-83-13  
Fax: 90 (312) 425-47-45  
Telex: 46180

Hewlett-Packard  
Bilgisayar ve Olcum Sistemleri A.S.  
19 Mayıs Caddesi Nova/Baran  
Plaza K.12  
Sisli 80220

### Istanbul

Tel: (90/212) 224 59 25  
(12 lines)  
Fax: (90/212) 224 59 39

### United Arab Emirates

Emtac Ltd.  
P.O. Box 2711  
Abu Dhabi  
Tel: (971/2) 77-04-19  
Fax: (971/2) 72-30-58  
Telex: 46306

Emtac Ltd.  
Block RBS Arencio Bldg.  
Zabel Road  
P.O. Box 8391  
Dubai  
Tel: (971/4) 37-75-91  
Fax: (971/4) 37-08-99  
Telex: 48710

### United Kingdom

Hewlett-Packard Limited  
Cain Road  
Bracknell  
Berkshire RG12 1HN  
Tel: (44/344) 366666  
Fax: (44/344) 362852  
Telex: 849 555



## Sales Offices

### United States

#### United States

##### Test & Measurement Customer Business Center

*To request formal quotations,  
place orders, and ask for other  
order information.*

P.O. Box 4026  
Englewood, CO 80155-4026  
Tel: (800) 829-4444

##### Test & Measurement Customer Information Center

*For presale assistance in  
product selection and other  
product or general  
information.*

Tel: (800) 452-4844

#### Alabama

Hewlett-Packard Co. (3114)  
620 Discovery Drive  
Huntsville, AL 35806  
Tel: (205) 971-2000  
Fax: (205) 971-8899

#### Arizona

Hewlett-Packard Co. (2401)  
8080 Pointe Parkway West  
Phoenix, AZ 85044  
Tel: (602) 273-8000  
Fax: (602) 273-8022  
(602) 438-2355

Hewlett-Packard Co. (2406)  
3400 East Britannia Drive  
Bldg. C, Suite 124  
Tucson, AZ 85706  
Tel: (602) 573-7400  
Fax: (602) 573-7429

#### California

Hewlett-Packard Co. (2403)  
1421 S. Manhattan Avenue  
Fullerton, CA 92631  
Tel: (714) 999-6700  
Fax: (714) 758-7559

Hewlett-Packard Co. (2438)  
130 Cremona, Suite A  
Goleta, CA 93117  
Tel: (805) 685-6100  
Fax: (805) 685-6163

#### Irvine See Fullerton

Hewlett-Packard Co. (2417)  
5245 Pacific Concourse Drive  
Suite 100  
Los Angeles, CA 90045  
Tel: (310) 643-5112  
Fax: (310) 535-2601

Hewlett-Packard Co. (2407)  
351 E. Evelyn Avenue  
Bldg. 333  
Mountain View, CA 94039  
Tel: (415) 694-2000  
Fax: (415) 694-3594

Hewlett-Packard Co. (2415)  
3831 N. Freeway Blvd.  
Sacramento, CA 95834  
Tel: (916) 567-8500  
Fax: (916) 567-8777  
(916) 567-8778

Hewlett-Packard Co. (2404)  
9606 Aero Drive  
San Diego, CA 92123  
Tel: (619) 279-3200  
Fax: (619) 268-8487  
(619) 279-0560

#### Santa Barbara See Goleta

Hewlett-Packard Co. (2428)  
5805 Sepulveda Blvd, Suite 690  
Van Nuys, CA 91411  
Tel: (818) 786-5800  
Fax: (818) 779-2350

#### Ventura See Van Nuys

#### Colorado

Hewlett-Packard Co. (2441)  
3005 Center Green Drive, Suite 205  
Boulder, CO 80301  
Tel: (303) 938-3065  
Fax: (303) 938-3025

Hewlett-Packard Co. (2411)  
24 Inverness Place East  
Englewood, CO 80112  
Tel: (303) 649-5000  
Fax: (303) 649-5787

#### Connecticut

Hewlett-Packard Co. (4457)  
4 Stamford Forum, 9th FL  
Stamford, CT 06901  
Tel: (203) 324-1003  
Fax: (203) 325-5680

Hewlett-Packard Co. (4458)  
15 Glastonbury Blvd.  
Glastonbury, CT 06033  
Tel: (203) 633-8100  
Fax: (203) 659-6087

#### District of Columbia

#### See Rockville, Maryland

#### Florida

Hewlett-Packard Co. (3179)  
5900 N. Andrews, Suite 100  
Fort Lauderdale, FL 33309  
Tel: (305) 938-9800  
Fax: (305) 938-2293

Hewlett-Packard Co. (3177)  
6177 Lake Ellenor Drive  
Orlando, FL 32809  
Tel: (407) 859-2900  
Fax: (407) 826-9309

Hewlett-Packard Co. (3166)  
5550 Idlewild, Suite 150  
Tampa, FL 33634  
Tel: (813) 884-3282  
Fax: (813) 889-4445

#### Georgia

Hewlett-Packard Co. (3108)  
1995 N. Park Place  
Atlanta, GA 30339  
Tel: (404) 955-1500  
Fax: (404) 980-7010

#### Hawaii

Hewlett-Packard Co. (2409)  
3660 Wai'ale'ale Ave. Suite 102  
Honolulu, HI 96816  
Tel: (808) 732-1566

#### Illinois

Hewlett-Packard Co. (2619)  
2205 E. Empire Street  
Bloomington, IL 61704  
Tel: (309) 662-9411  
Fax: (309) 662-0351

Hewlett-Packard Co. (2603)  
1200 East Diehl Road  
Naperville, IL 60566  
Tel: (708) 505-8800  
Fax: (708) 505-7876

Hewlett-Packard Co. (2601)  
5201 Tollview Drive  
Rolling Meadows, IL 60008  
Tel: (708) 255-9800  
Fax: (708) 255-4995

#### Indiana

Hewlett-Packard Co. (2605)  
201 W. 103rd Street, Suite 100  
Indianapolis, IN 46290  
Tel: (317) 844-4100  
Fax: (317) 843-1291

Hewlett-Packard Co. (2635)  
111 E. Ludwig Road, Suite 108  
Ft. Wayne, IN 46825  
Tel: (219) 482-4283  
Fax: (219) 480-3730

#### Iowa

Hewlett-Packard Co. (2612)  
4050 River Center Court  
Cedar Rapids, IA 52402  
Tel: (319) 393-0606  
Fax: (319) 378-1024

#### Kansas

Hewlett-Packard Co. (2622)  
P.O. Box 780408  
3450 N. Rock Road, Suite 300  
Wichita, KS 67278  
Tel: (316) 636-4040  
Fax: (316) 636-4504

#### Kentucky

Hewlett-Packard Co. (2623)  
305 N. Hurstbourne Parkway  
Suite 100  
Louisville, KY 40222-5141  
Tel: (502) 426-0100  
Fax: (502) 426-0322

#### Maryland

Hewlett-Packard Co. (4432)  
3701 Koppers Street  
Baltimore, MD 21227  
Tel: (410) 644-5800  
Fax: (410) 362-7650  
Hewlett-Packard Co. (4430) (4400)  
2101 Gaither Road  
Rockville, MD 20850  
Tel: (301) 258-2000  
Fax: (301) 258-5986

#### Massachusetts

Hewlett-Packard Co. (4450)  
29 Burlington Mall Road  
Burlington, MA 01803-4182  
Tel: (617) 270-7000  
Fax: (617) 221-5240

#### Michigan

Hewlett-Packard Co. (2617)  
3033 Orchard Vista S.E., Suite 100  
Grand Rapids, MI 49546  
Tel: (616) 957-1970  
Fax: (616) 956-9022

Hewlett-Packard Co. (2607)  
39550 Orchard Hill Place Drive  
Novi, MI 48376  
Tel: (313) 349-9200  
Fax: (313) 349-9240

#### Minnesota

Hewlett-Packard Co. (2606)  
2025 W. Larpentour Avenue  
St. Paul, MN 55113  
Tel: (612) 644-1100  
Fax: (612) 641-9787

#### Missouri

Hewlett-Packard Co. (2611)  
6601 Winchester Avenue  
P.O. Box 18230  
Kansas City, MO 64133-8230  
Tel: (816) 737-0071  
Fax: (816) 737-4690

#### Missouri (cont'd)

Hewlett-Packard Co. (2610)  
530 Maryville Centre Drive  
St. Louis, MO 63141  
Tel: (314) 542-1500  
Fax: (314) 542-1585

#### Nebraska

Hewlett-Packard Co. (2616)  
2533 N. 117th Avenue  
Omaha, NE 68164  
Tel: (402) 493-0300  
Fax: (402) 493-4334

#### New Jersey

Hewlett-Packard Co. (4415)  
West 120 Century Road  
Paramus, NJ 07653  
Tel: (201) 599-5000  
Fax: (201) 599-5382

Hewlett-Packard Co. (4417)  
20 New England Ave. West  
Piscataway, NJ 08854  
Tel: (908) 562-6100  
Fax: (908) 562-6246

#### New Mexico

Hewlett-Packard Co. (2402)  
5130 Masthead NE  
Albuquerque, NM 87109  
Tel: (505) 823-6100  
Fax: (505) 823-1243

Hewlett-Packard Co. (2420)  
1362-C Trinity Drive  
Los Alamos, NM 87544  
Tel: (505) 662-6700  
Fax: (505) 662-4312

**New York**

Hewlett-Packard Co. (4444)  
114 Great Oaks Office Park  
Albany, NY 12203  
Tel: (518) 452-9947  
Fax: (518) 452-8989

**Buffalo** *See Cheektowaga*

Hewlett-Packard Co. (4445)  
Airport Commerce Park  
305 Cayuga Road, Suite 160  
Cheektowaga, NY 14225  
Tel: (716) 264-4100  
Fax: (716) 264-4150

Hewlett-Packard Co. (4442)  
290 Woodcliff Drive  
Fairport, NY 14450  
Tel: (716) 264-4000  
Fax: (716) 264-4150

Hewlett-Packard Co. (4440)  
5010 Campuswood Drive  
East Syracuse, NY 13057  
Tel: (315) 463-2727  
Fax: (315) 463-3150

**Huntington** *See Melville*

Hewlett-Packard Co. (4411)  
7 Old Sod Farm Road  
Melville, NY 11747  
Tel: (516) 753-0555  
Fax: (516) 753-3469

**Rochester** *See Fairport*

Hewlett-Packard Co. (4409)  
Executive Square Office Bldg.  
66 Middlebush Road  
Wappingers Falls, NY 12590  
Tel: (914) 298-9125  
Fax: (914) 298-3338

**North Carolina**

Hewlett-Packard Co. (3142)  
2000 Regency Parkway, Suite 600  
Cary, NC 27511  
Tel: (919) 467-6600  
Fax: (919) 460-2296  
(919) 460-2297

Hewlett-Packard Co. (3145)  
9401 Arrowpoint Blvd.  
Charlotte, NC 28210  
Tel: (704) 527-8780  
Fax: (704) 559-7444

Hewlett-Packard Co. (3111)  
7029 Albert Pick Road, Suite 100  
Greensboro, NC 27409  
Tel: (919) 665-1800  
Fax: (919) 668-1797

Mailing Address  
P.O. Box 26500  
Greensboro, NC 27426

**Raleigh** *See Cary*

**Ohio**

Hewlett-Packard Co. (2624)  
4501 Erskine Road  
Cincinnati, OH 45252  
Tel: (513) 891-8870  
Fax: (513) 891-0033

**Cleveland** *See Strongsville*

Hewlett-Packard Co. (2614)  
540 Office Center Place  
Columbus, OH 43230-5321  
Tel: (614) 478-6200  
Fax: (614) 478-6299

Hewlett-Packard Co. (2604)  
7887 Washington Village Drive  
Dayton, OH 45459  
Tel: (513) 433-2223  
Fax: (513) 433-8633

Hewlett-Packard Co. (2608)  
15885 Sprague Road  
Strongsville, OH 44136  
Tel: (216) 243-7300  
Fax: (216) 234-7230

**Oklahoma**

Hewlett-Packard Co. (3182)  
3525 NW 56th Street, Suite C  
Oklahoma City, OK 73112  
Tel: (405) 946-9499  
Fax: (405) 948-4760

Hewlett-Packard Co. (3183)  
6655 Soth Lewis, Suite 105  
Tulsa, OK 74136  
Tel: (918) 481-2285  
Fax: (918) 481-2250

**Oregon**

Hewlett-Packard Co. (2413)  
15115 S.W. Sequoia Parkway  
Suite 100  
Portland, OR 97224  
Tel: (503) 598-8000  
Fax: (503) 598-8155

**Pennsylvania**

Hewlett-Packard Co. (2609)  
111 Zeta Drive  
Pittsburgh, PA 15238  
Tel: (412) 782-0400  
Fax: (412) 963-1300

Hewlett-Packard Co. (4420)  
2750 Monroe Blvd.  
Valley Forge, PA 19482-0713  
Tel: (215) 666-9000  
Fax: (215) 666-2034

**Tennessee**

Hewlett-Packard Co. (3117)  
404 BNA Drive  
Bldg. 200, Suite 510  
Nashville, TN 37217  
Tel: (615) 367-4700  
Fax: (615) 399-4616

**Texas**

Hewlett-Packard Co. (3197)  
9050 Capital of Texas Hwy., North  
Suite 290  
Austin, TX 78759  
Tel: (512) 346-3855  
Fax: (512) 338-7278

**Dallas** *See Richardson*

Hewlett-Packard Co. (2405)  
5700 Cromo Drive, Suite 100  
El Paso, TX 79912  
Tel: (915) 833-4400  
Fax: (915) 833-4444

Hewlett-Packard Co. (3187)  
2000 West Loop South  
Houston, TX 77027  
Tel: (713) 439-5300  
Fax: (713) 439-5495

Hewlett-Packard Co. (3185)  
930 E. Campbell Road  
Richardson, TX 75081  
Tel: (214) 231-6101  
Fax: (214) 699-4337

Hewlett-Packard Co. (3188)  
14100 San Pedro Avenue, Suite 100  
San Antonio, TX 78232  
Tel: (512) 494-9336  
Fax: (512) 491-1299

**Utah**

Hewlett-Packard Co. (2412)  
3530 West 2100 South  
Salt Lake City, UT 84119  
Tel: (801) 974-1700  
Fax: (801) 974-1780

**Virginia**

Hewlett-Packard Co. (3113)  
4401 Waterfront Drive, Suite 150  
Glen Allen, VA 23060  
Tel: (804) 747-7750  
Fax: (804) 965-9297

**Washington**

Hewlett-Packard Co. (2410)  
15815 S.E. 37th Street  
Bellevue, WA 98006  
Tel: (206) 643-4000  
Fax: (206) 643-8748

**Wisconsin**

Hewlett-Packard Co. (2615)  
275 N. Corporate Drive  
Brookfield, WI 53045  
Tel: (414) 792-8800  
Fax: (414) 792-0218

**Uruguay**

Conatel S.A.  
Ejido 1690  
Montevideo  
Tel: (598) 2-920314  
Fax: (598) 2-920660

# HEWLETT-PACKARD SOFTWARE LICENSE AGREEMENT



## IMPORTANT

Please carefully read this license agreement before opening the media envelope. Rights to use the software are offered only on the condition that the customer agrees to all terms and conditions of the license agreement. Opening the media envelope indicates your acceptance of these terms and conditions. If you do not agree to the license agreement, you may return the unopened package for a full refund.

## LICENSE AGREEMENT

In return for payment of the application fee, Hewlett-Packard grants customer a license to the software subject to the following:

### USE

- Customer may use the software on any one instrument or computer, but may not reverse assemble or decompile the software.

### COPIES AND ADAPTATIONS

- Customer may make copies or adaptations of the software for archival purposes, or when copying or adaptation is an essential step in the use of the software with the instrument/computer so long as the copies and adaptations are used in no other manner.
- Customer has no other rights to copy unless it acquires an appropriate license to reproduce, which is available from Hewlett-Packard for some software.
- Customer agrees that no warranty, installation or training is provided by Hewlett-Packard for any copies or adaptations made by customer unless otherwise agreed by Hewlett-Packard.
- All copies and adaptations of the software must bear the copyright notice(s) contained in or on the original.

### OWNERSHIP

- Customer agrees that it does not have any title or ownership in the software other than ownership of the physical media.
- Customer acknowledges and agrees that the software is copyrighted and protected under the copyright laws.
- Customer acknowledges and agrees that the software may have been developed by a third party software supplier named in the copyright notice(s) included with the software, who shall be authorized to hold Customer responsible for any copyright infringement or violation of this Software License Agreement.

### TRANSFER OF RIGHTS IN SOFTWARE

- Customer may transfer rights in the software to a third party only as part of the transfer of all rights and only if Customer obtains the prior agreement of the third party to be bound by the terms of this License Agreement.
- Upon such a transfer, Customer agrees that its rights in the software are terminated and that it will either destroy its copies and adaptations or deliver them to the third party.
- Transfer to a U.S. government department or agency or to a prime or lower tier contractor in connection with a U.S. government contract shall be made only upon their prior written agreement to terms required by Hewlett-Packard.

### SUBLICENSING AND DISTRIBUTION

- Customer may not sublicense the software or distribute copies or adaptations of the software to the public in physical media or by telecommunication without the prior written consent of Hewlett-Packard.

### TERMINATION

- Hewlett-Packard may terminate this software license for failure to comply with any of these terms provided Hewlett-Packard has requested Customer to cure the failure and Customer has failed to do so within thirty (30) days of such notice.

### UPDATES AND UPGRADES

- Customer agrees that the software does not include future updates and upgrades which may be available from Hewlett-Packard under a separate agreement.

### EXPORT CLAUSE

- Customer agrees not to export or re-export the software or any copy or adaptation in violation of the U.S. Export Administration regulations or other applicable regulation.

Copyright © 1995  
Hewlett-Packard  
Printed in USA 11/95

Reorder Part No.  
Manual Part No.  
5964-0567



5964-0567